 


- *TV Stand* —————

MDS02UD

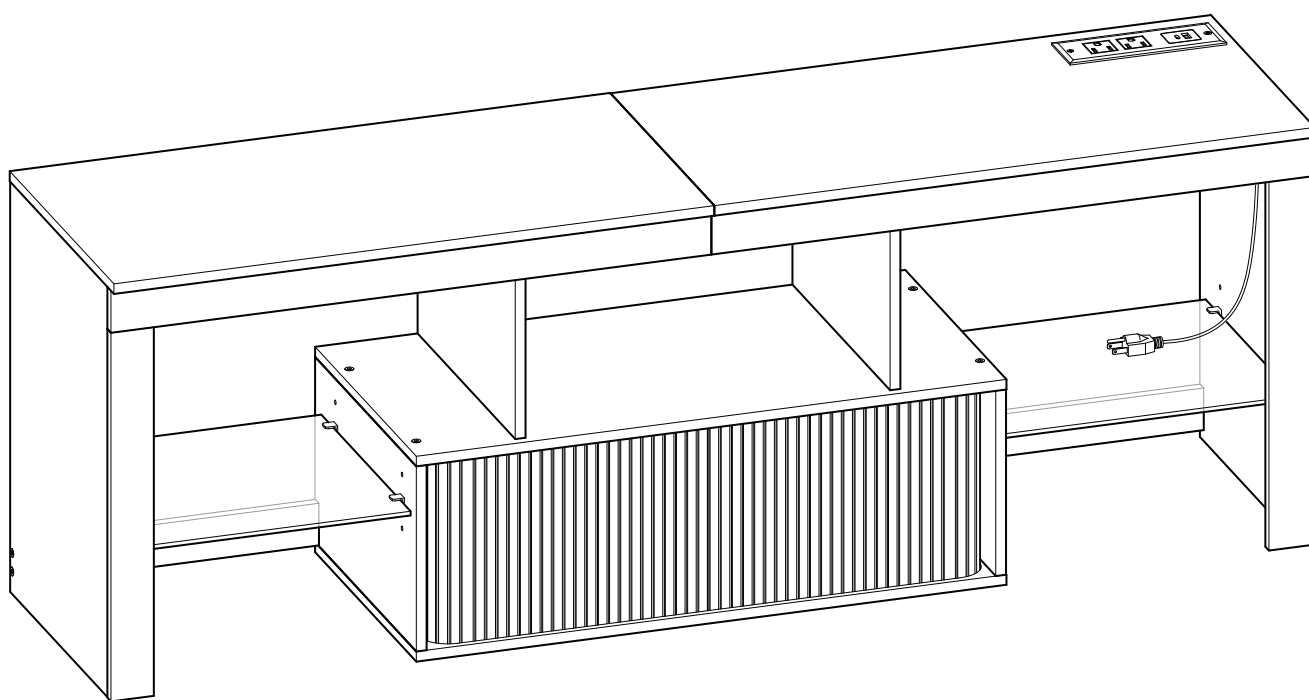

ENGLISH

Basic Safety Warnings

- 1. Indoor Use Only:** Personal injury and/or product damage may occur if used outside its intended purpose or if modified/alterd from its original design. The product must be assembled and used in accordance with the instructions.
- 2. Moving Heavy Items:** If the product does not have wheels at the bottom, do not drag it directly. It is recommended to lift the furniture or use sliding pads to move it. Dragging may loosen/damage the product, cause personal injury or floor damage.
- 3. Placement Requirements:** Place the product evenly on a flat floor to avoid uneven stress and breakage.
- 4. Child Safety:**
 - Children are prohibited from climbing or standing on the furniture to prevent accidental tipping and personal injury.
 - Children must not assemble the product. During assembly, keep small parts out of their reach to prevent fatal risks from swallowing or inhaling.
 - Keep packaging materials (such as films, plastic bags, and foam, etc.) out of reach of children to prevent any potential dangers, such as suffocation.

Installation and Usage Tips

- 1. Proper Assembly:** Follow the steps in the instruction manual for installation, do not skip any steps or alter the assembly sequence.
- 2. Avoid Repeated Disassembly:** Do not disassemble or reassemble the product frequently to prevent damage to the parts.
- 3. Anti-Tip Device:** If the product is equipped with an anti-tip device, ensure it is installed to prevent accidental tipping that may cause injury.
- 4. Regular Inspection:** If you find any abnormal conditions during use (loose screws, frame shaking, etc.), stop using it immediately and retighten the screws to ensure structural integrity.
- 5. Proper Placement of Items:** Distribute weight evenly across surfaces (e.g., tabletops) to avoid deformation. Avoid prolonged concentrated pressure on single points.
- 6. Lubrication and Maintenance:** For furniture with slides or hinges (such as drawers, cabinet doors), lubricate regularly for smooth operation.
- 7. Pet Precautions:** If you have pets at home, prevent them from scratching or biting the furniture to avoid surface damage.

Usage Environment

- 1. Avoid Damp Environments:** Avoid contact with water or prolonged exposure to a damp environment, as long-term exposure to high humidity can easily cause metal parts to rust and wood to swell and deform. Place the furniture in a well-ventilated and relatively dry area.
- 2. Avoid Direct Sunlight:** Prolonged exposure to sunlight can cause wood to fade and accelerate aging. Try to place furniture away from direct sunlight or install curtains to mitigate the effects of UV rays.
- 3. Keep Away from Heat Sources:** Do not place hot objects near or directly on the furniture for a long time to prevent the paint surface from fading or causing irreversible damage.
- 4. Electrical Safety:** For products with electronic components, keep them away from water sources and damp environments to prevent electric leakage and short circuits for user safety.


Eco-Friendly Recycling Suggestions

- 1. Furniture Recycling:** When your furniture has reached the end of its service life and is no longer suitable for continued use, consider environmental factors and choose an appropriate method for disposal.
- 2. Battery Recycling:** For products containing batteries, do not discard used batteries casually to avoid environmental and water source pollution.

ATTENTION


Required Tools

Having these tools ready will make your assembly much easier and efficient.

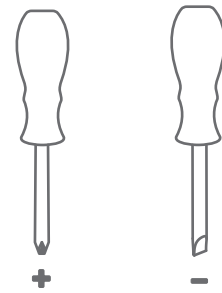


Teamwork

Two or more persons are needed for assembly.

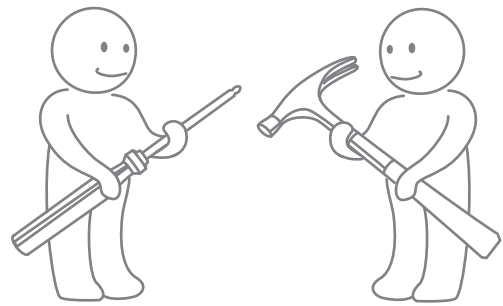



Read

Read the instructions before operating and keep it properly.

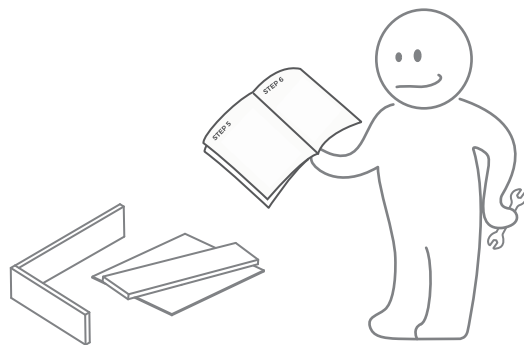


-
- Please check if the parts are intact before starting the assembly.
 - Please feel free to contact us by email if you have any questions or concern. We will reply within 24 hours.


EXPLODED

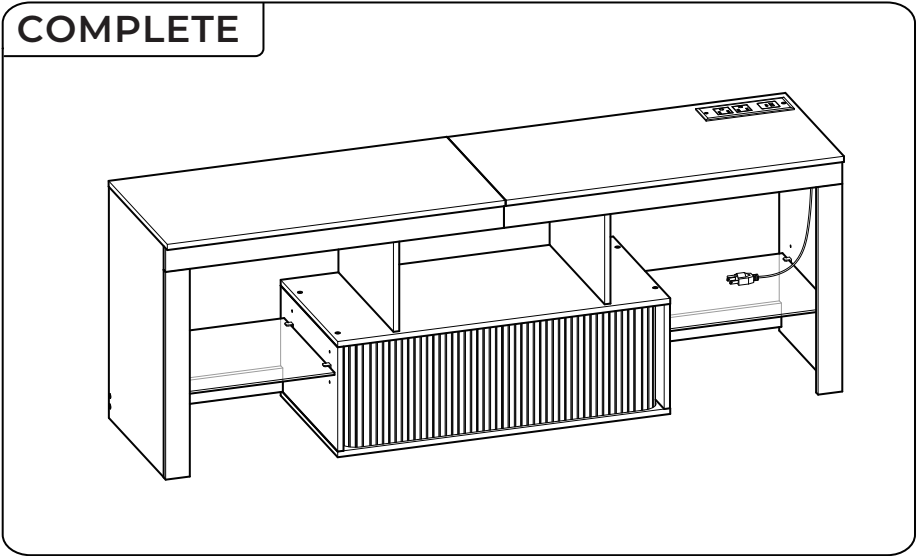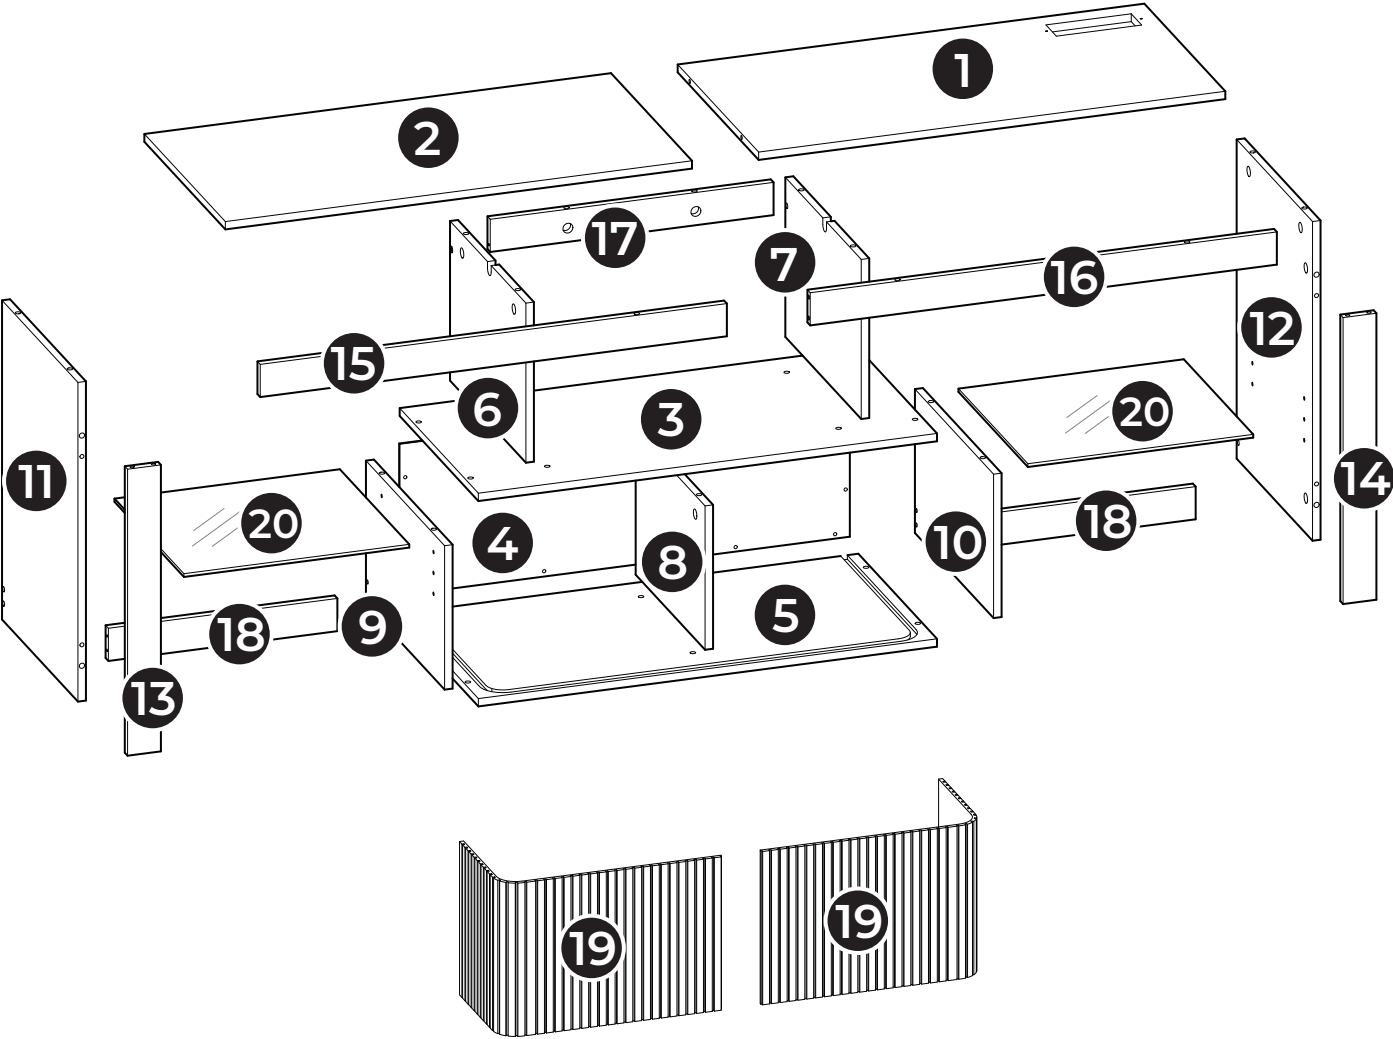


PARTS LIST

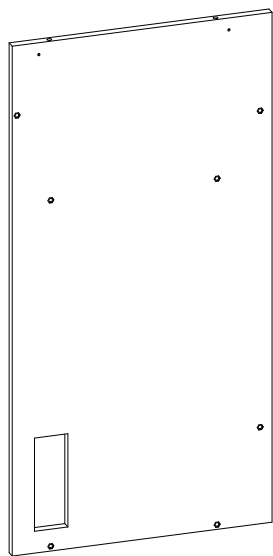


1 x1

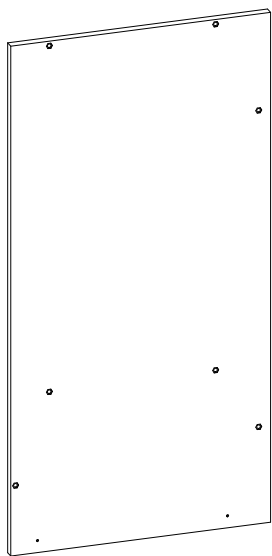 


2 x1

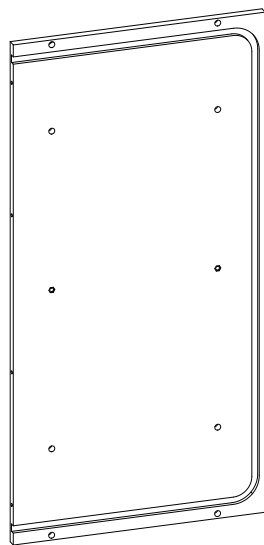 


3 x1

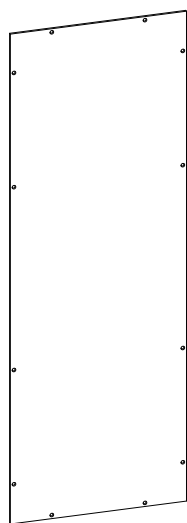 


4 x1

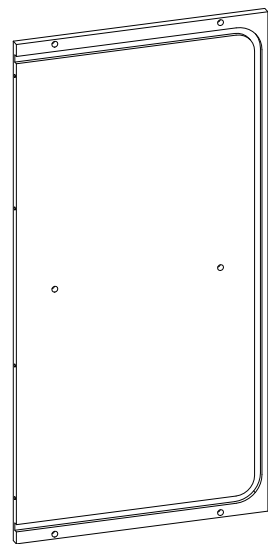 


5 x1

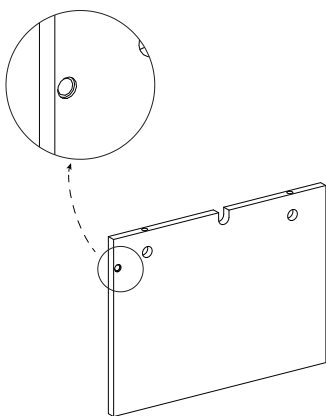 


6 x1

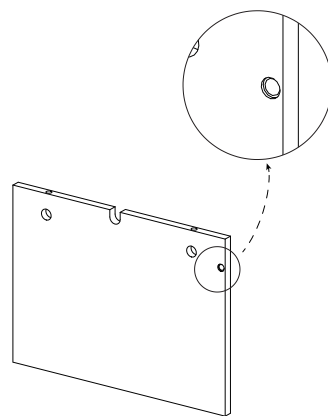 


7 x1

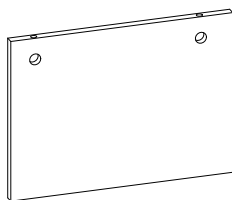 


8 x1

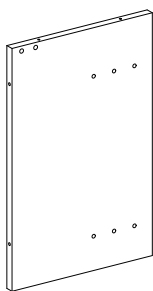 


9 x1

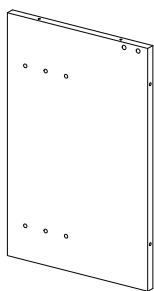 

10 x1

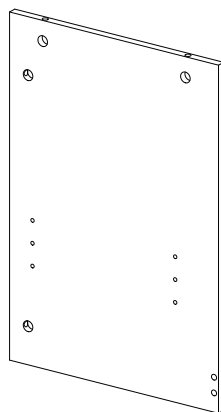 

11 x1

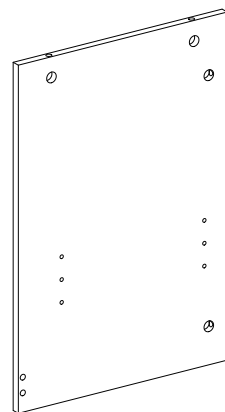 

12 x1

PARTS LIST ---



13 x1



14 x1



15 x1



 
16 x1




17 x1



18 x2

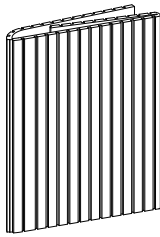


19 x2

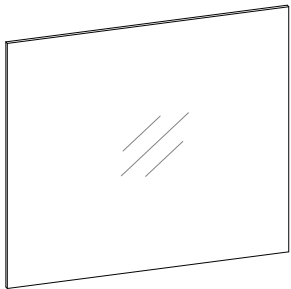 


20 x2

 HARDWARE LIST

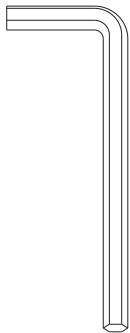

A x1

 

B x24



C1x20



C2x20

C



D x12



M3.5x12mm

 
E x12




F x8




G x5

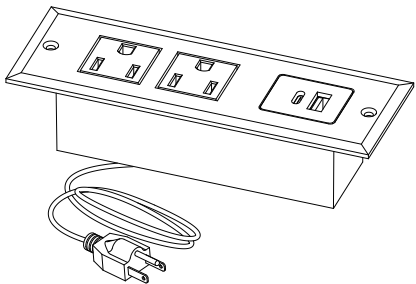

H x1

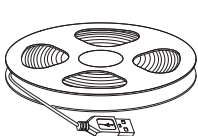 


i1

 

i2

 I



J x12




Furniture Pad




K x8

1. ATTENTION



 
- During assembly, first loosely align all screws with the corresponding pre-drilled holes and then tighten the screws one by one.
- Note: It is recommended to complete the assembly on flat ground or carpet.

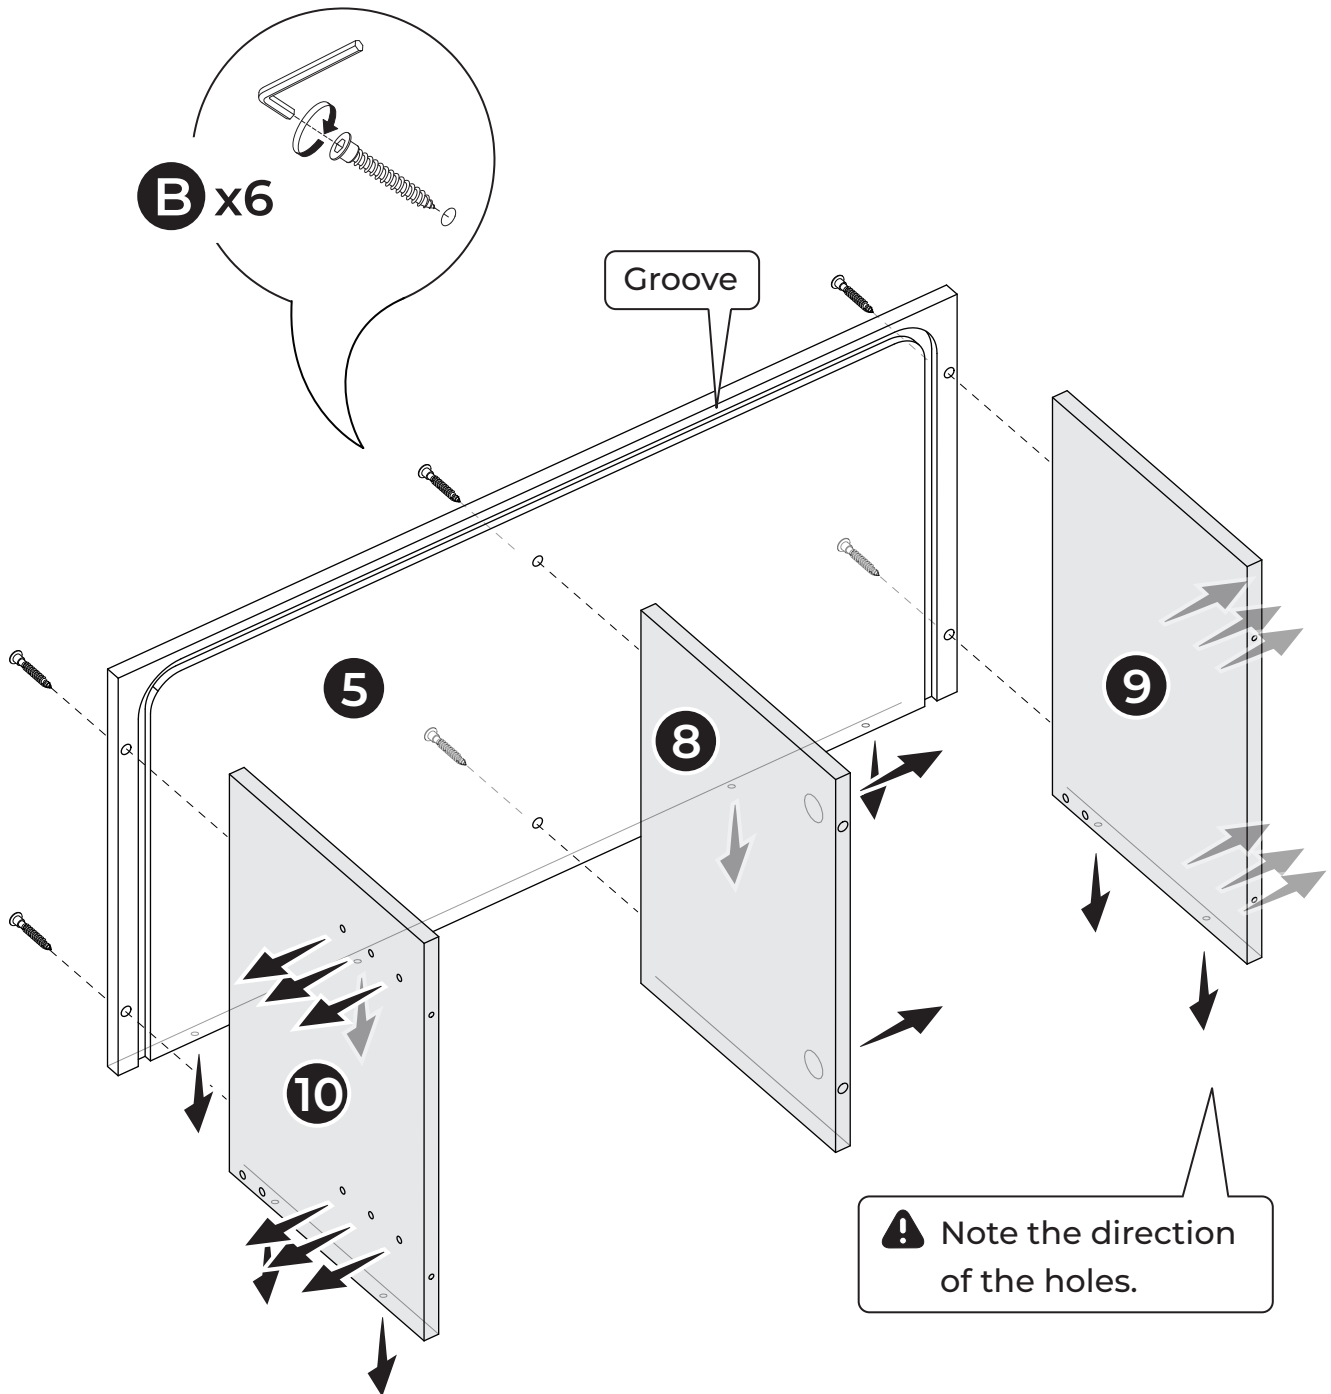

   
2.

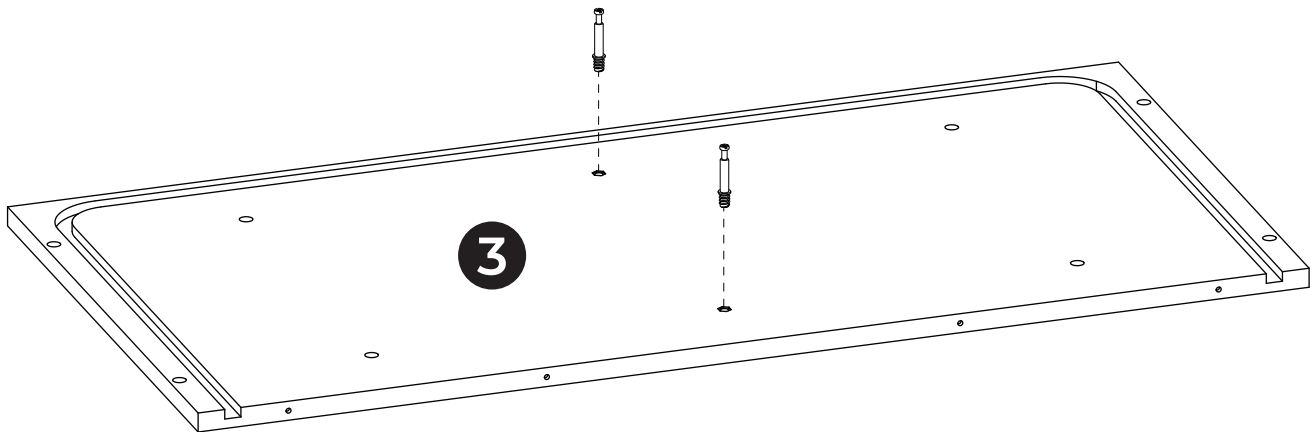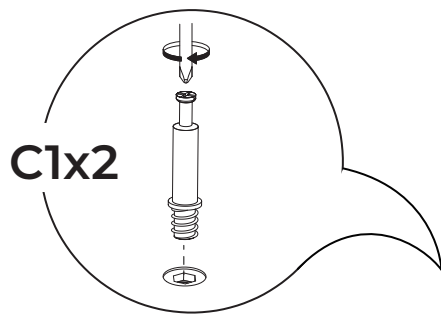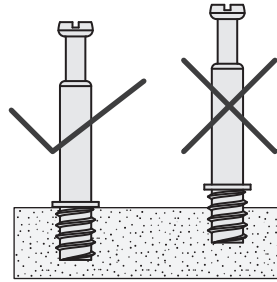

   
3.

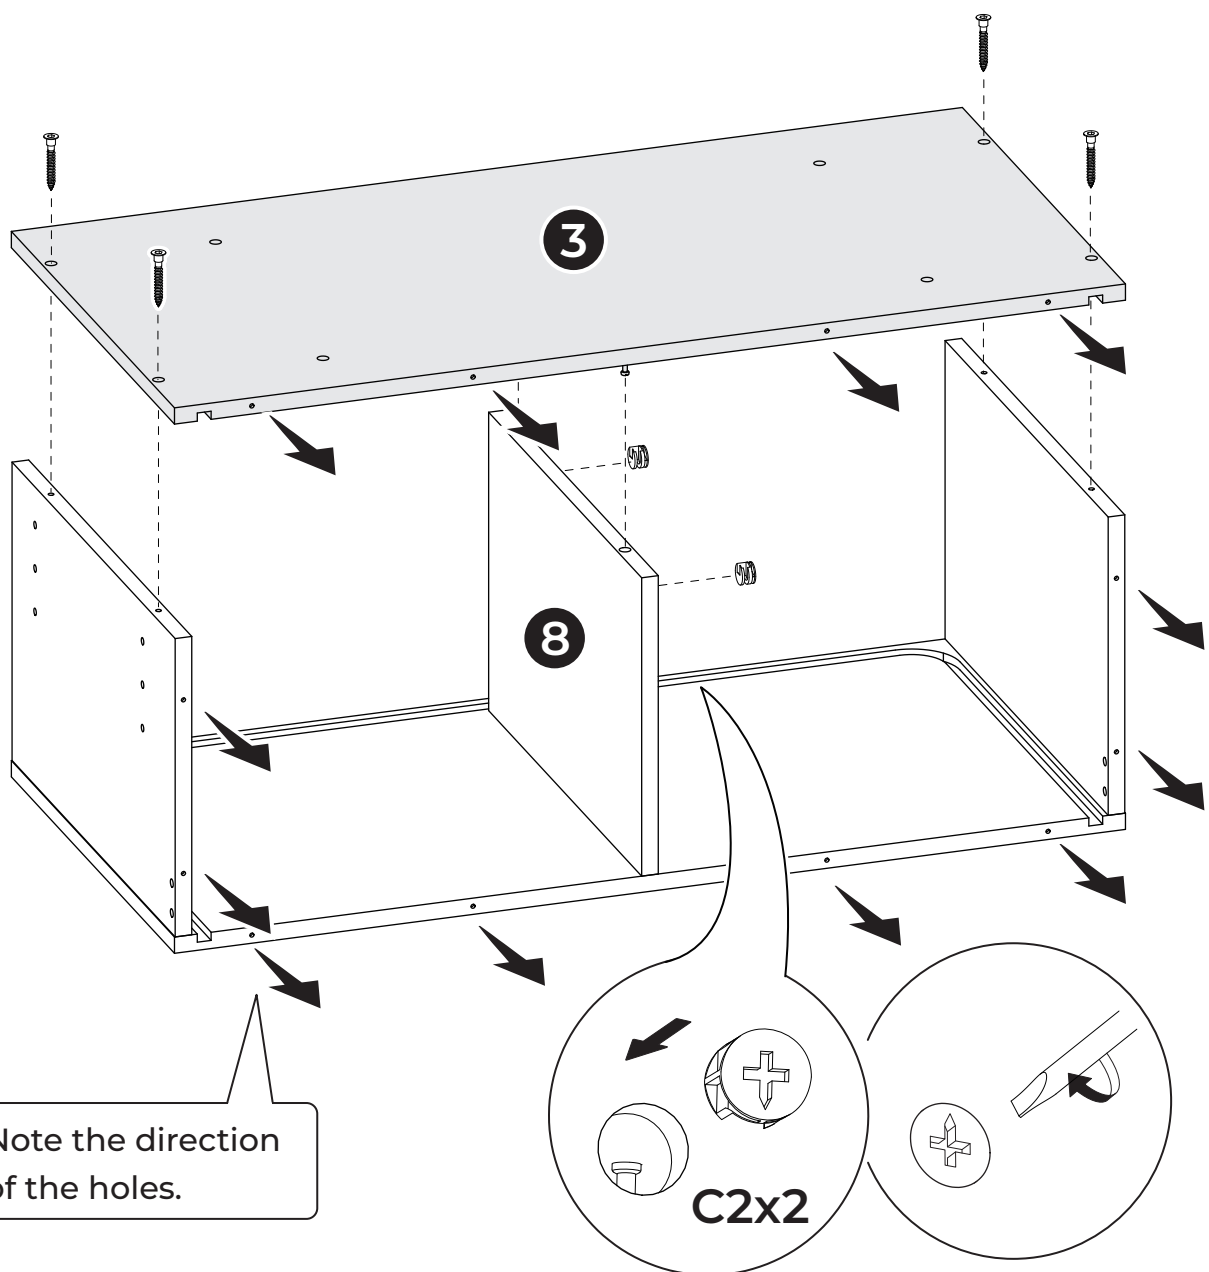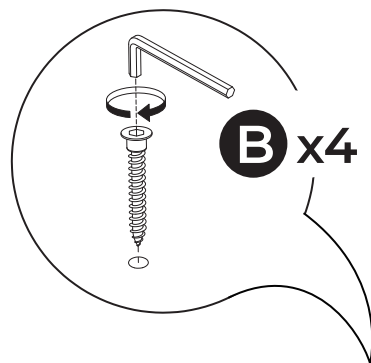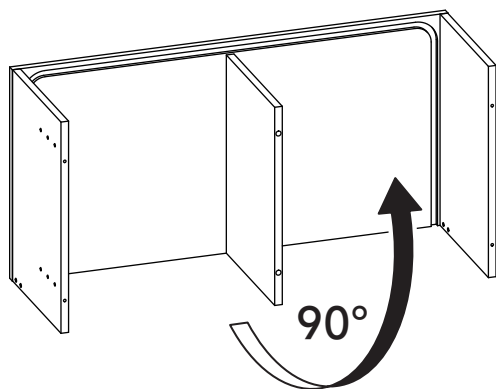

 
4.

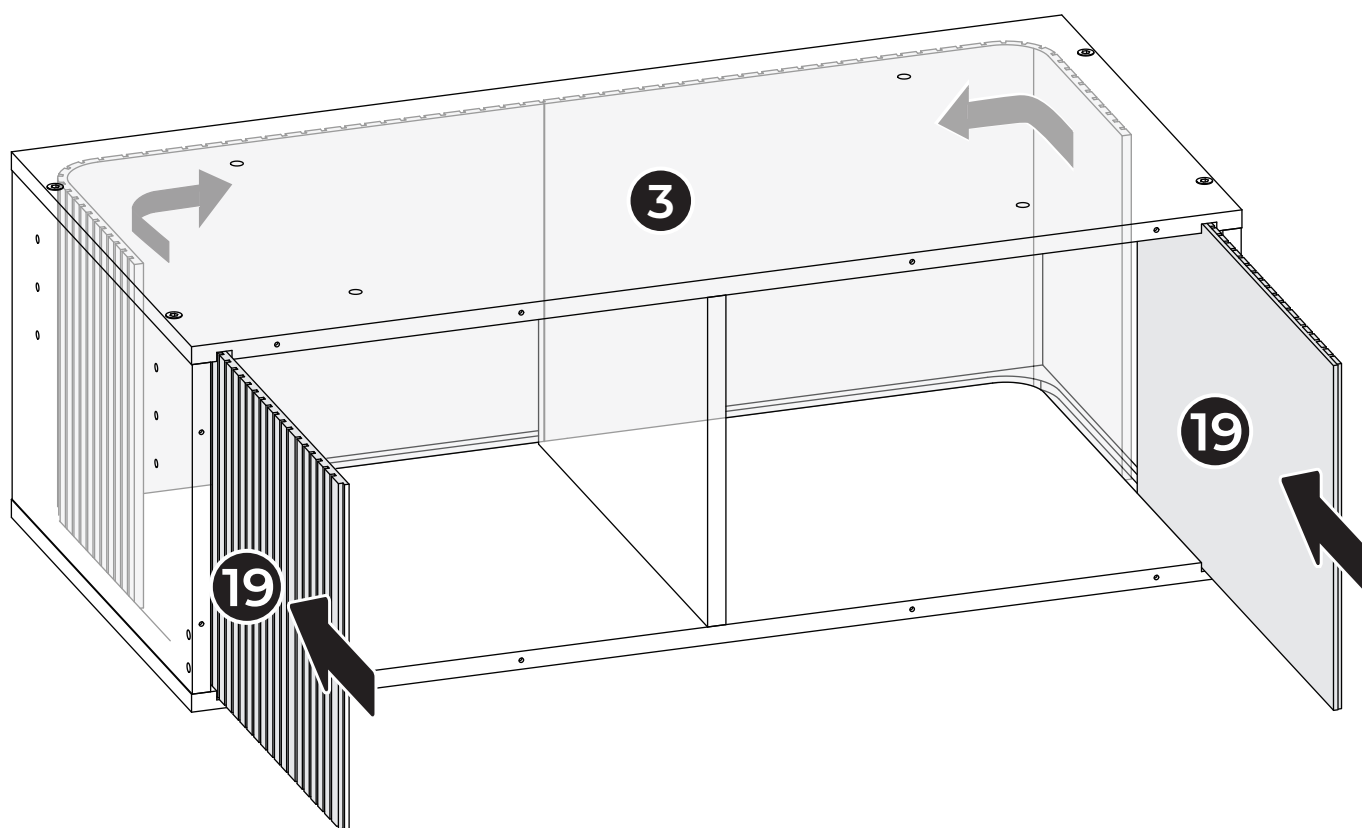


 
5.

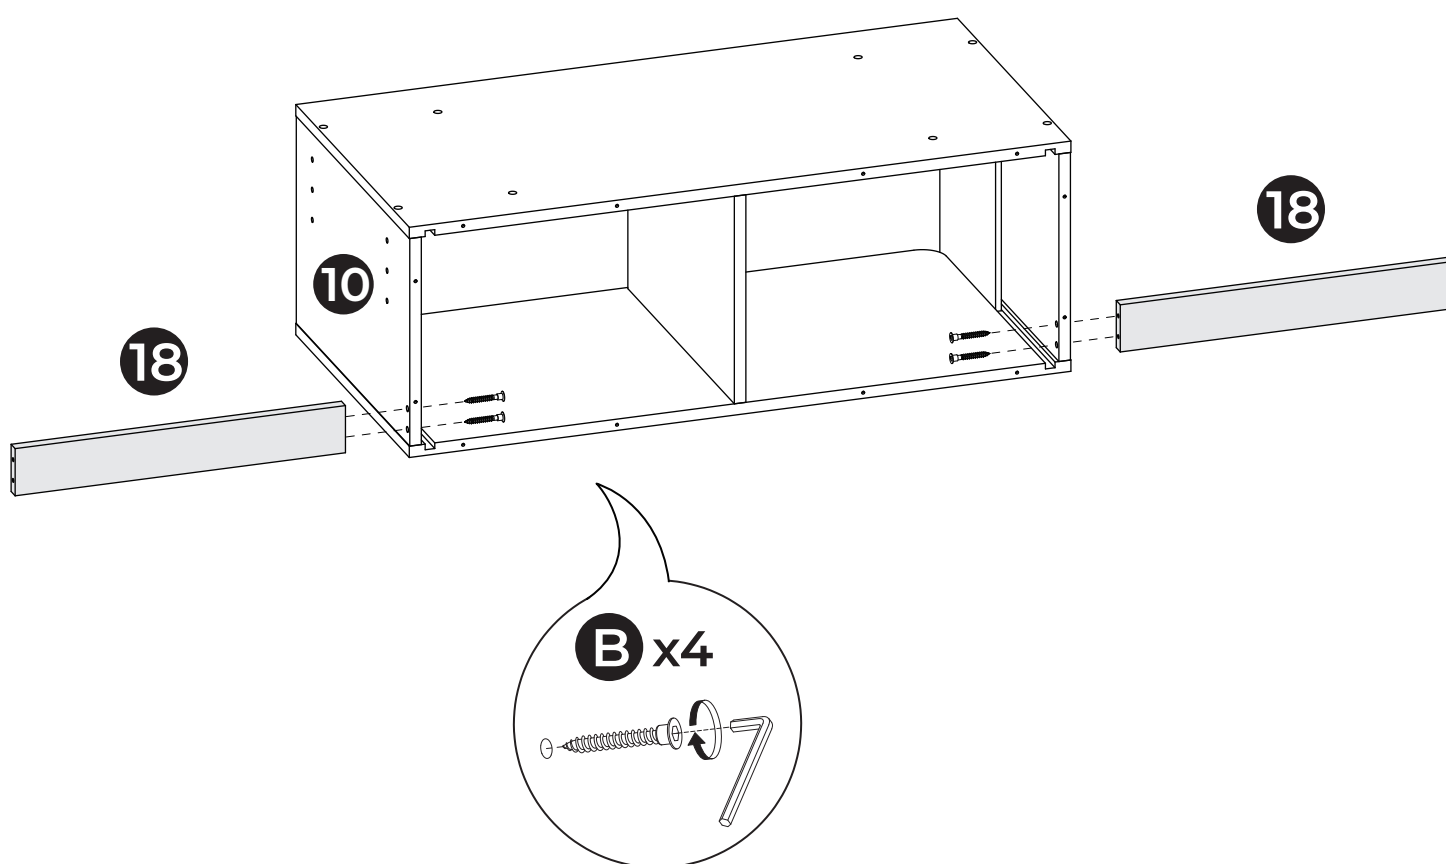

 
6.

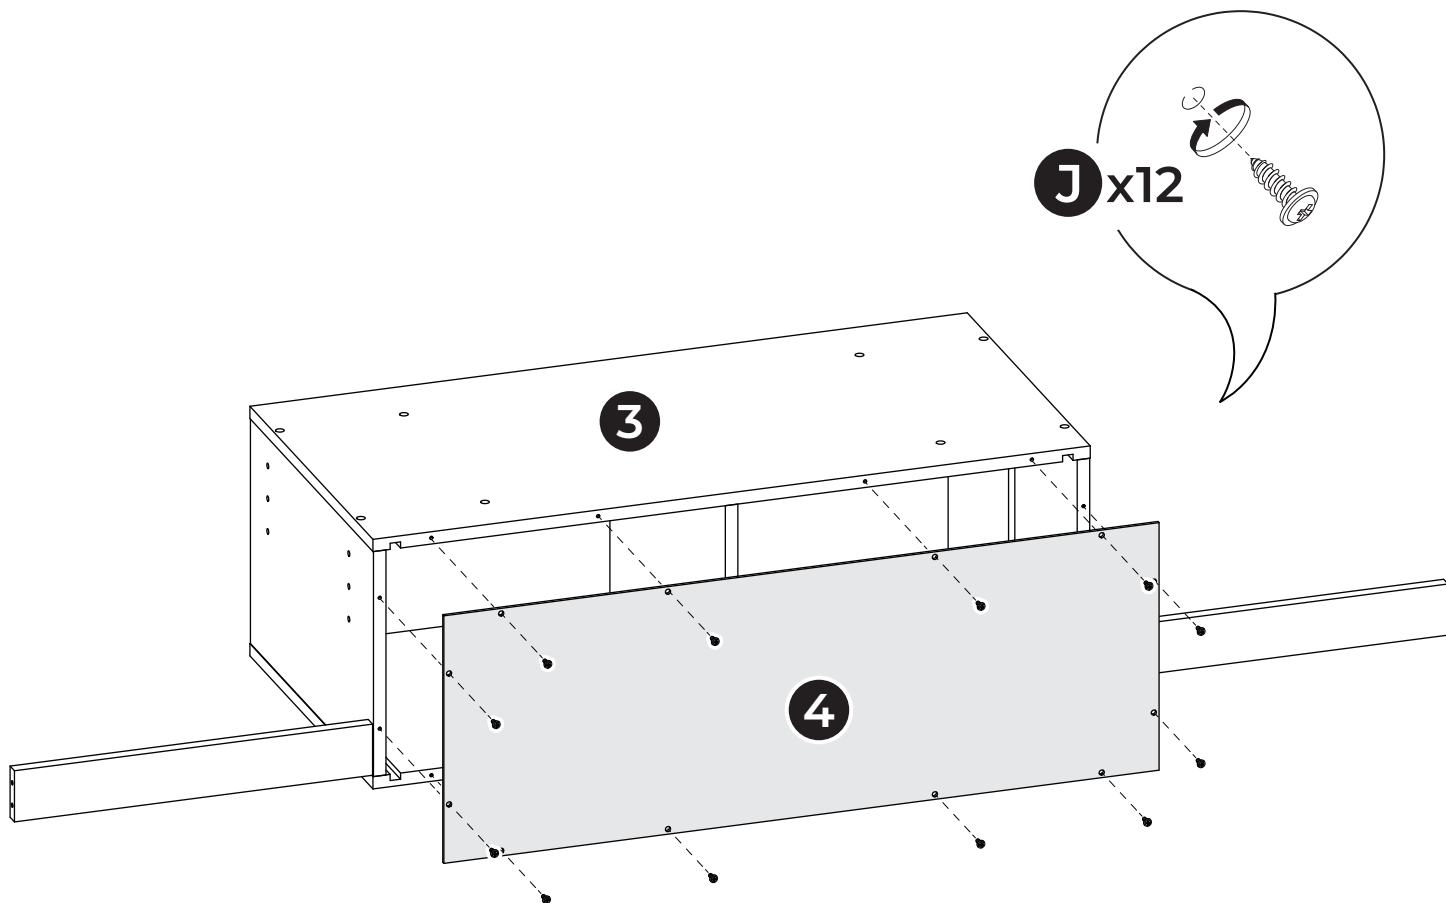


 
 
7.

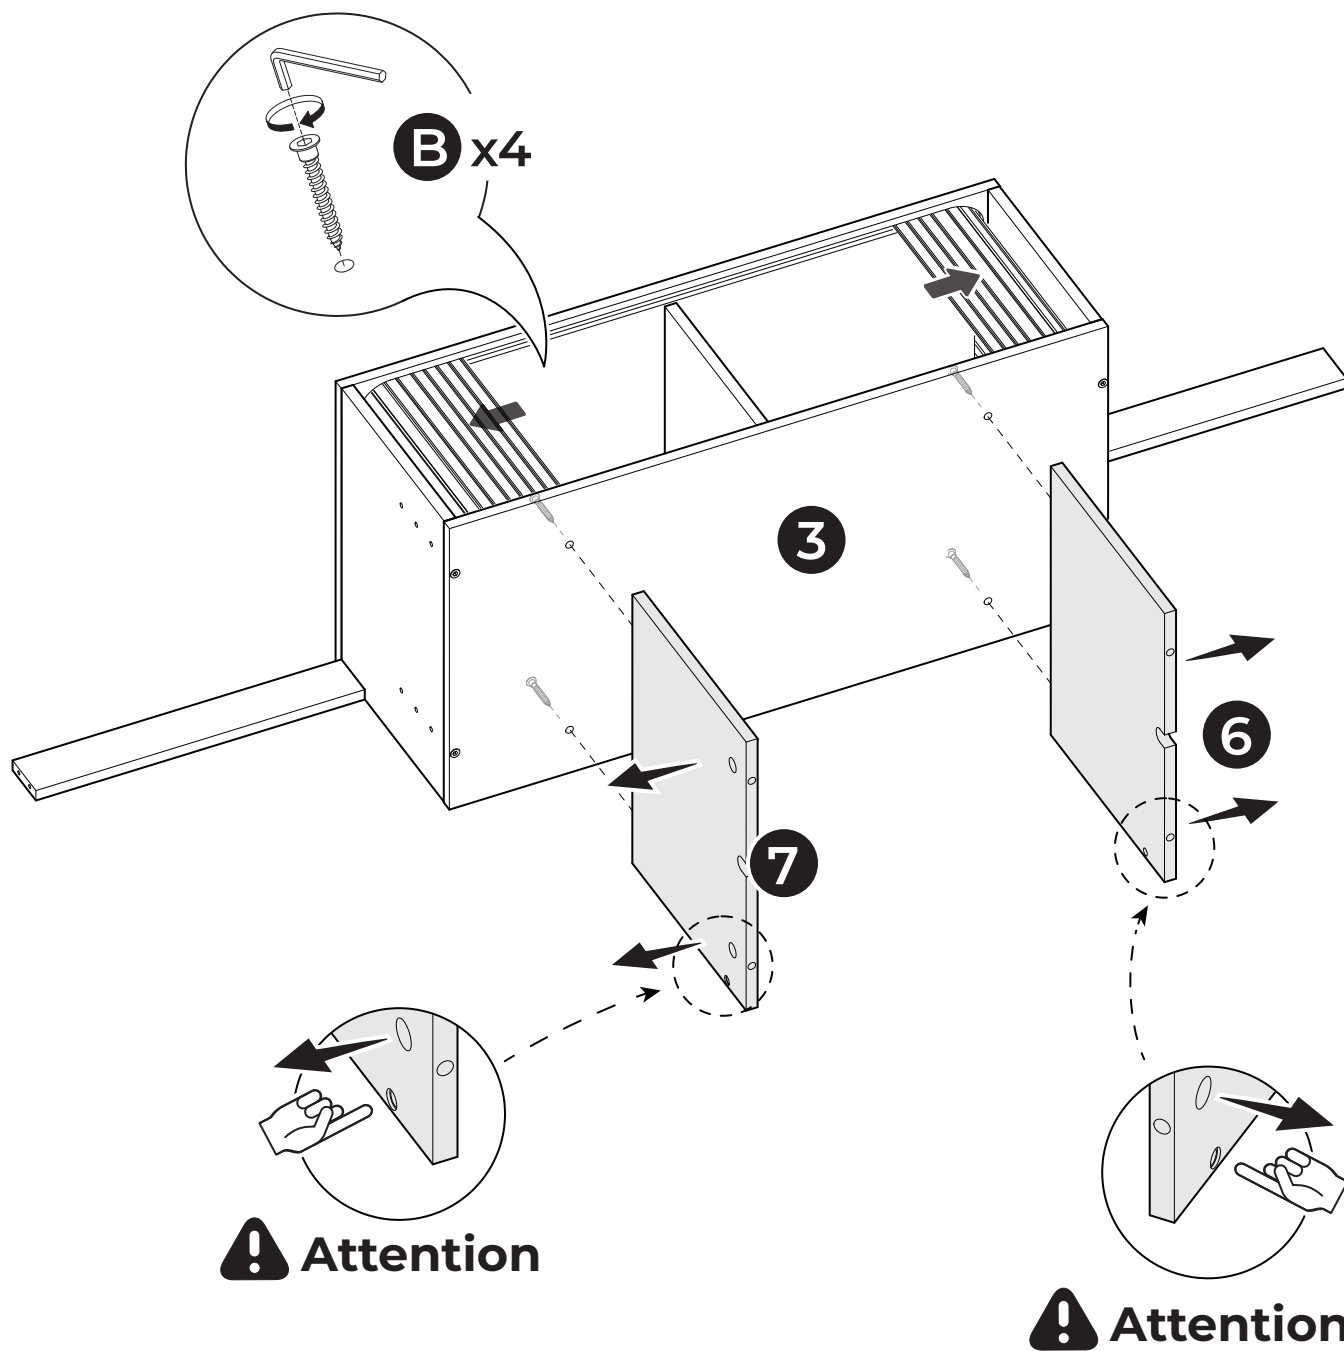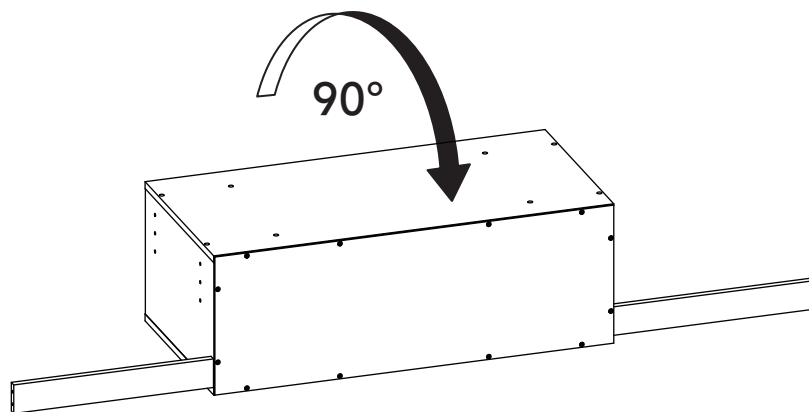

 
8.

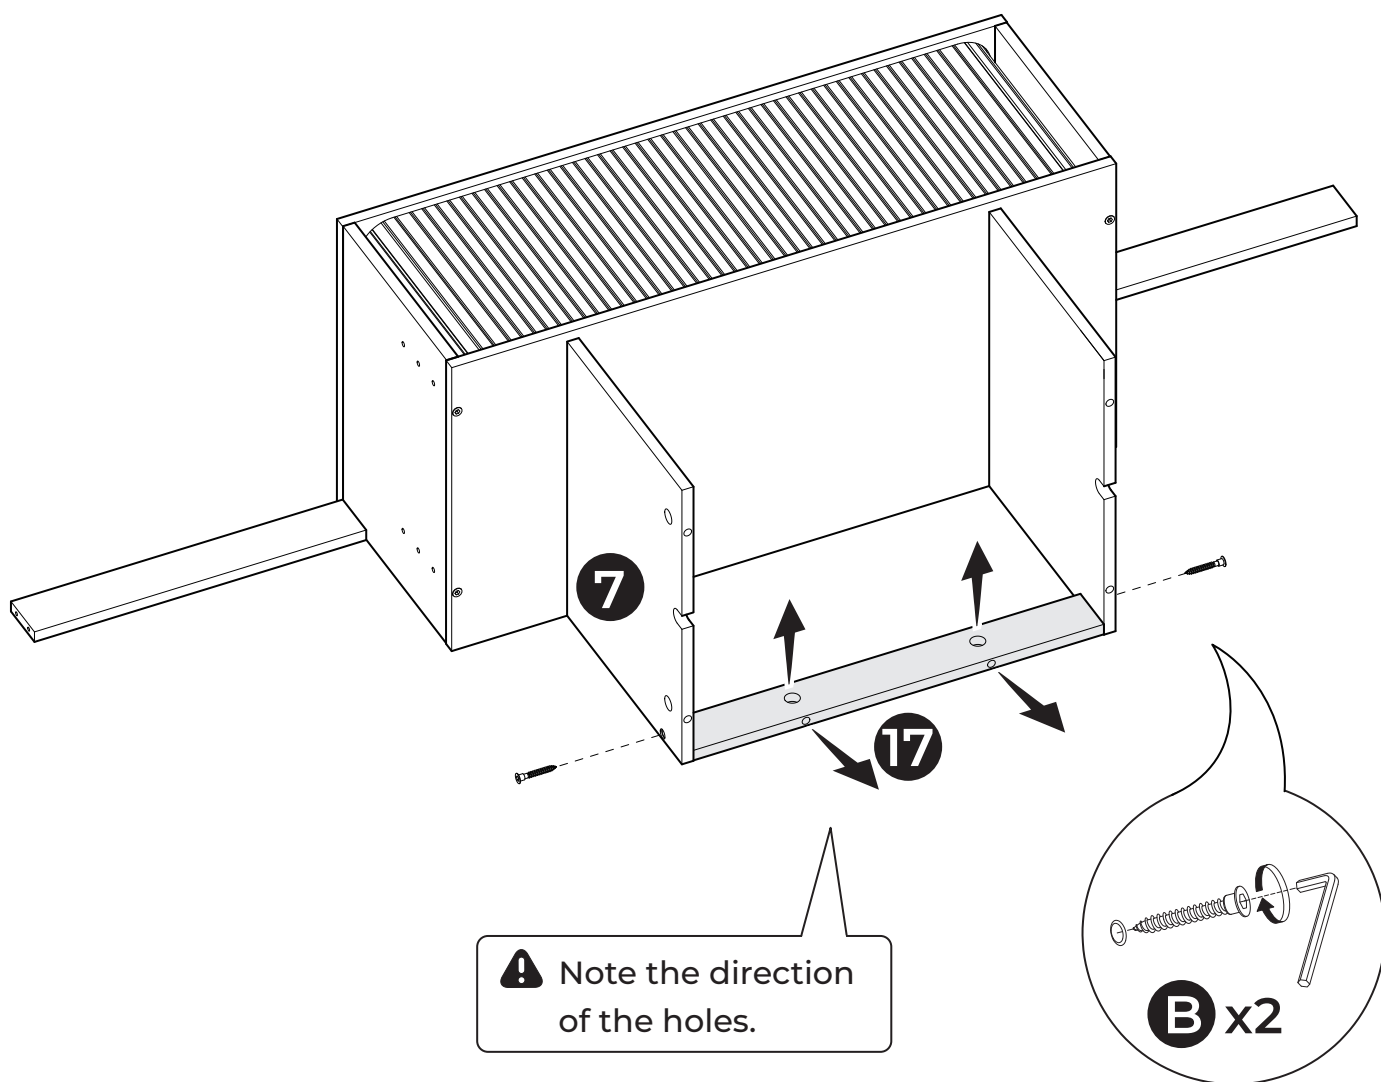

  
 
9.

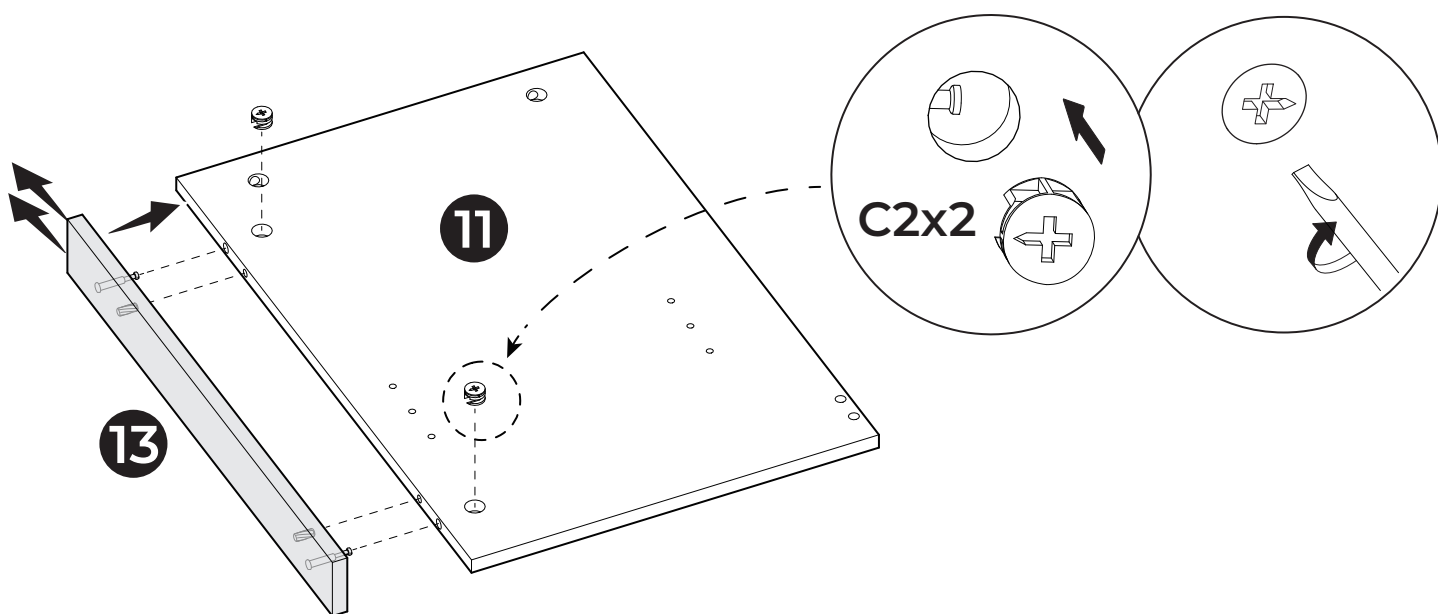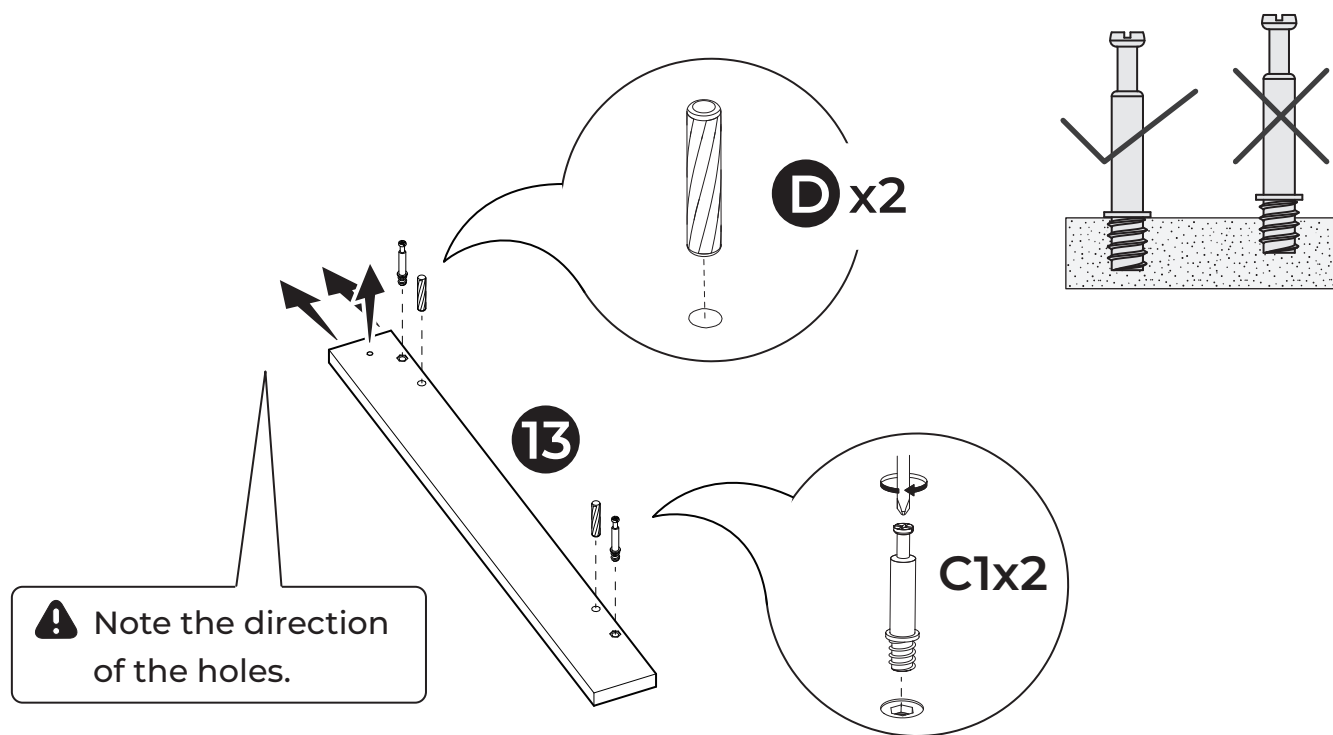



 
10.

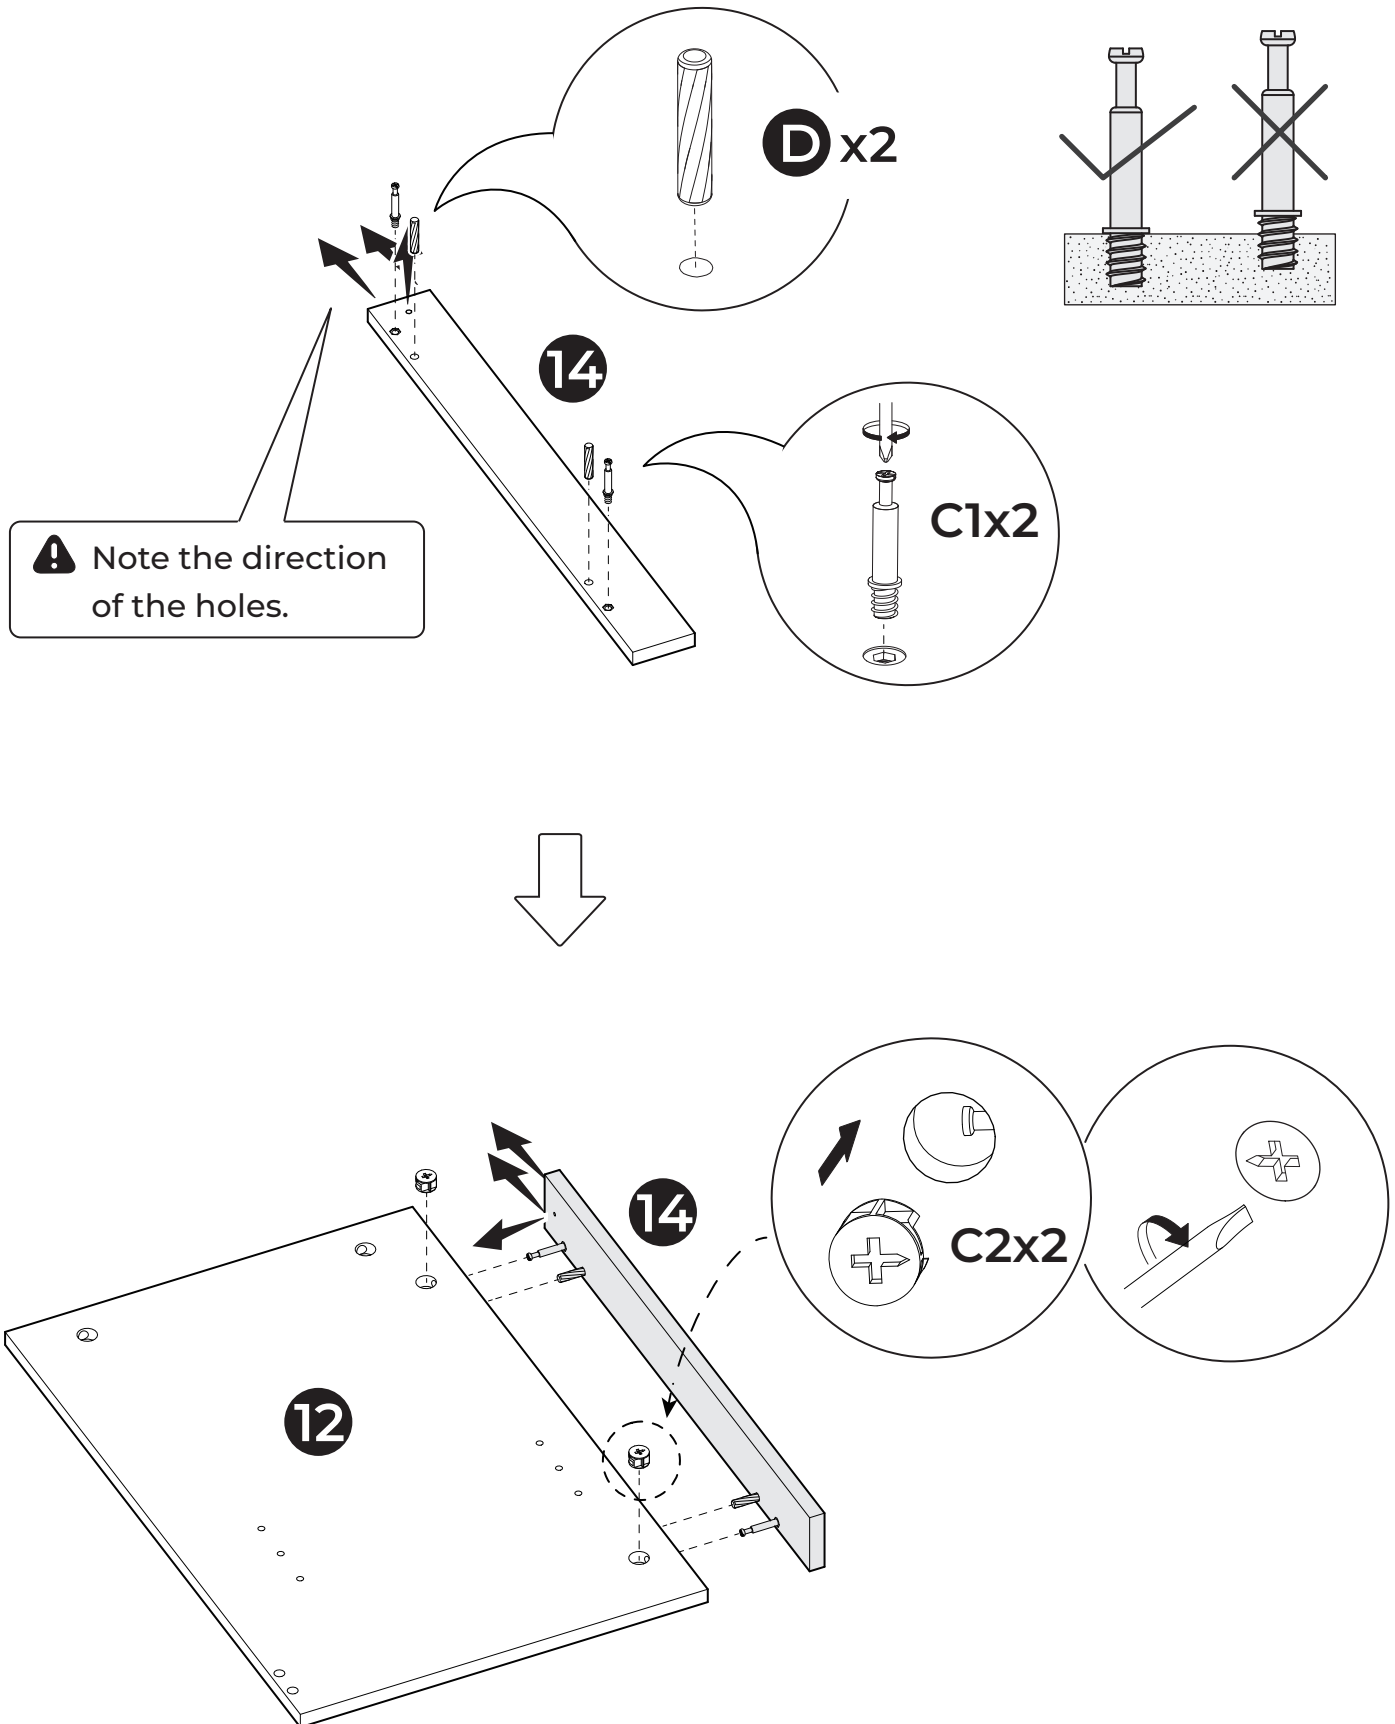

  
11.

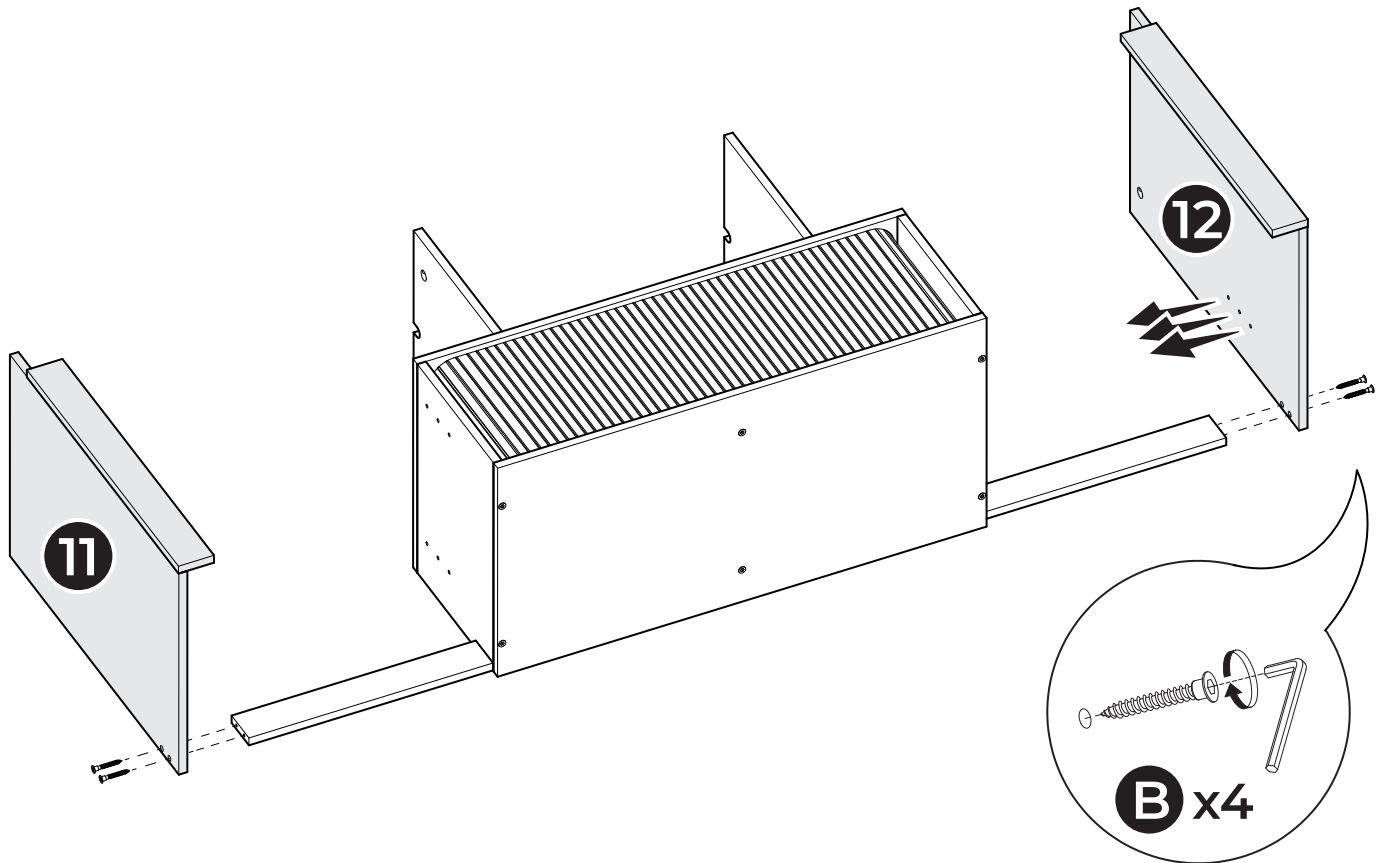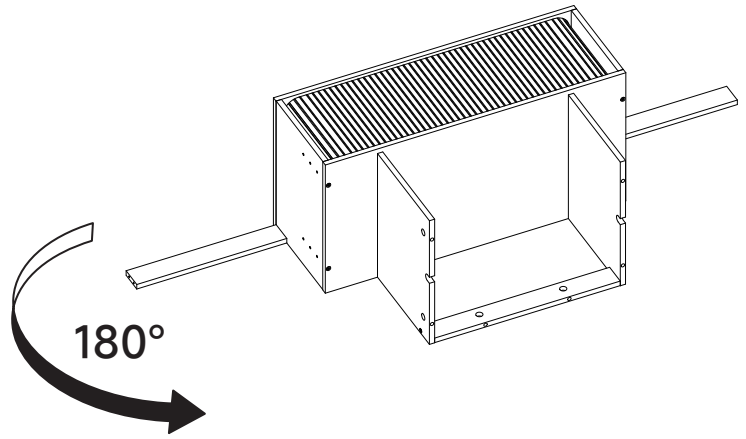

   
12.

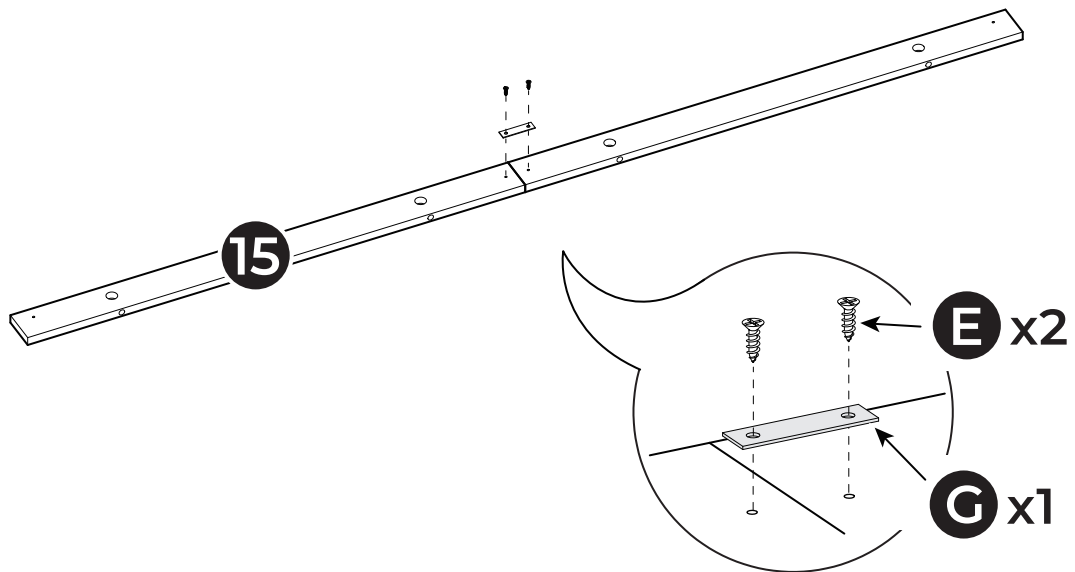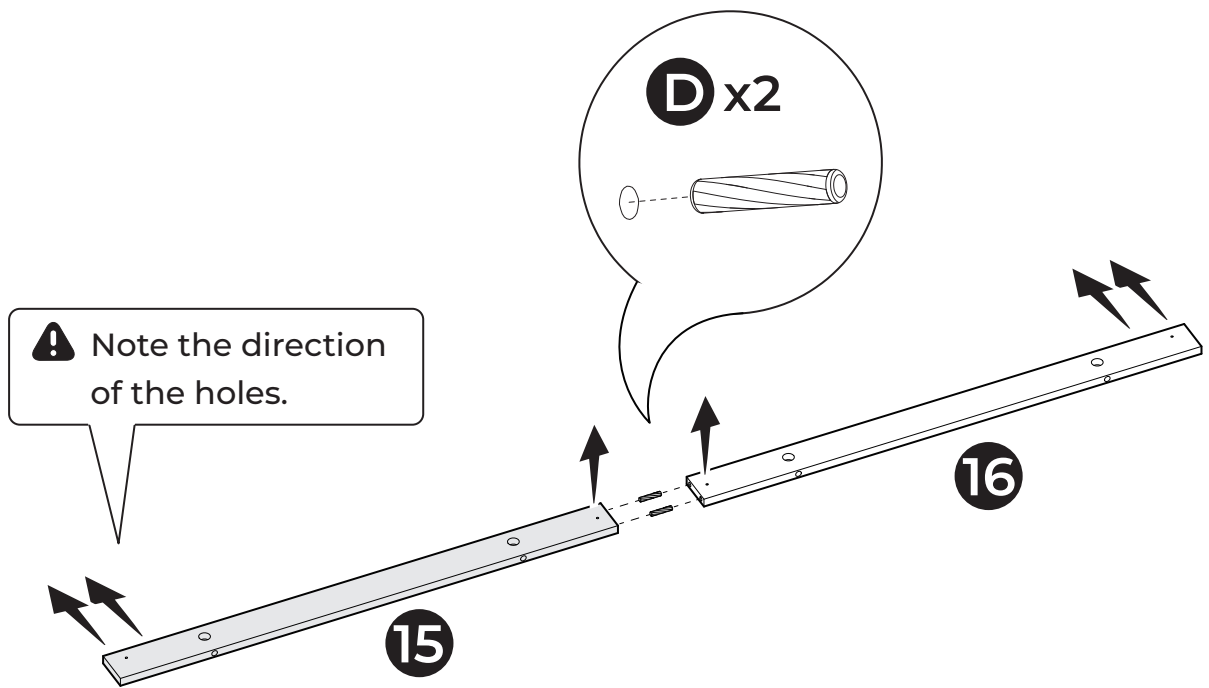

 
13.

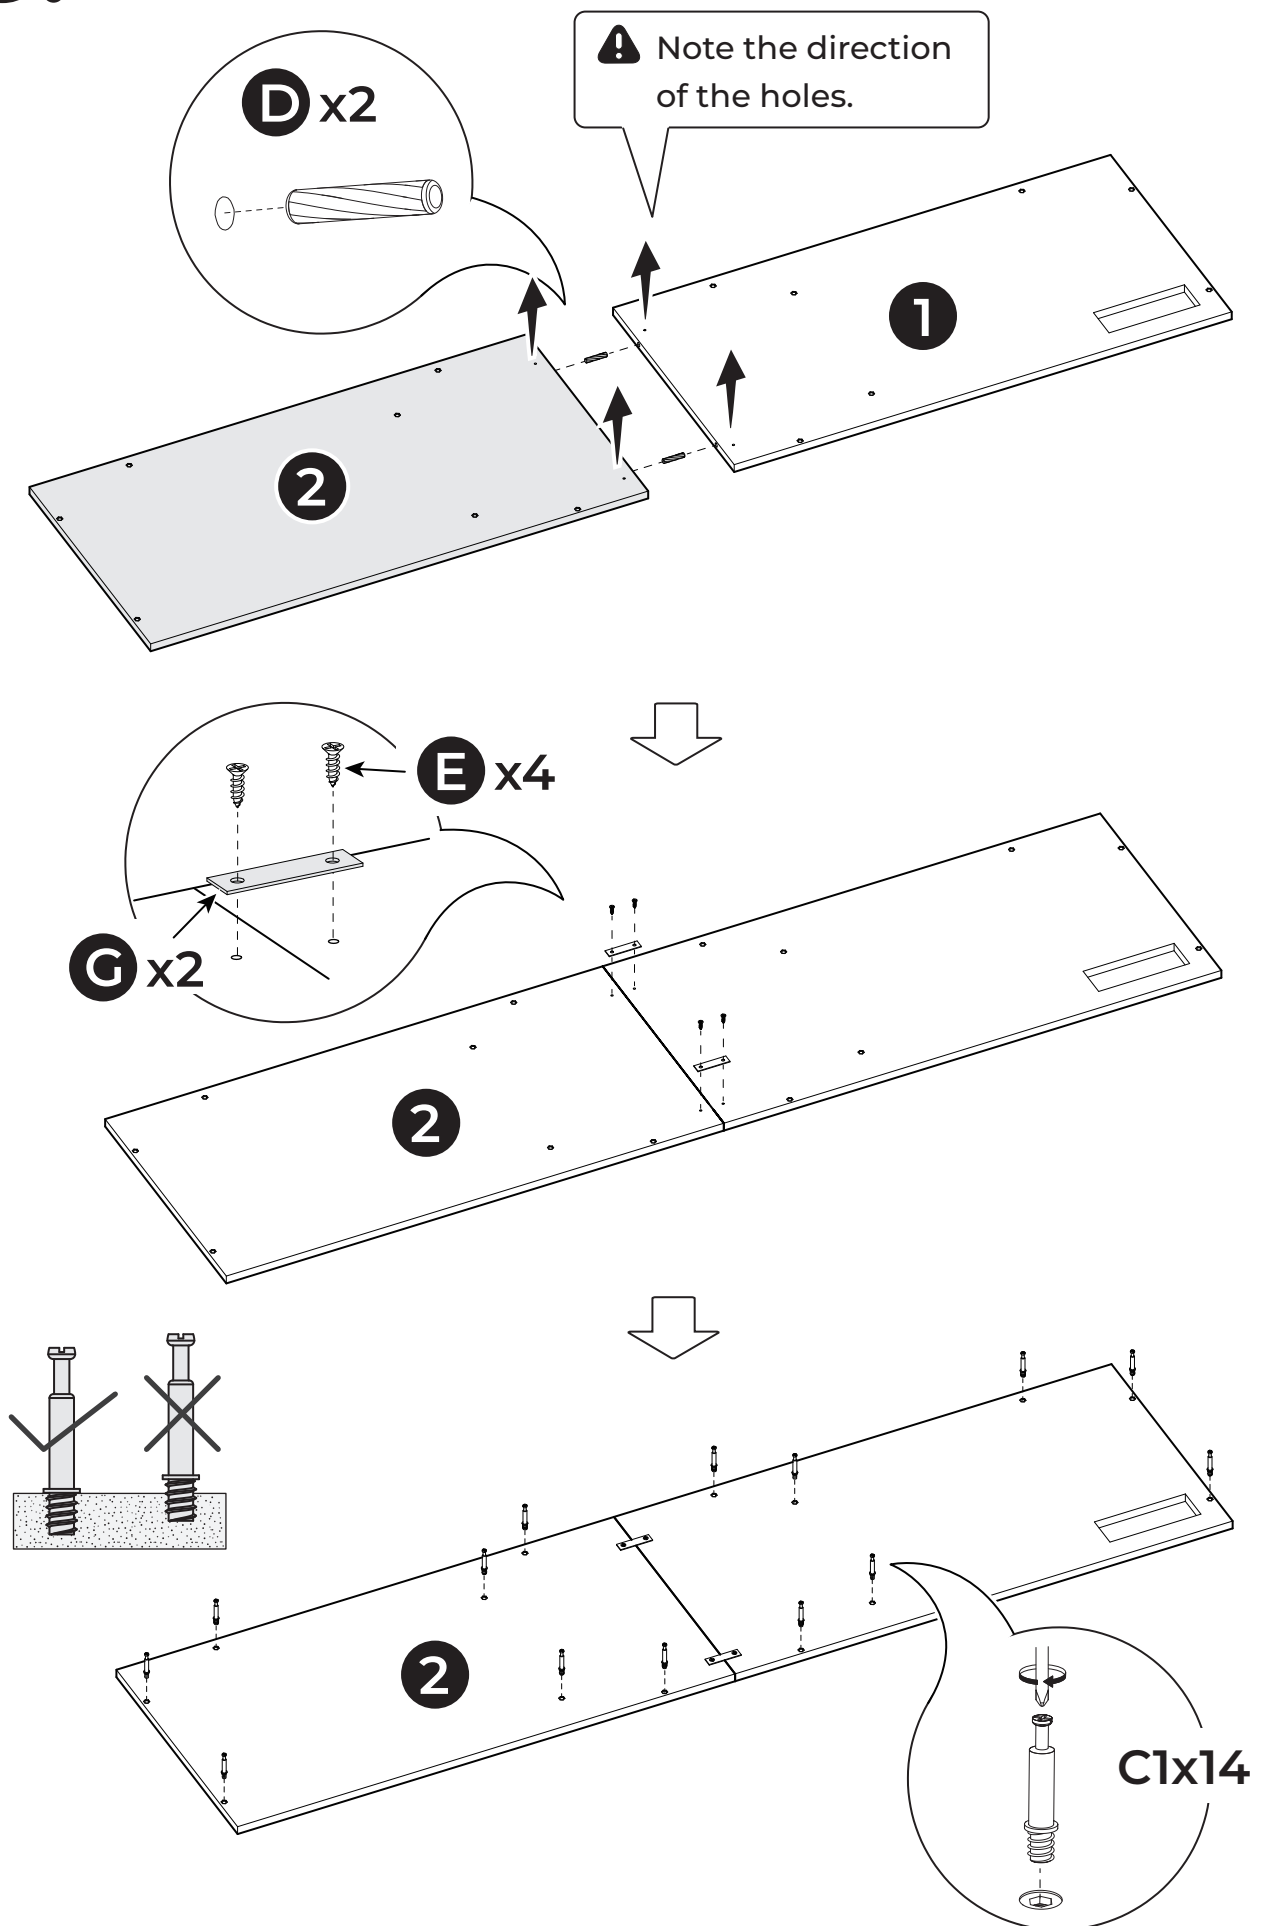



 
14.

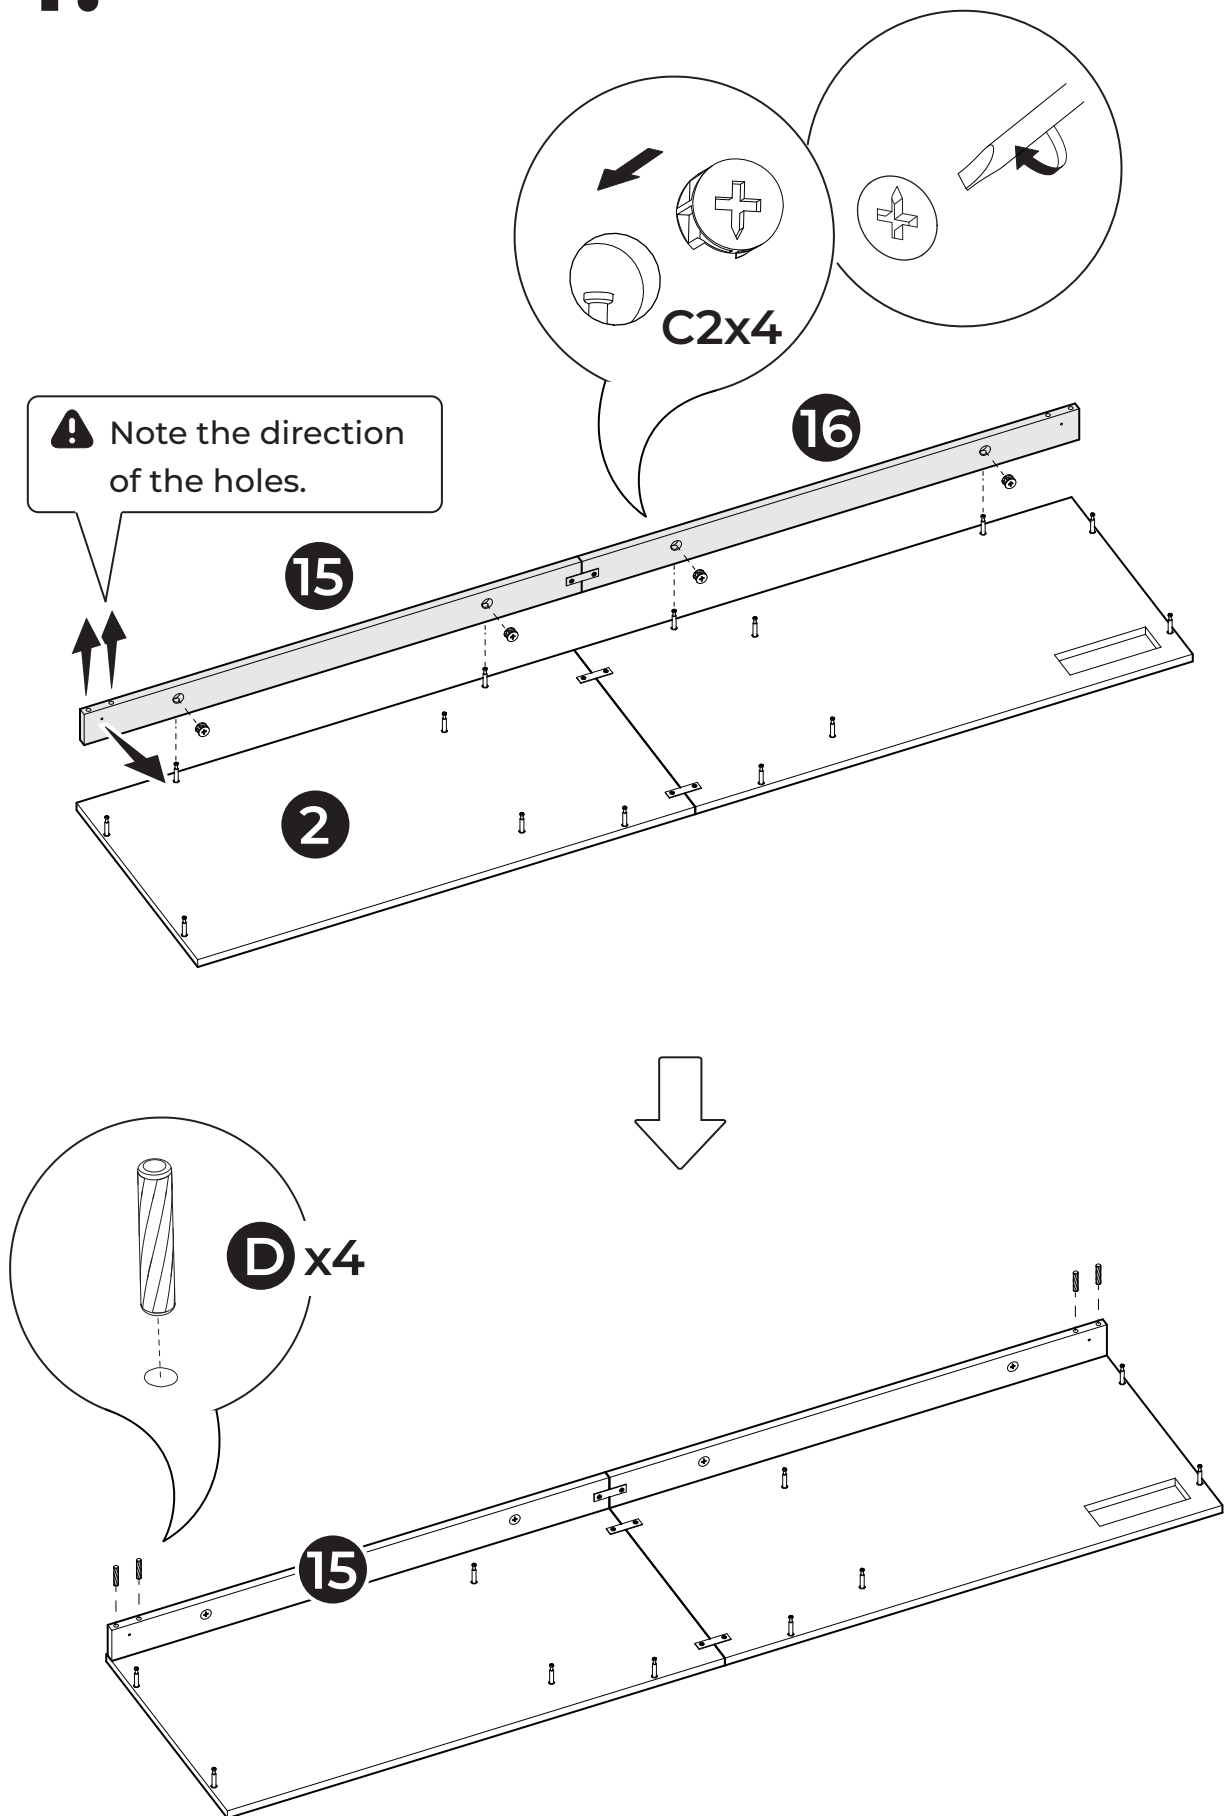



 
15.

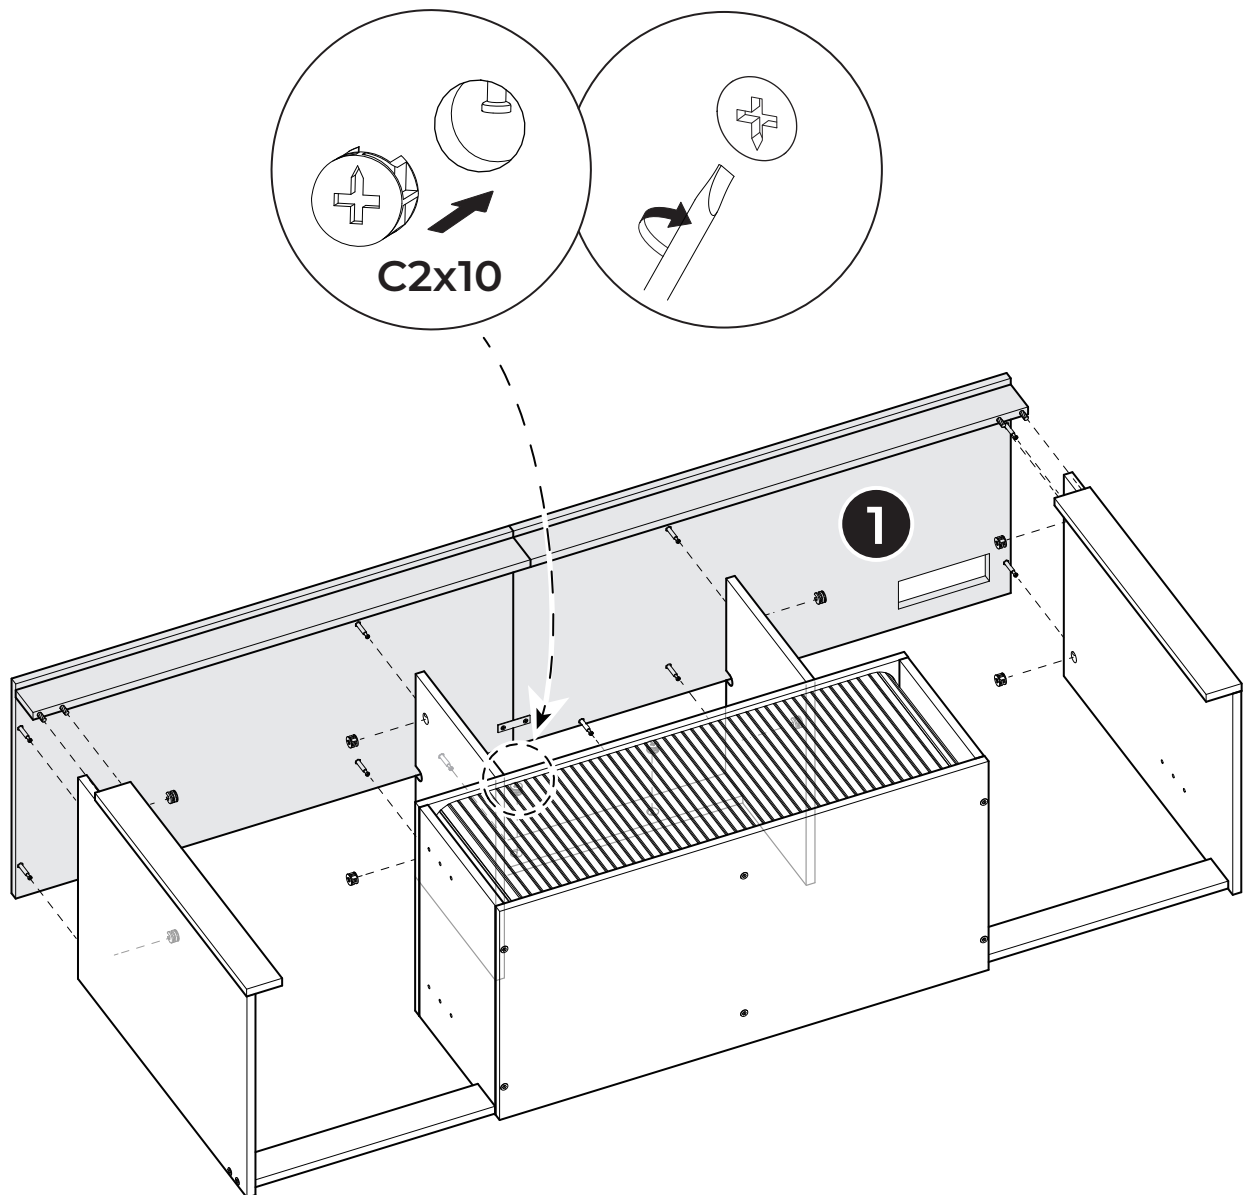

   16.

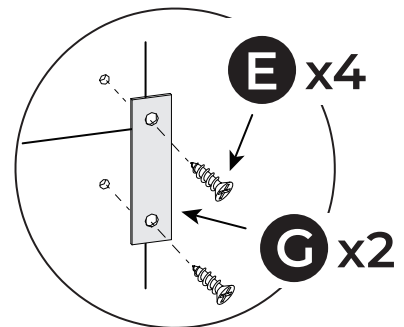
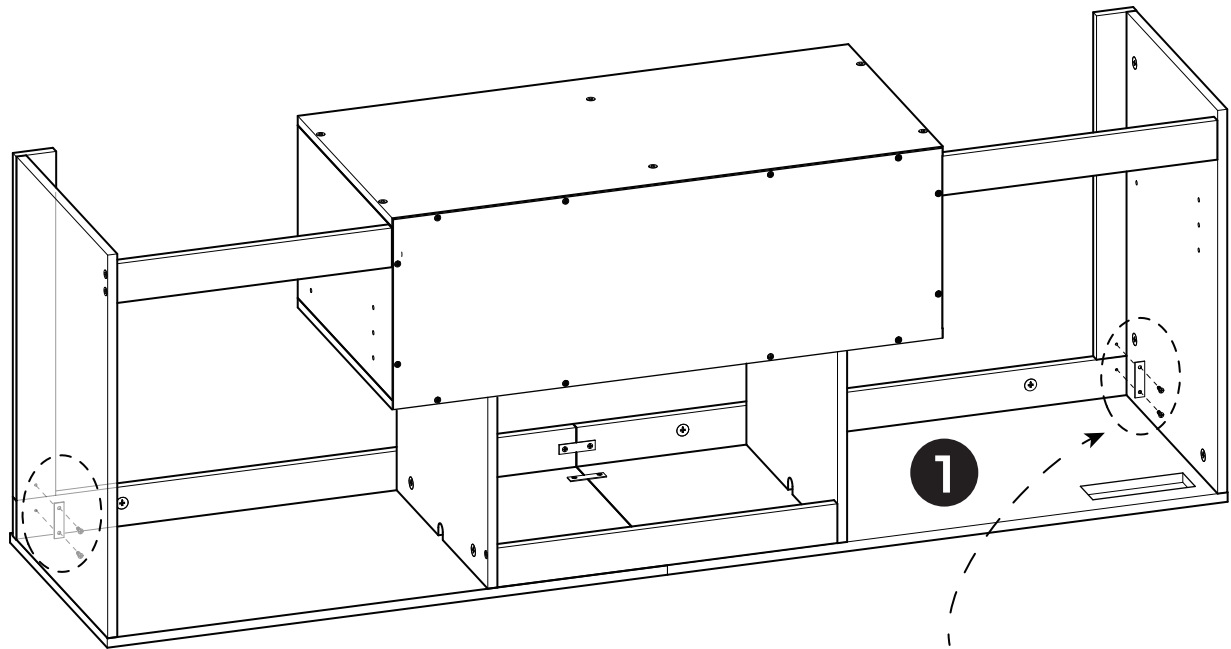
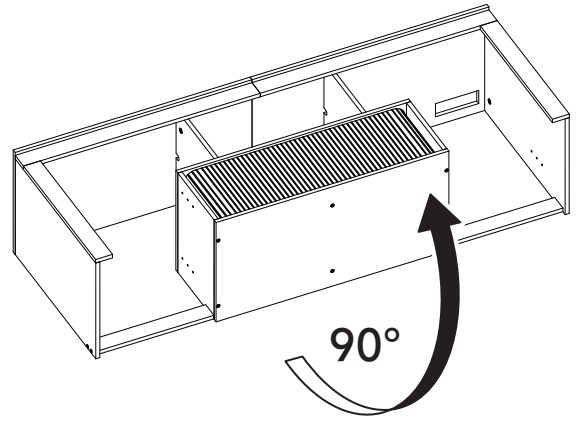


   17.

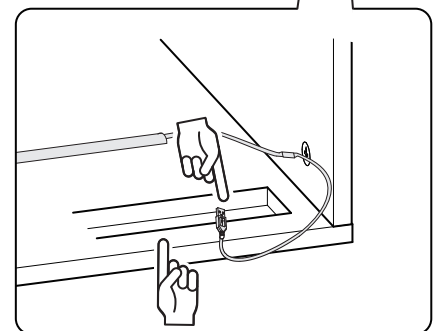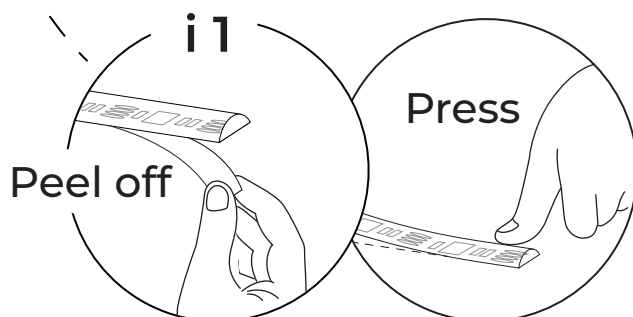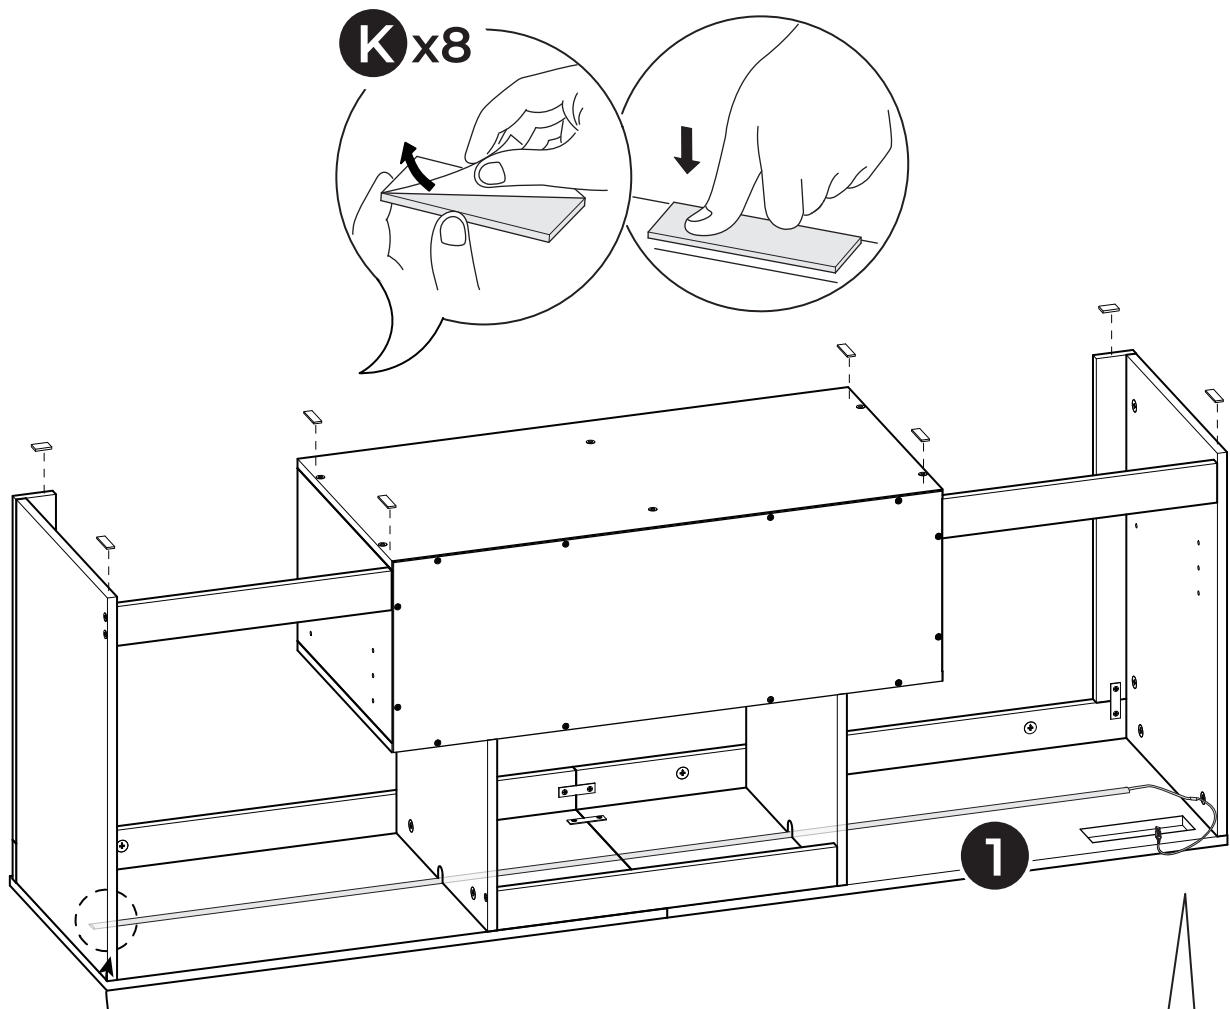


! Attention

   18. ATTENTION

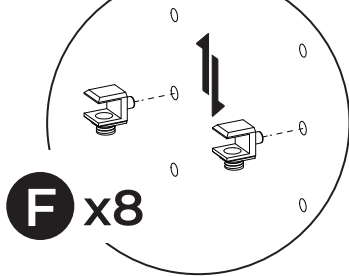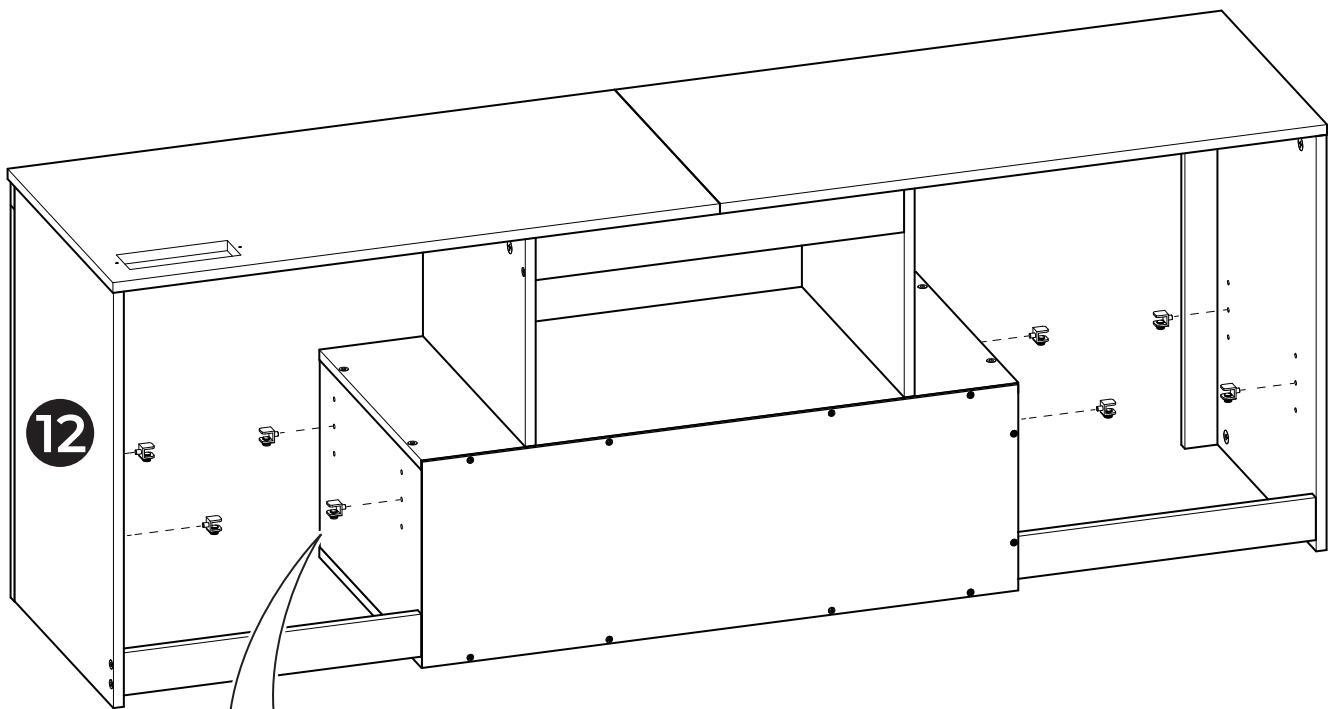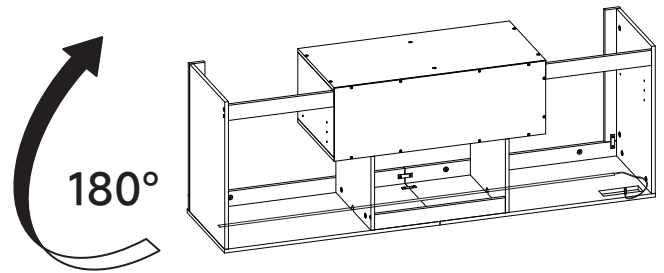


! There are three levels for height adjustment.
please install according to your needs.

 19.

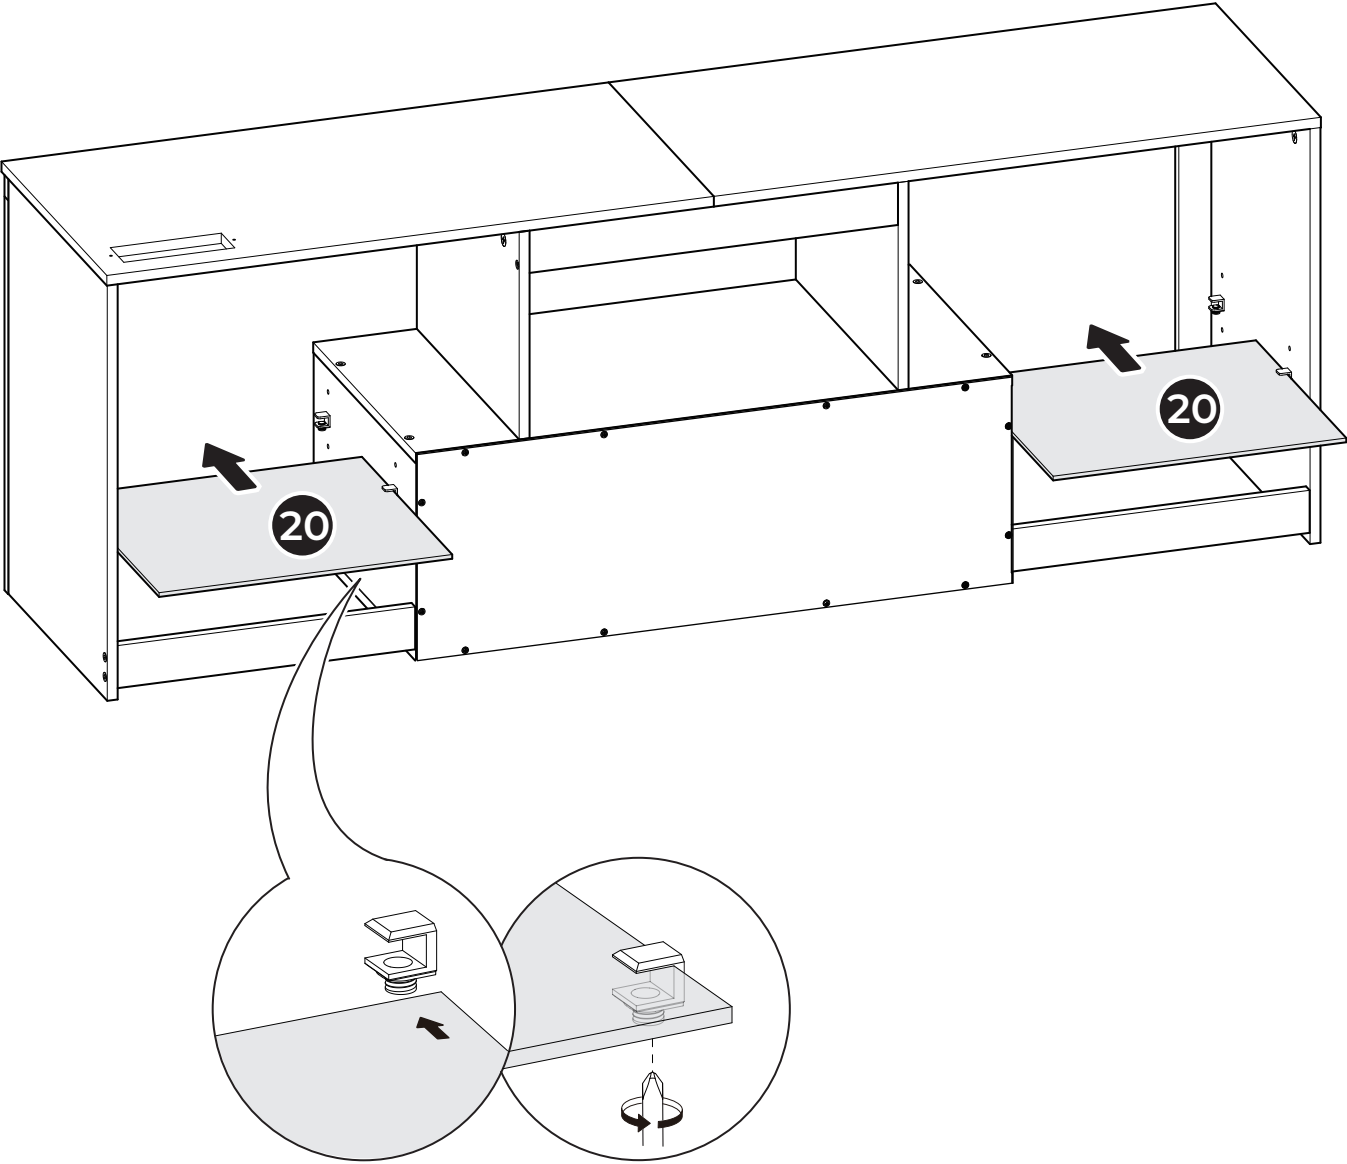


20. ATTENTION

 - Do not connect high power household appliances to the socket of this product, which is limited to 1500W.

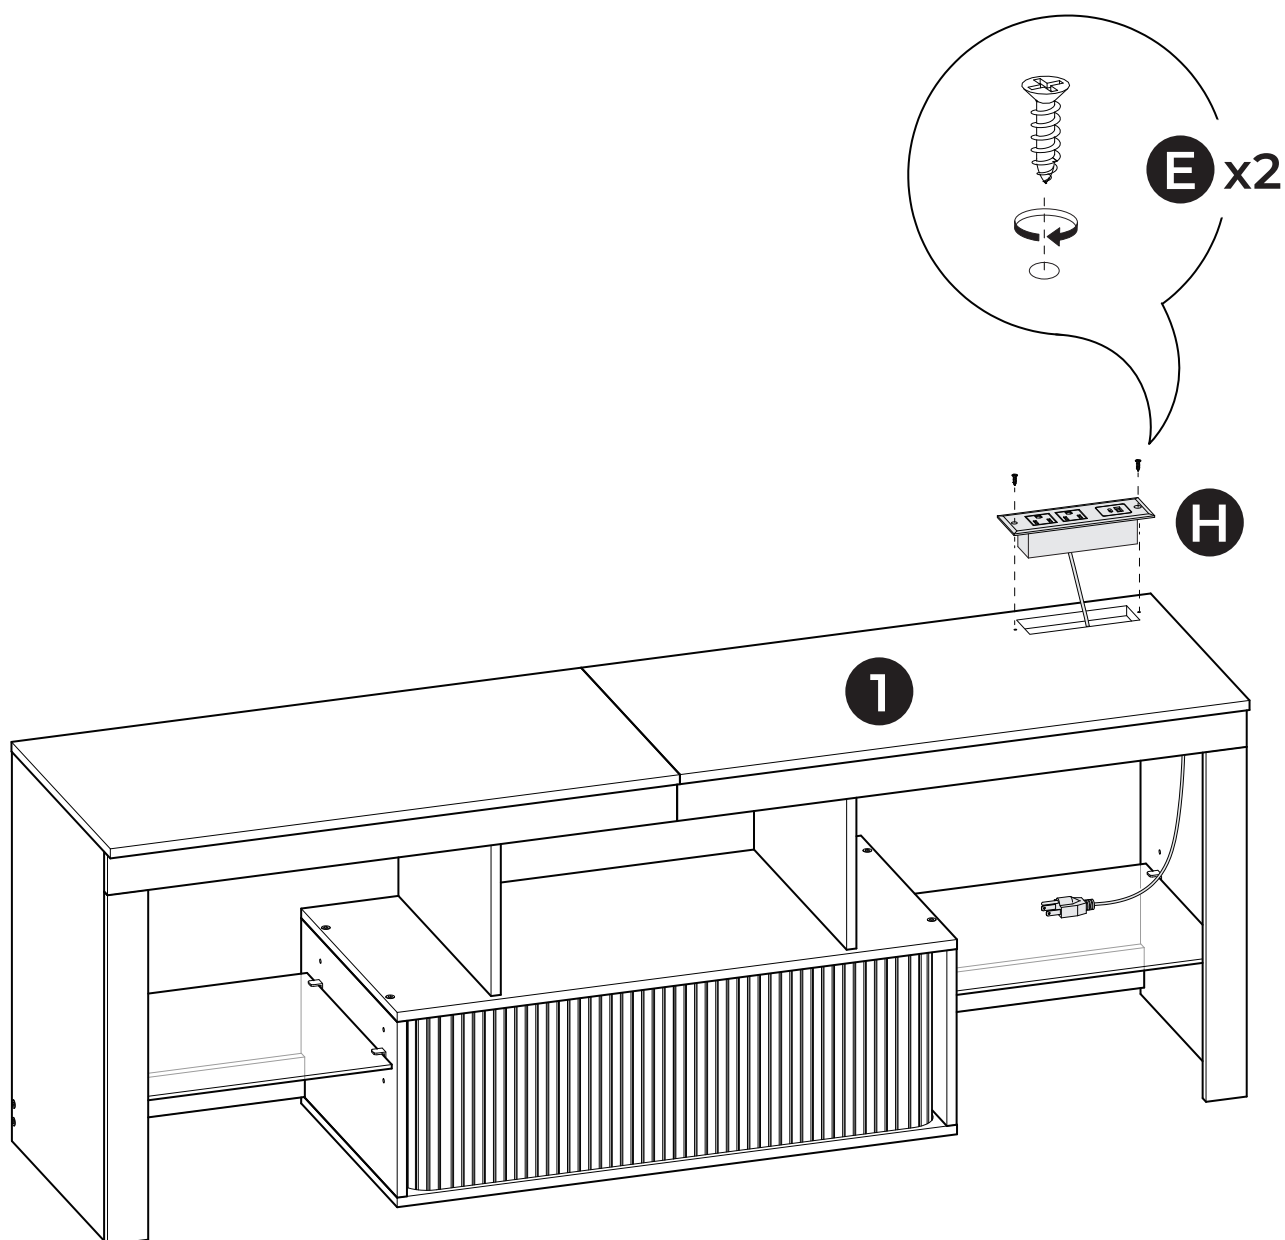

 21.

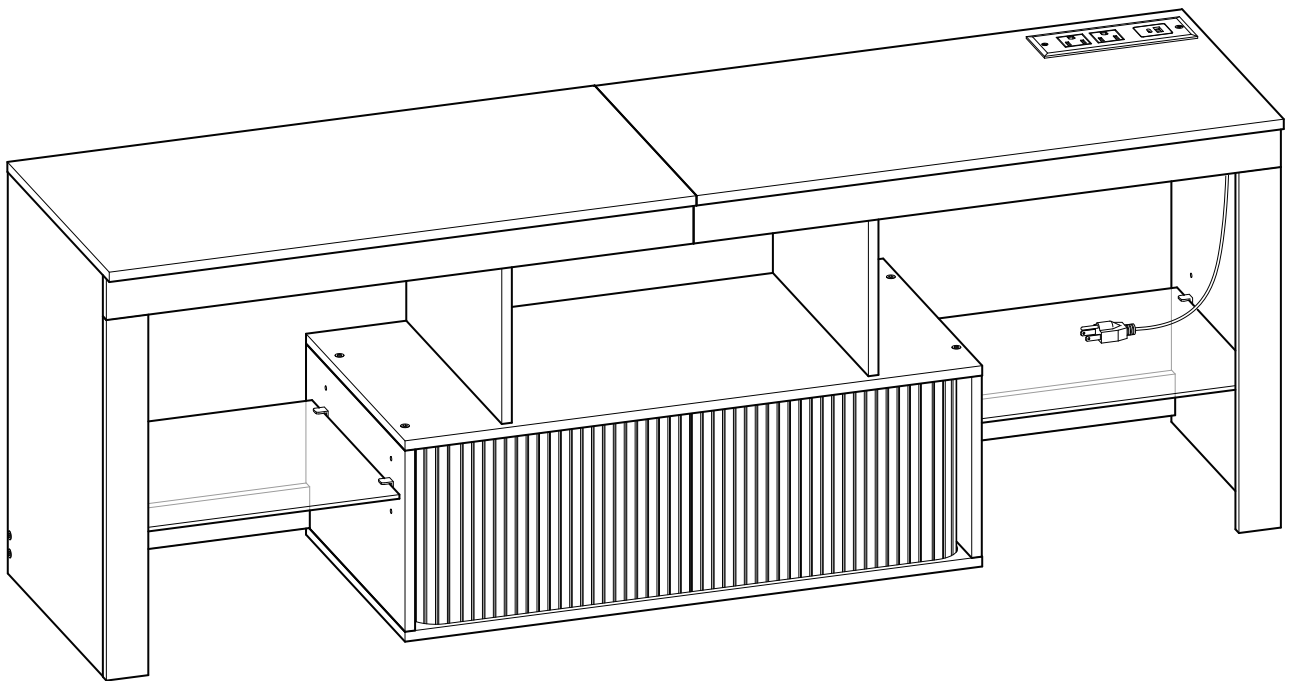

Tip:

Use a hair dryer and set the fan setting to "Low" to soften adhesive and remove the paper sticker. If there is glue stain, use alcohol to wipe it clean.