 



ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV
14901 172009 172230

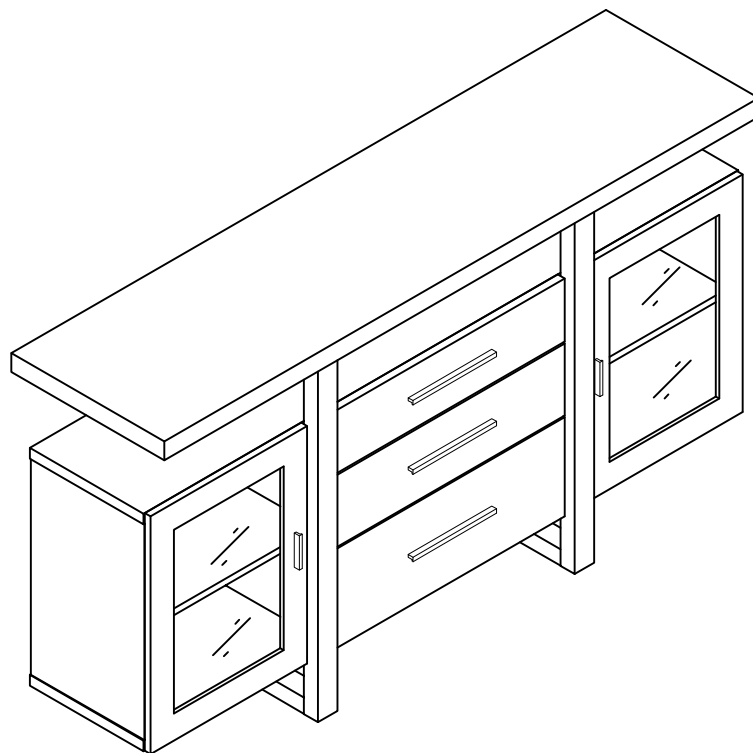

PARTS IDENTIFICATIONS / IDENTIFICATION DES PIECES


 
ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV
14901 172009 172230

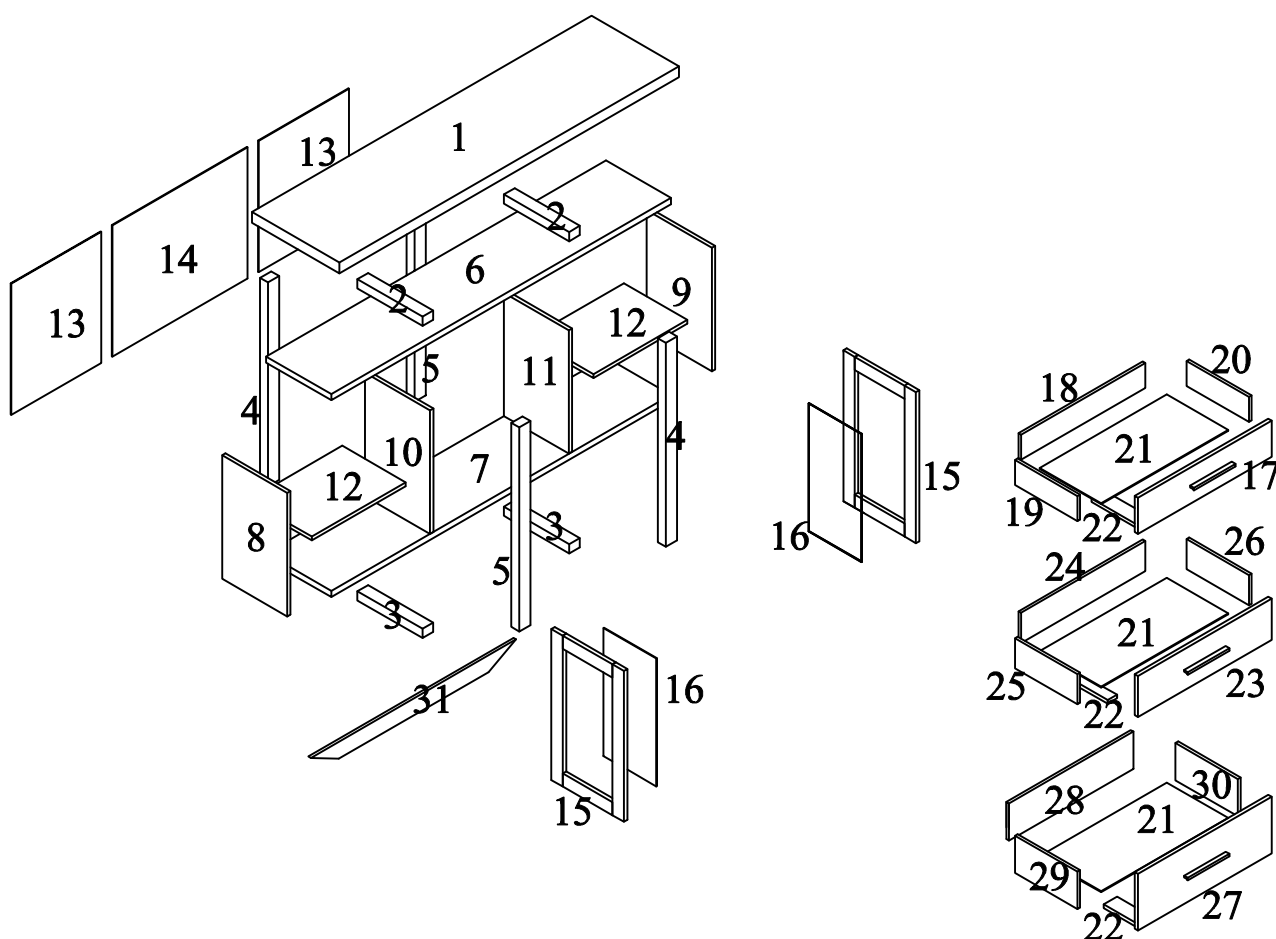

(1)	1PC	(9)	1PC	(17)	1PC	(25)	1PC
(2)	2PCS	(10)	1PC	(18)	1PC	(26)	1PC
(3)	2PCS	(11)	1PC	(19)	1PC	(27)	1PC
(4)	2PCS	(12)	2PCS	(20)	1PC	(28)	1PC
(5)	2PCS	(13)	2PCS	(21)	3PCS	(29)	1PC
(6)	1PC	(14)	1PC	(22)	3PCS	(30)	1PC
(7)	1PC	(15)	2PCS	(23)	1PC	(31)	1PC
(8)	1PC	(16)	2PCS	(24)	1PC		






HARDWARE IDENTIFICATIONS/ IDENTIFICATION DU KIT D'ASSEMBLAGE

  
ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV/14901 172009 172230

A		L29	12PCS	
B		Φ 15	12PCS	
C		Φ 8x25	28PCS	
D		Φ 4x45	10PCS	
E		Φ 8x70	8PCS	
F		Φ 29	8PCS	
H		M6X35	4PCS	
I		Φ 4x30	12PCS	
J		64#	2PCS	
K		M4x22	10PCS	
L		L20	12PCS	
M		Φ 12	12PCS	
N		301A	4PCS	
O		Φ 4x16	16PCS	
P		M13	1PC	
Q		M4	1PC	
R		L23	8PCS	
S		ø12	8PCS	
T		Φ 6x30	6PCS	
U		96#	3PCS	
V			12PCS	
W		Φ 4x25	6PCS	
X		ø5	8pcs	
Y		ø20	4pcs	
Aa		197×5×1	1PC	
Ab		ø5x40	1PC	
Ac		ø8x40	1PC	
Ad		Z1016	35PCS	
Ae		Φ 4x25	1PC	
Af		12×12×1	2PCS	
Sg		Φ 3. 5x12	12PCS	
Ah		Glue: For securing please apply to wood dowel first before inserting into panel		1PC

ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV

     
14901 172009 172230

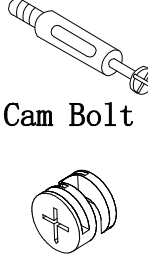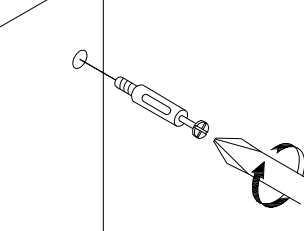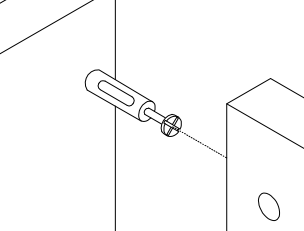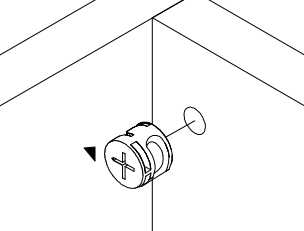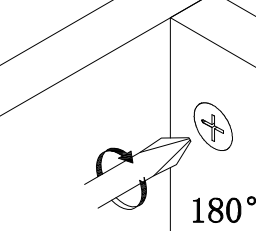HOW TO	1	2	3	4
 Cam Bolt Cam Lock	 1. Screw Cam Bolt into panel.	 2. Insert Cam Bolt into bolt hole of joining panel.	 3. Insert Cam Lock. arrow facing bolt.	 4. Gently turn Cam Lock clockwise to lock position.

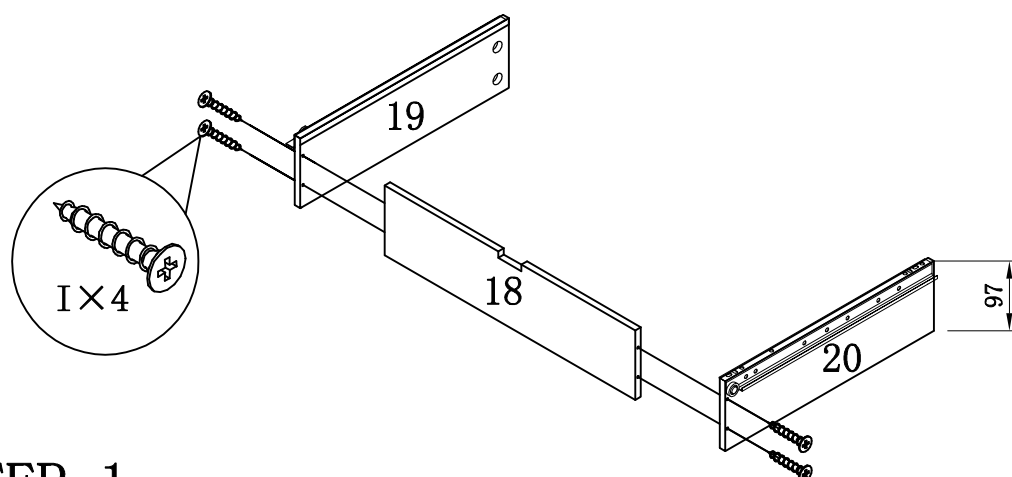 


STEP 1

 STEP 2

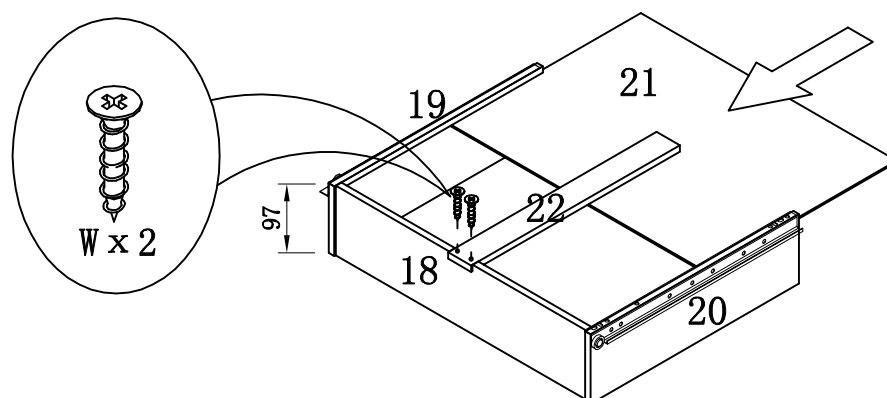


 ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV
14901 172009 172230

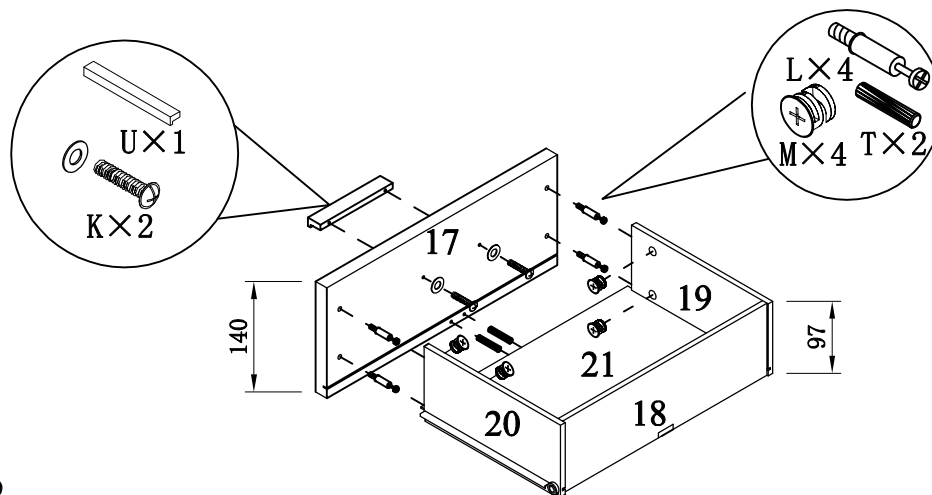


STEP 3

 
STEP 4

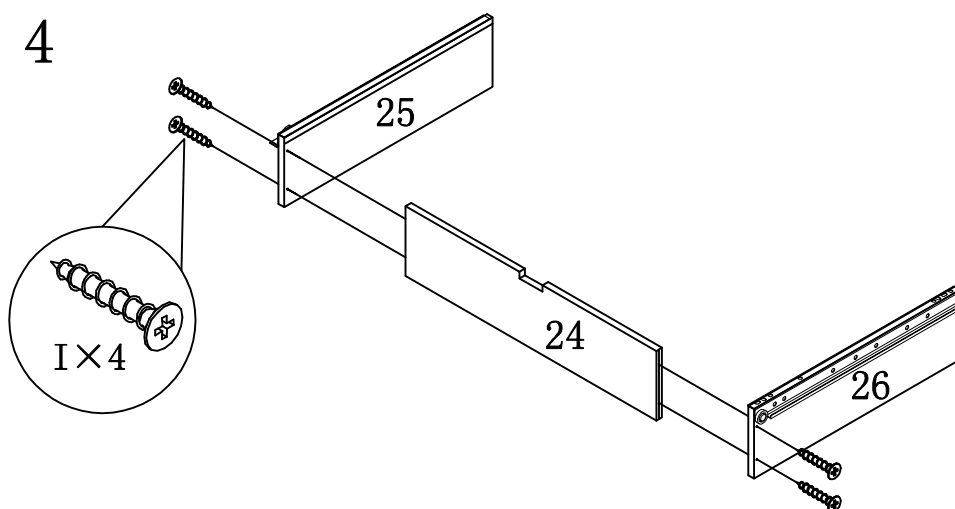

 STEP 5

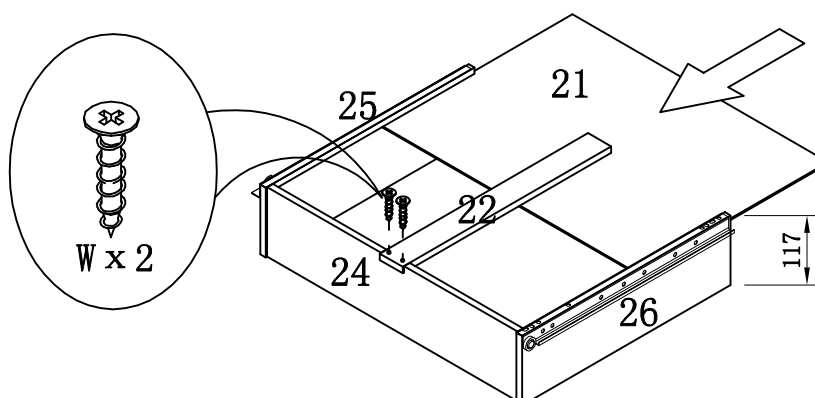


 ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV
14901 172009 172230

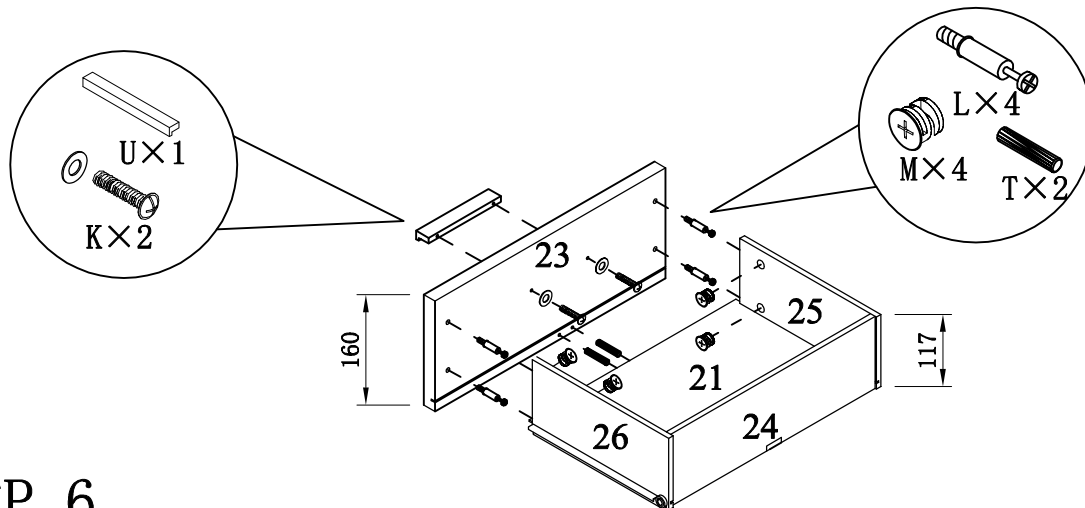


STEP 6

 
STEP 7

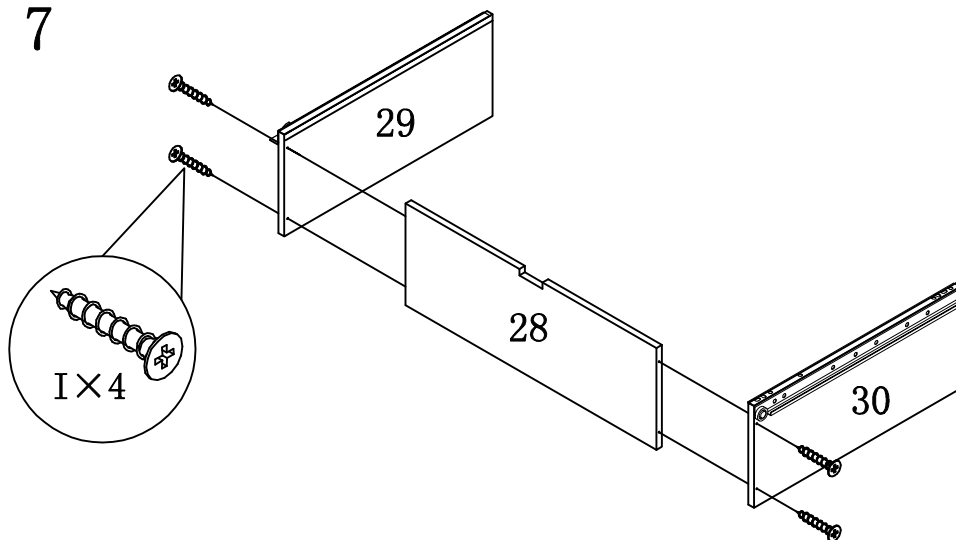

 STEP 8

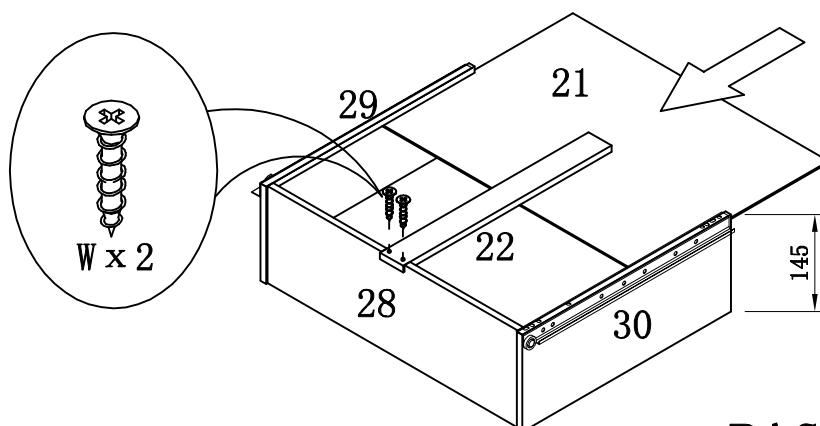


 ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV
14901 172009 172230

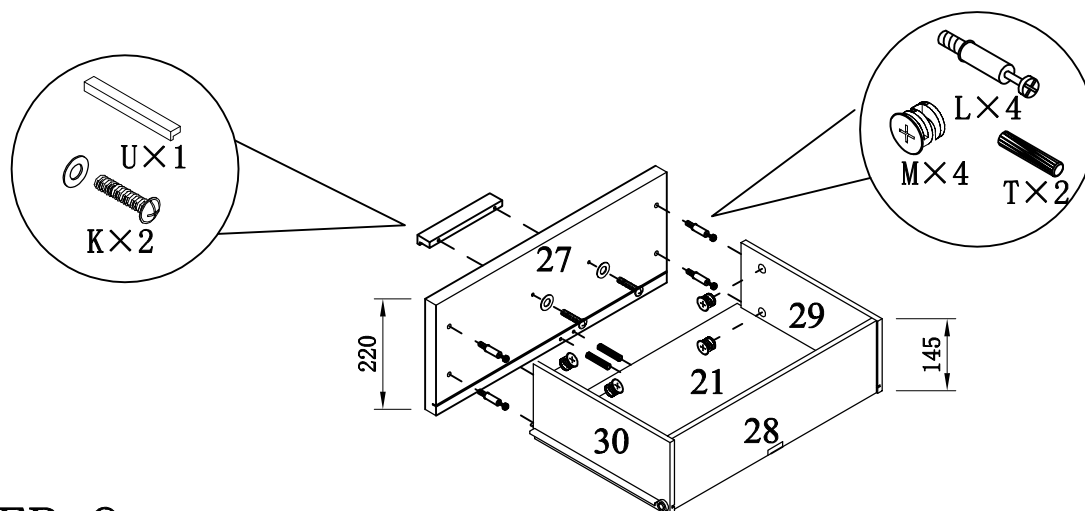


STEP 9

 
STEP 10

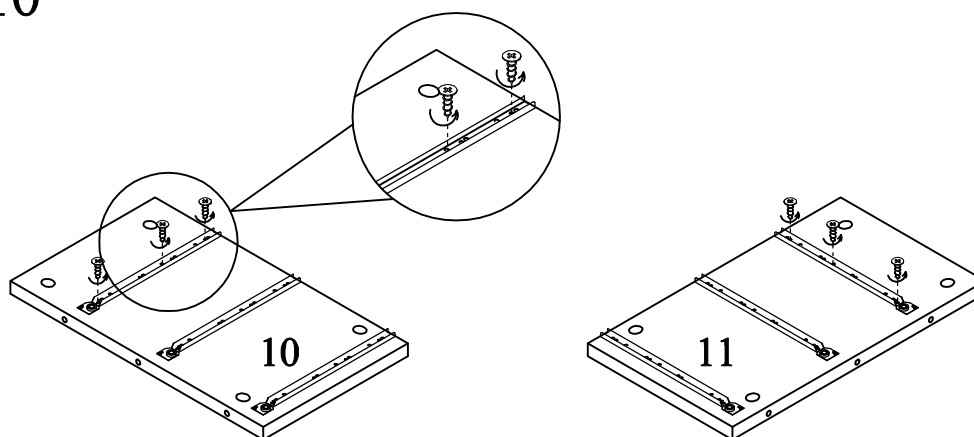

 STEP 11

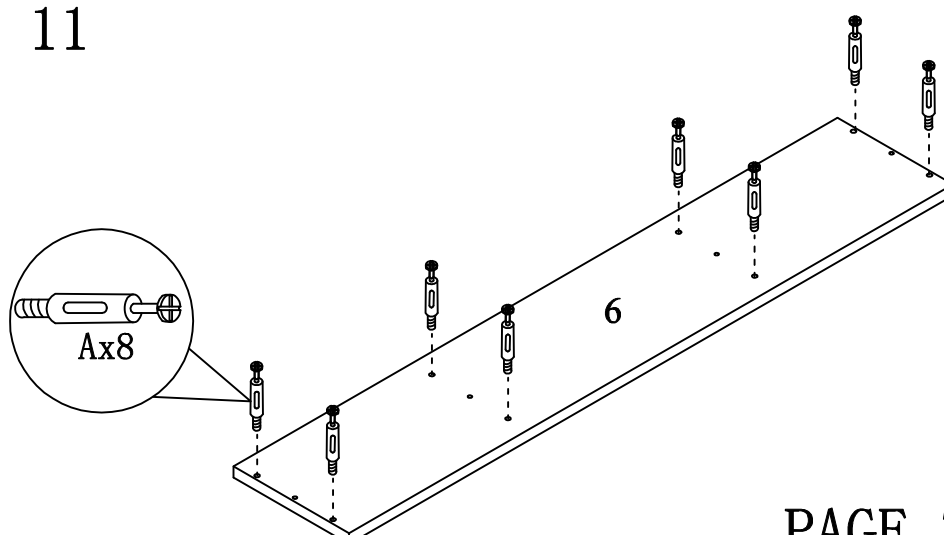

 
ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV
14901 172009 172230

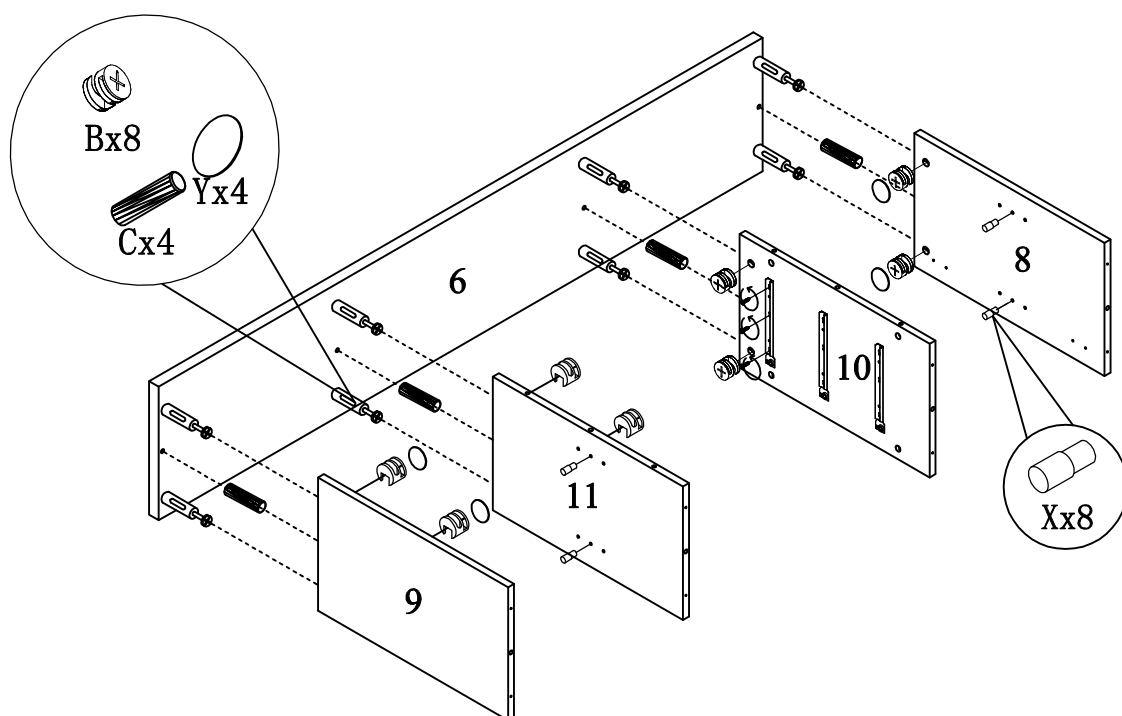

STEP 12


Kindly Reminder: Please keep panel with dege in the same side!

 STEP 13

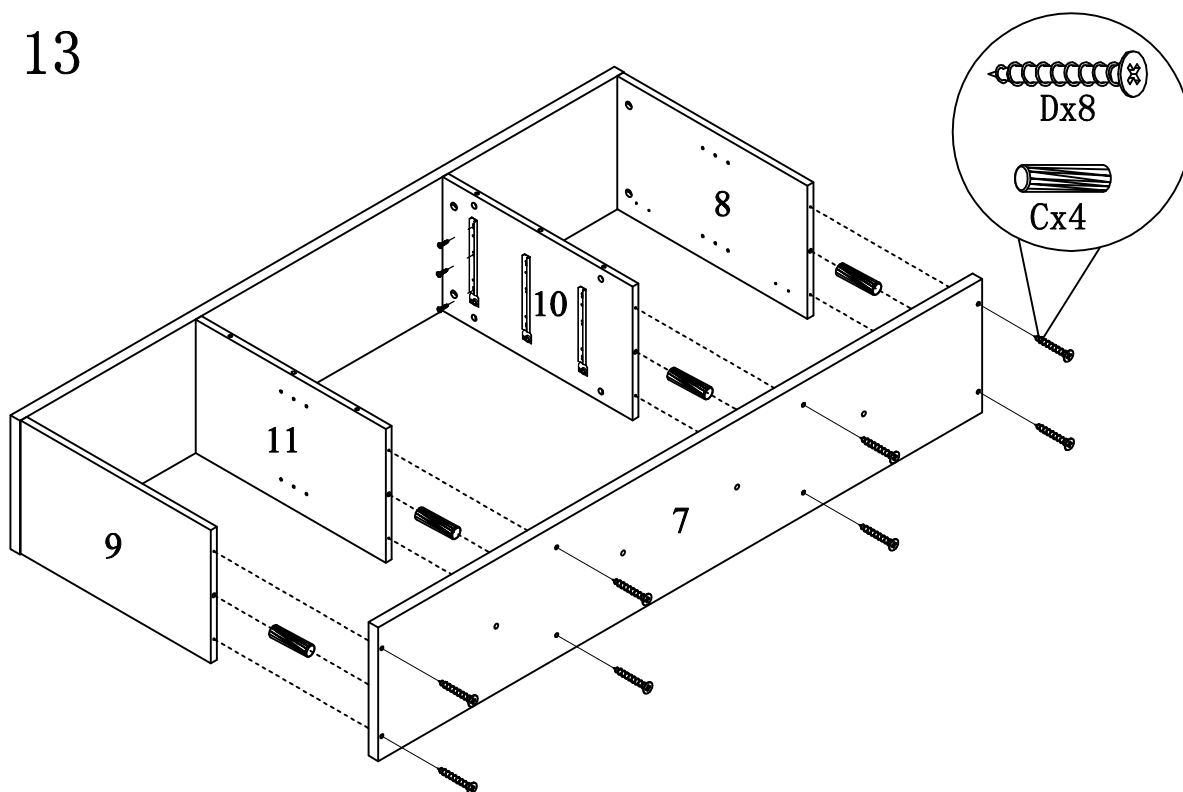


Kindly Reminder: Please keep panel with dege in the same side!

 ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV
14901 172009 172230

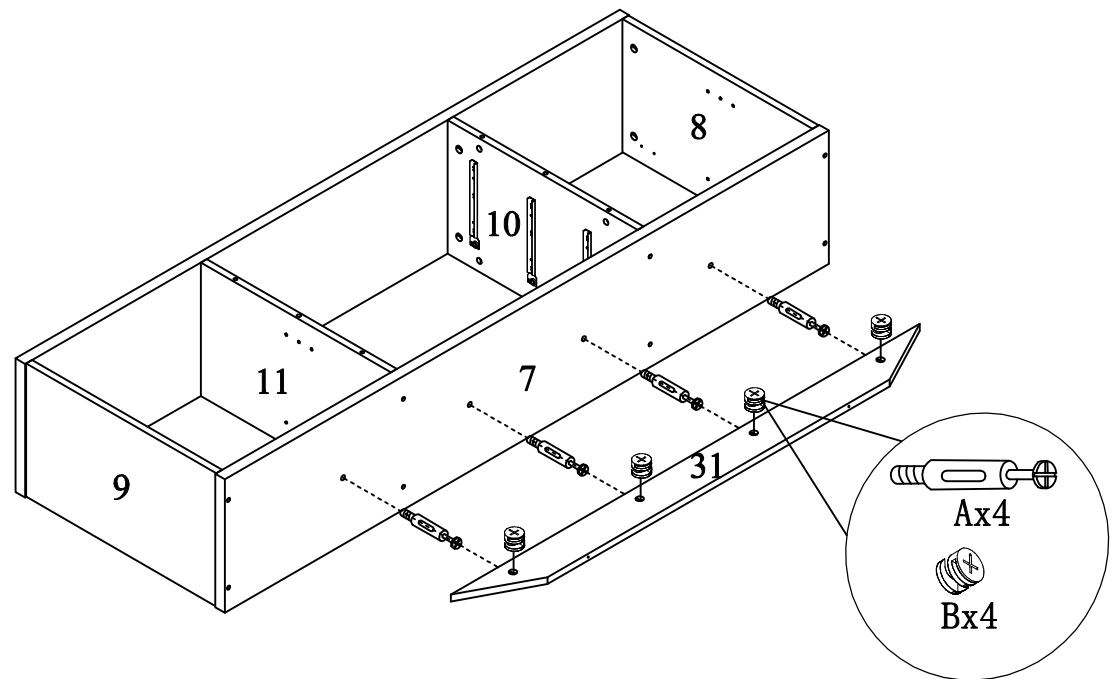


STEP 14

 STEP 15

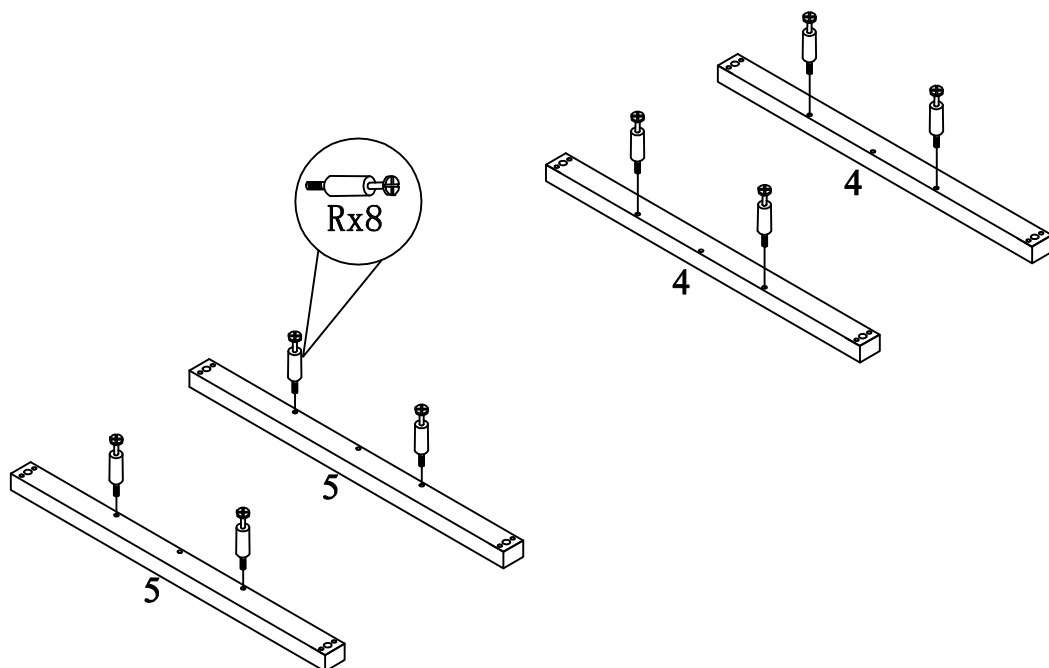


 ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV
14901 172009 172230

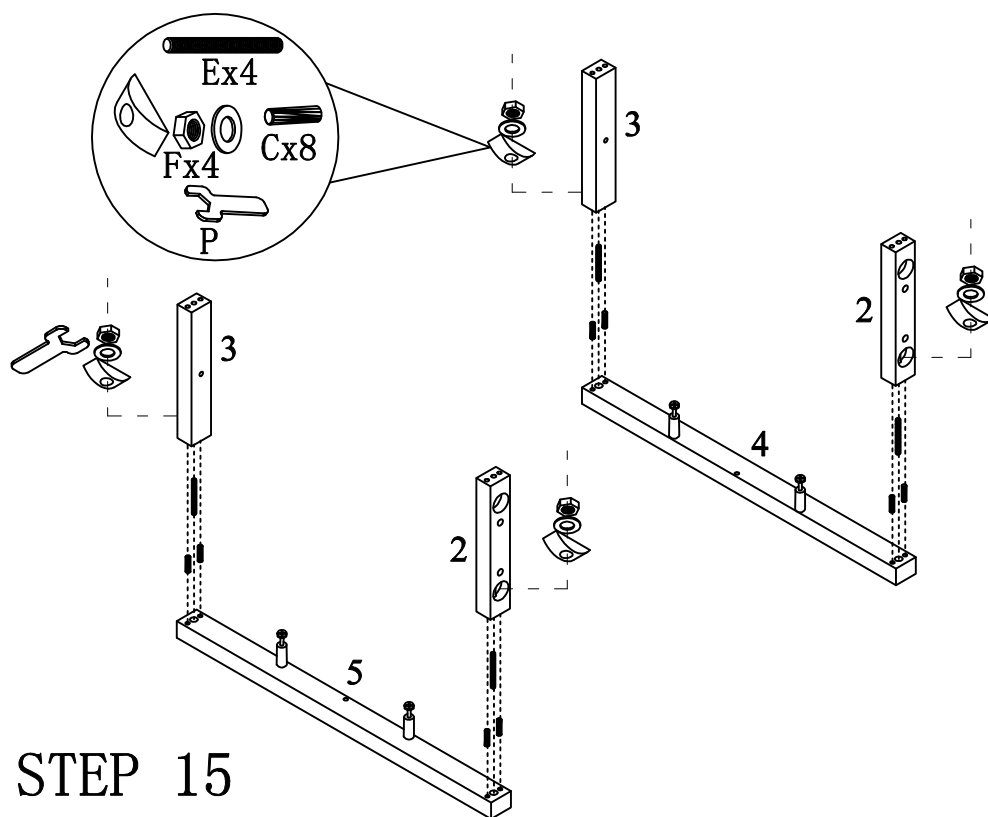


STEP 15

 STEP 16


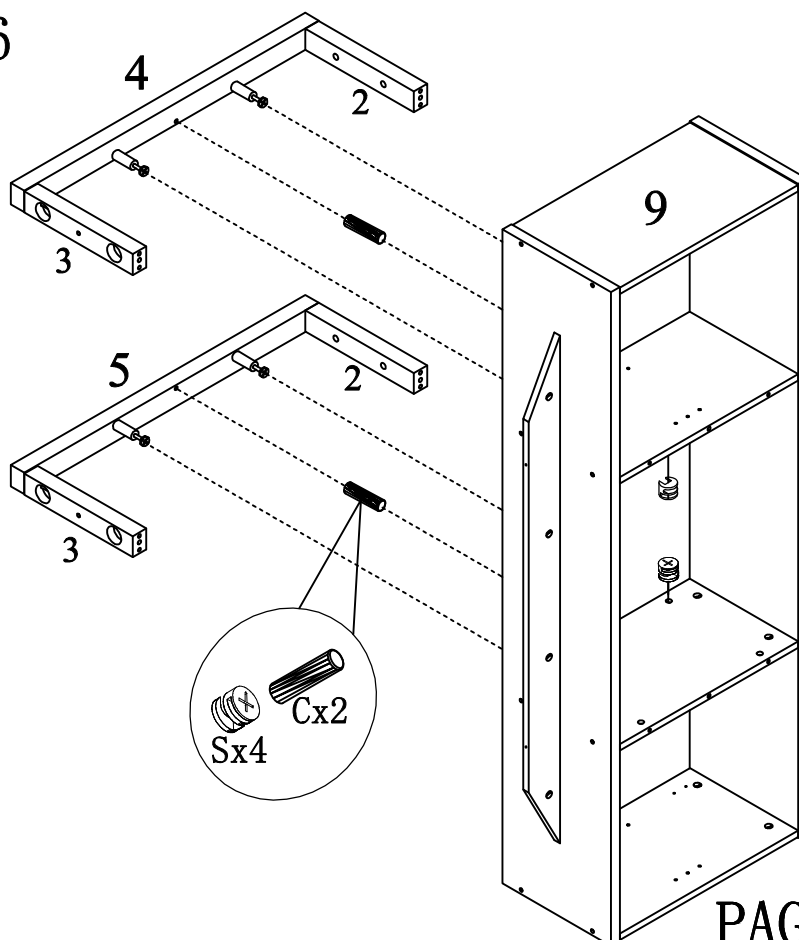


 ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV
14901 172009 172230

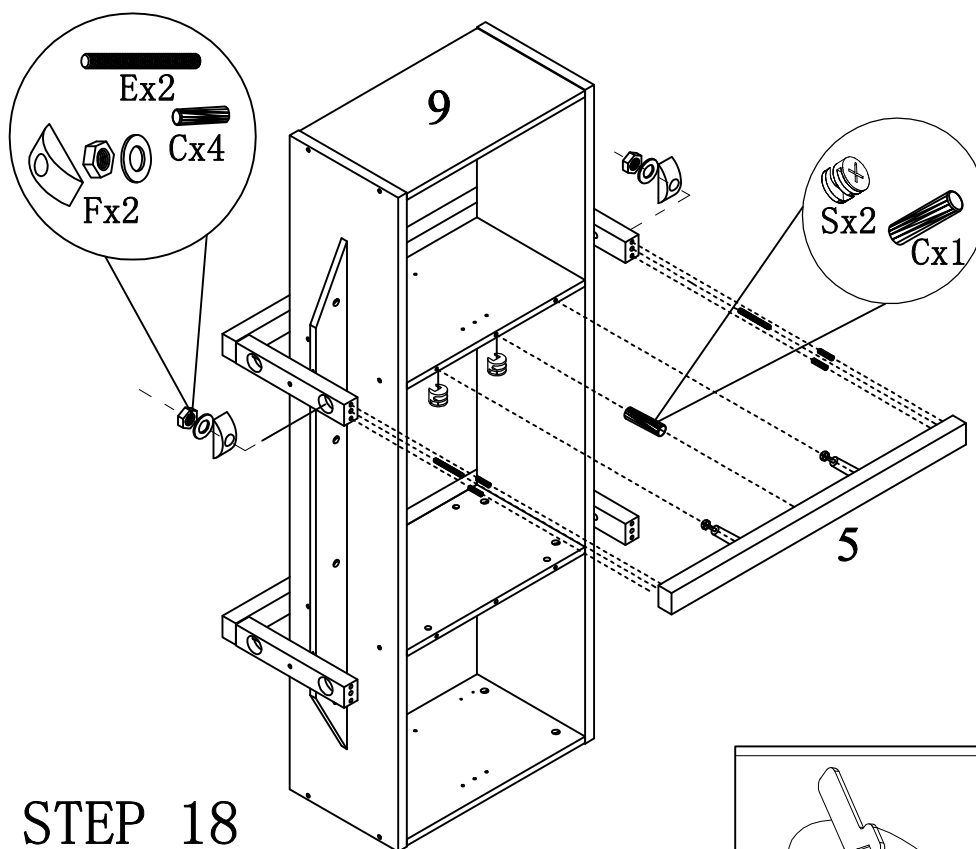


STEP 18

  STEP 19

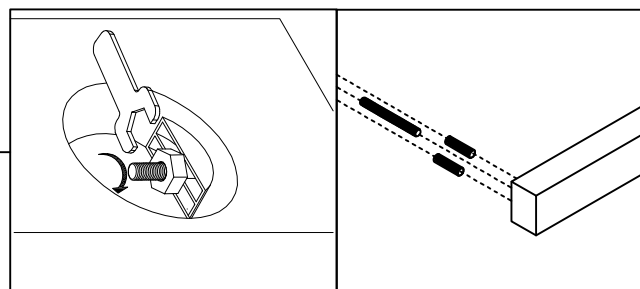
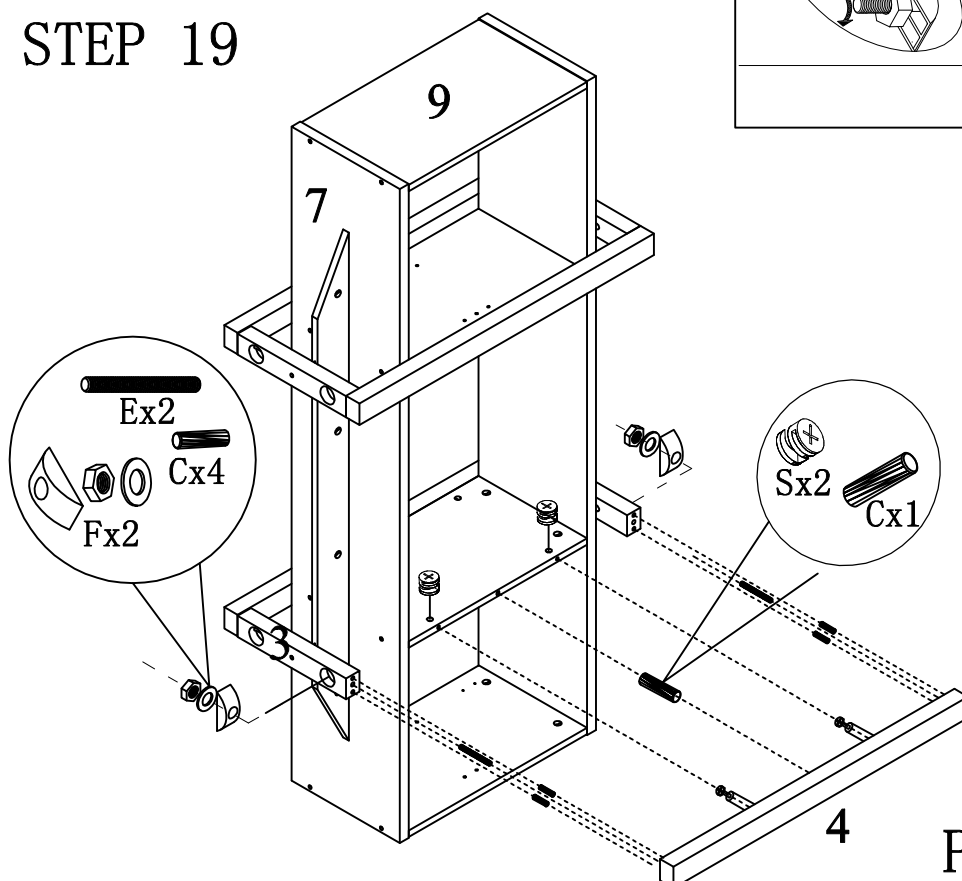


 ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV
14901 172009 172230

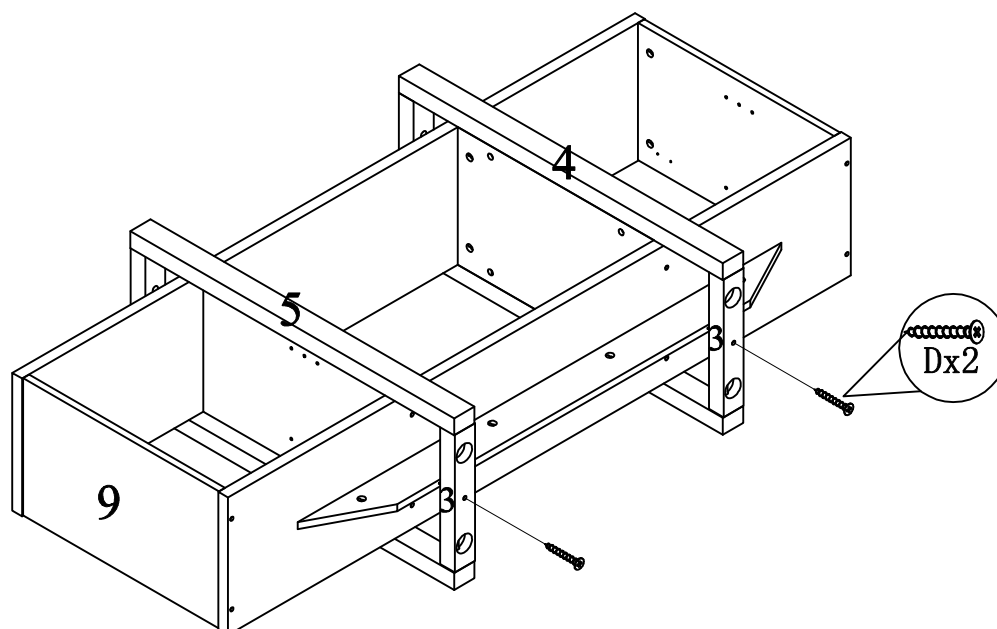


STEP 20

  STEP 21

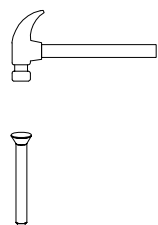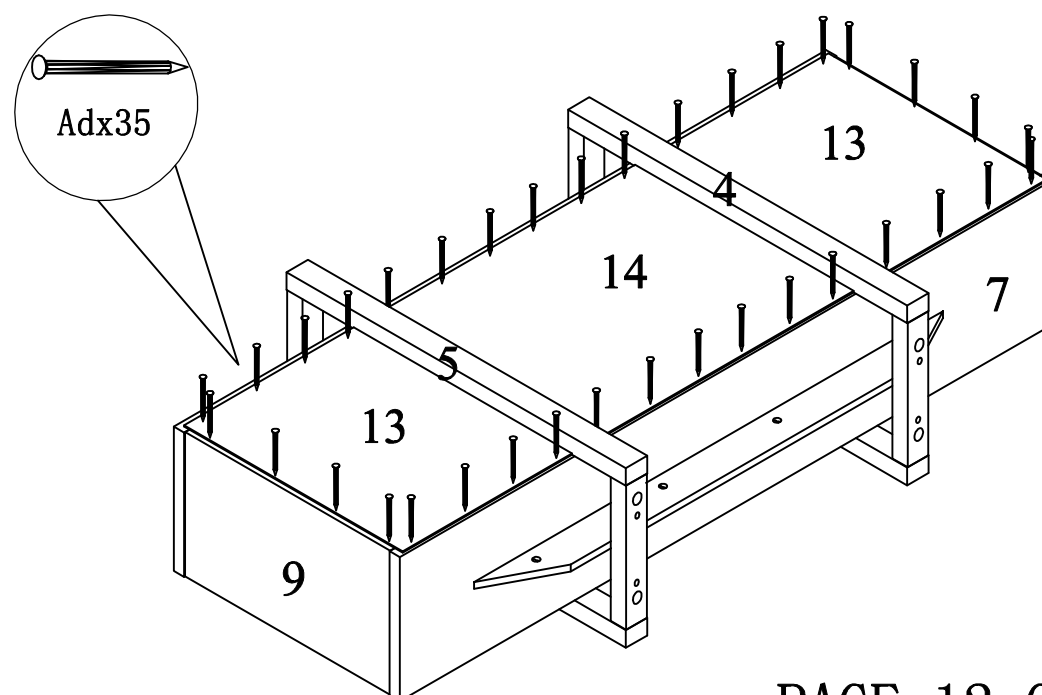


 ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV
14901 172009 172230

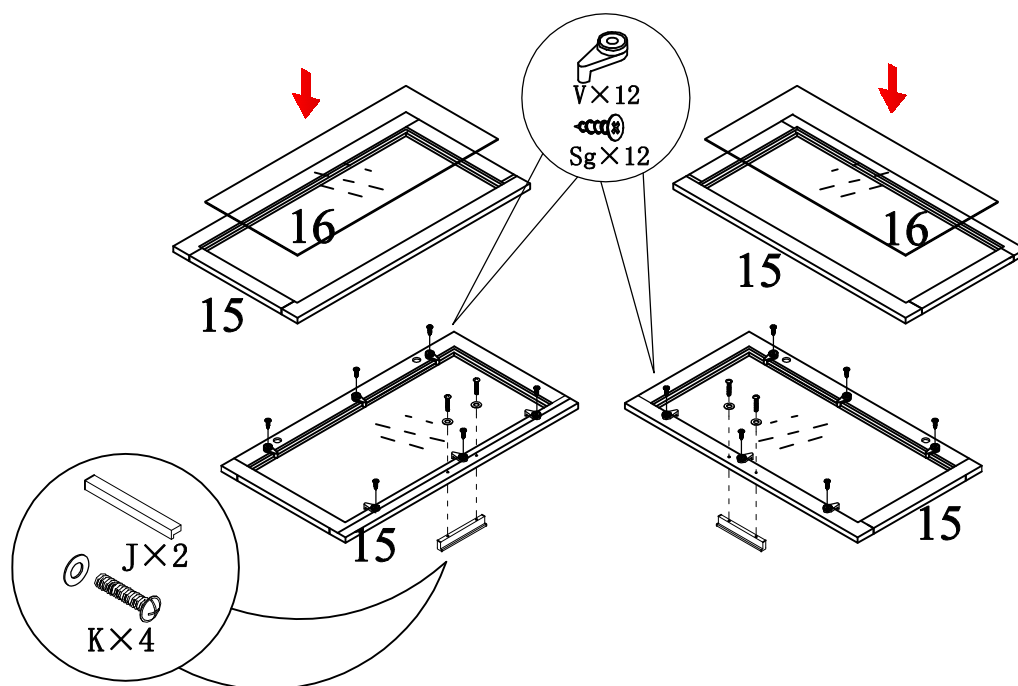


STEP 22

 STEP 23

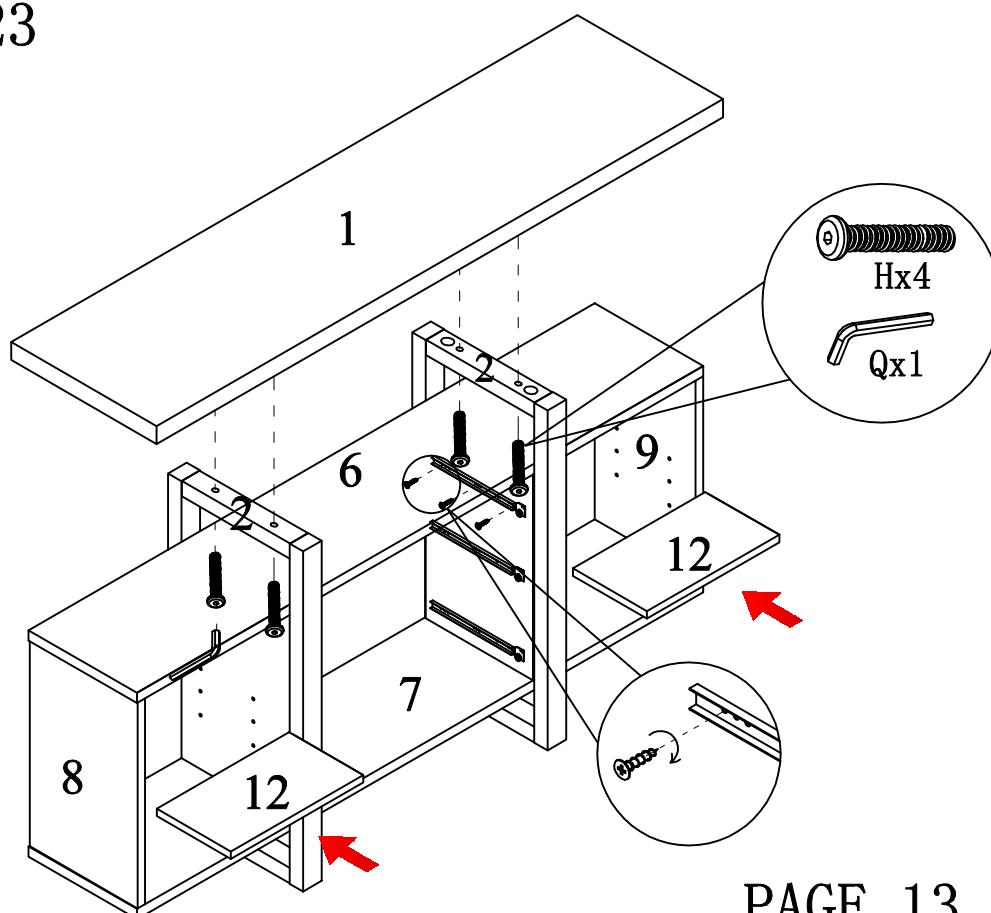

ITEM NO/NO ARTICLE: TV STAND/MEUBLE TV
14901 172009 172230

 
STEP 24

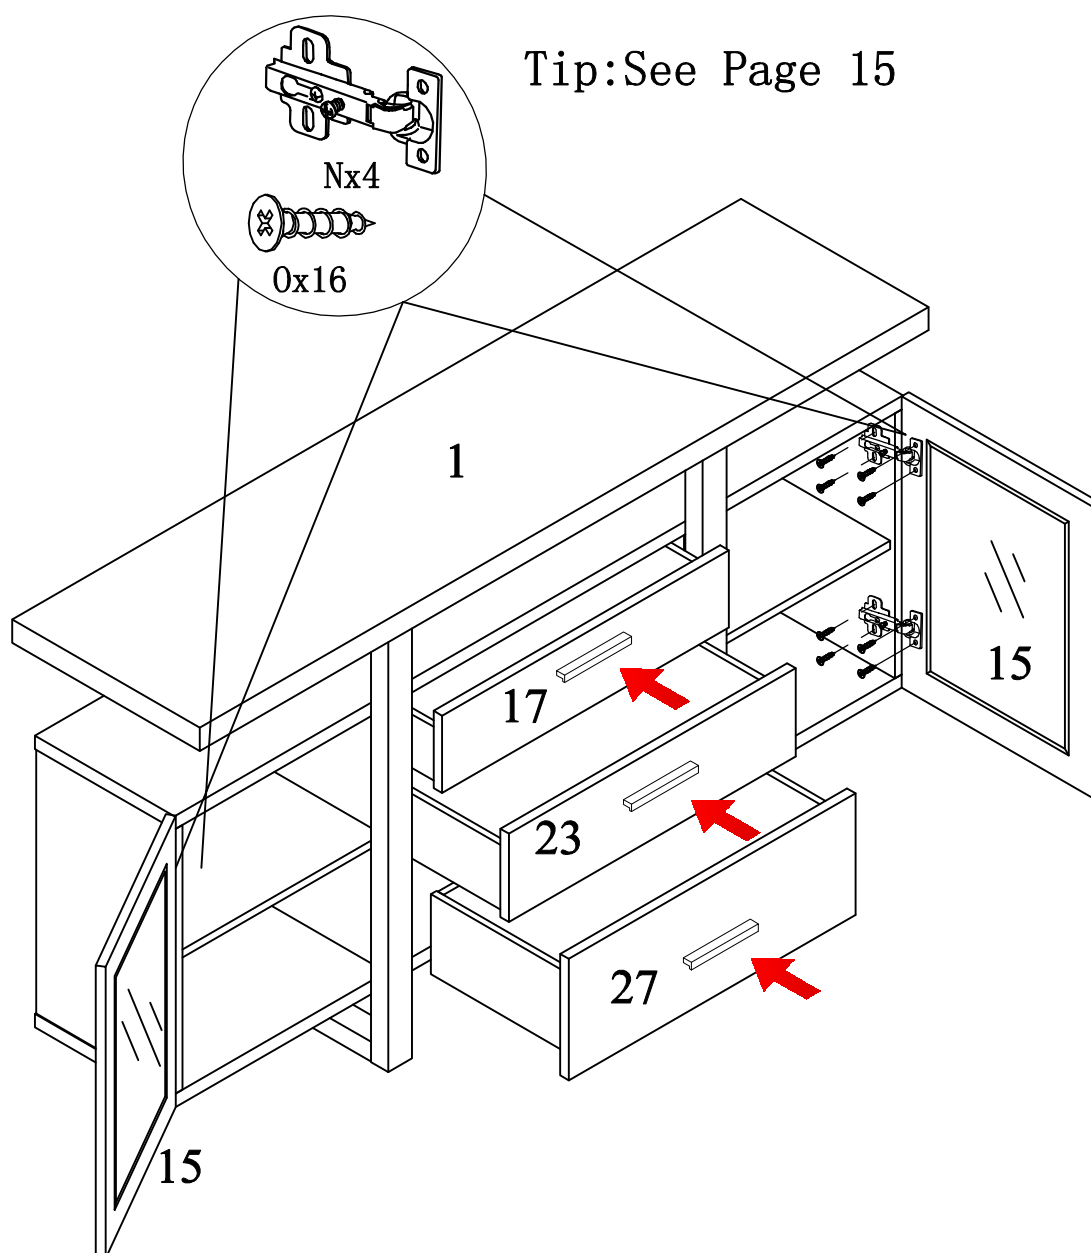

HOW TO ADJUST HINGES

Gradually adjust the screws and close the door to review adjustment each time.

 
Fig.1

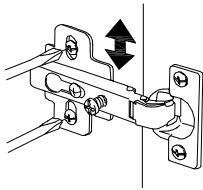

If door is too high or too low:

Loosen top and bottom screws, as shown in Fig. 1, for all hinges on this door panel. Take care to support door. Adjust door up or down as necessary, hold in place, and tighten screws again.

 
Fig.2

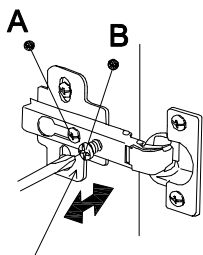

If doors have a gap in the middle or are hitting each other:

Loosen screw A and B, as shown in Fig. 2, for all hinges on this door panel. Take care to support door. Adjust door to the left or right as necessary, hold in place and tighten screw A, then B. If the door is not hanging straight, adjust the top and bottom hinges separately by tightening/loosening screw B, to correct the alignment of that corner. Turn screw B clockwise to move door toward frame. Turn screw B counterclockwise to move door away from frame.

 Fig.3

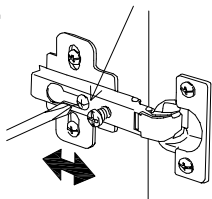


If door is too close or far from frame:


Loosen screw, as shown in Fig. 3, for all hinges on this door panel. Take care to support door. Adjust door towards or away from frame as necessary, hold in place and tighten screws again.

ANTI-TIPPING STRAP INSTRUCTION

 
HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC

 

 METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC

 


STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :

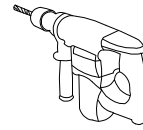


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

 STEP 1

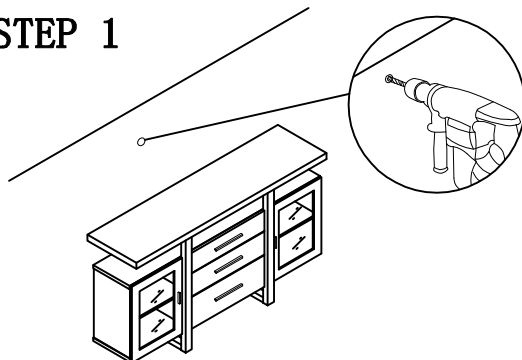


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

 STEP 2

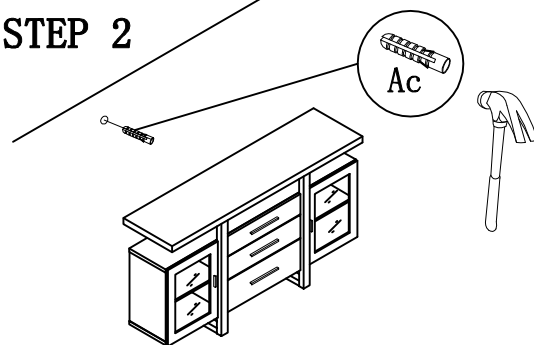


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

 STEP 3

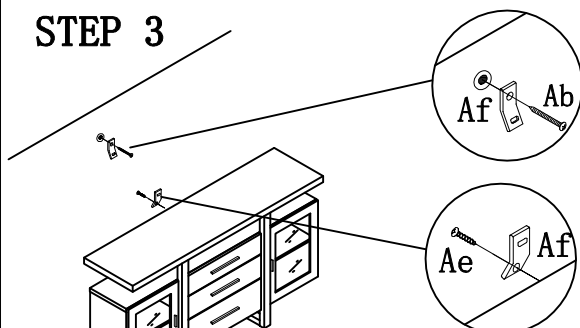

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

 STEP 4

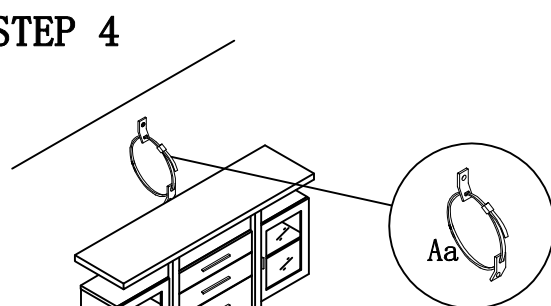

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. Pull lightly til strap stops.
- Assembly is complete.