


# 01 Check Various Accessories


## Details of accessories

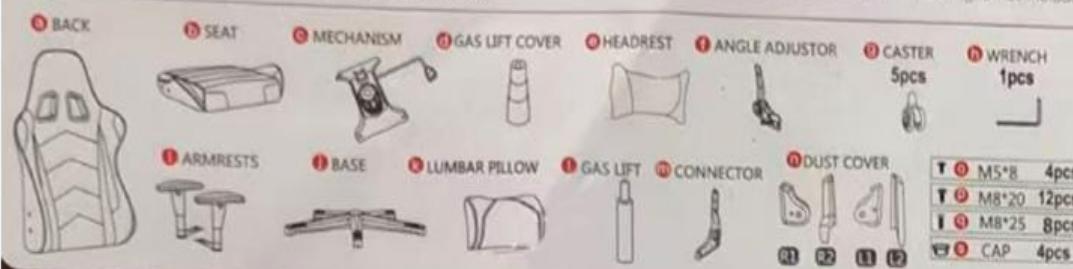


# 02 Instructions Before Using

## Chair of Installation


1 Place the base upside down and insert the castes into the bottom of the base.

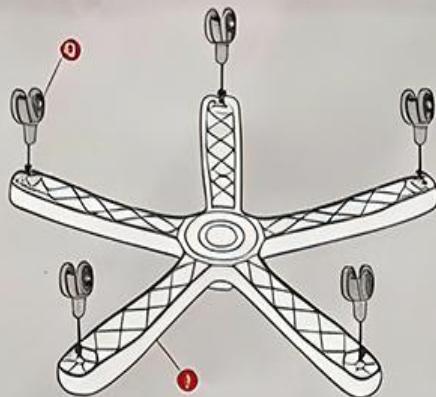

3 Install the mechanism and armrests.

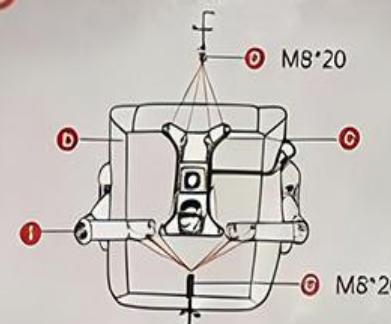


2 Install gas lift and insert gas lift cover.

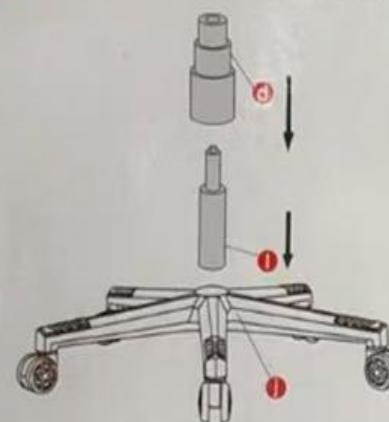


4 Place the seat on the gas lift.



5 Align ①&⑪ with the holes of seat, then tighten screws.

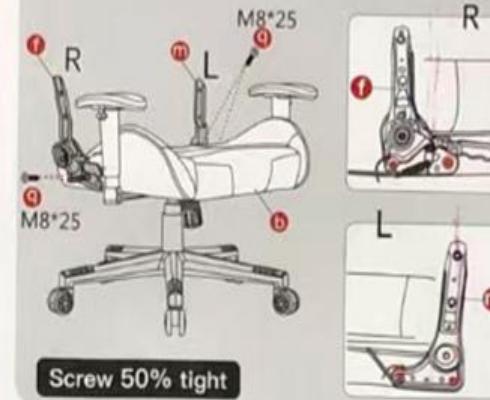

7 Put M5\*8 screw through the hole of ⑩&⑪ and tighten, then put the cap on.

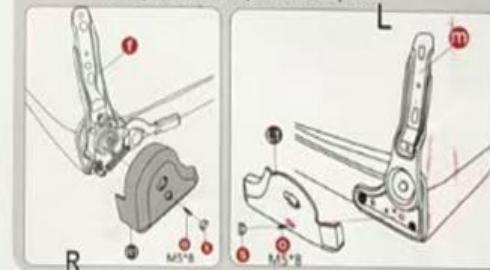


9 Attach the headrest & lumbar pillow.



6 Align ①&⑪ with the holes of back, then tighten screws.



8 Install ⑩&⑪ with M5\*8 screw, then put the cap on.

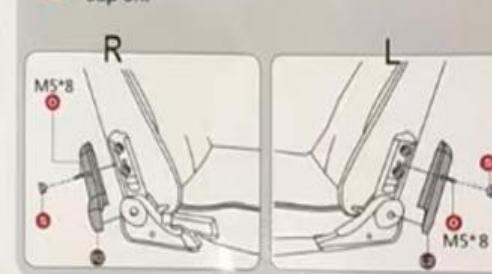


### Functions

A Lift up the button on the side of the arm to adjust the arm height, raise or lower to the desired position.



B Lift the handle to recline and release it to any desired position. Rest on the back when resetting back to its normal position, otherwise the back may rebound rapidly.

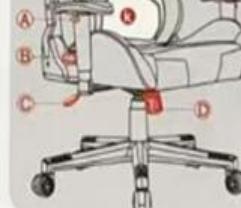

C ① Pull upward on lever to achieve height adjustment.  
② Push in to lock, pull out to unlock the tilt of the chair.



D Adjust the tilt angle with the tilt-tension knob underneath the seat. Turn it clockwise to decrease the angle, counterclockwise to increase the angle.

### Frequently Asked Questions:

Q: Why do I hear a creaking sound after using it for a period of time?

A: The mechanism may not fit the seat base. If you hear a creaking sound, please remove the mechanism and reassemble again. Please ensure all the screws are securely tightened.