



INSTRUCTION MANUAL

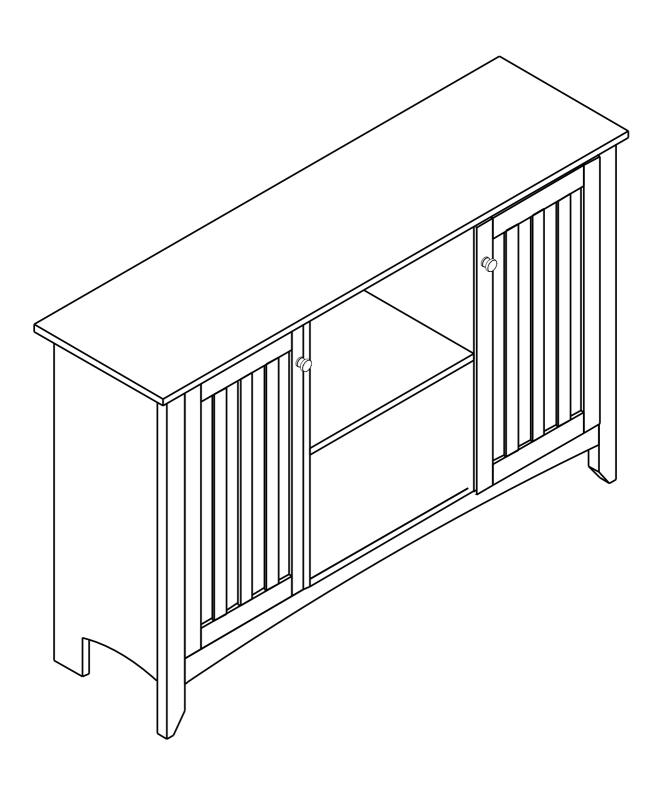

SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

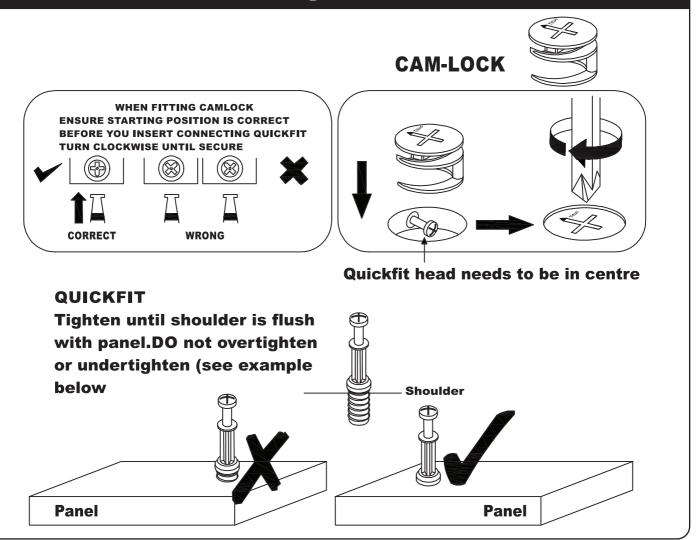


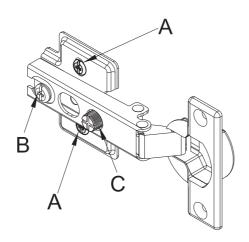

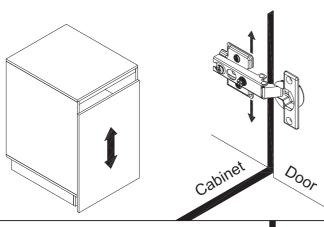


To adjust the vertical height.


Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

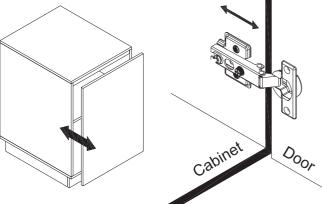

To adjust depth.


Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

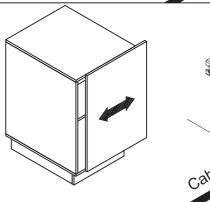


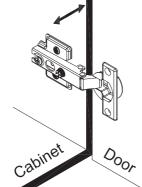



To adjust side ways.


Turning the screw "C" on BOTH hinges on each door.

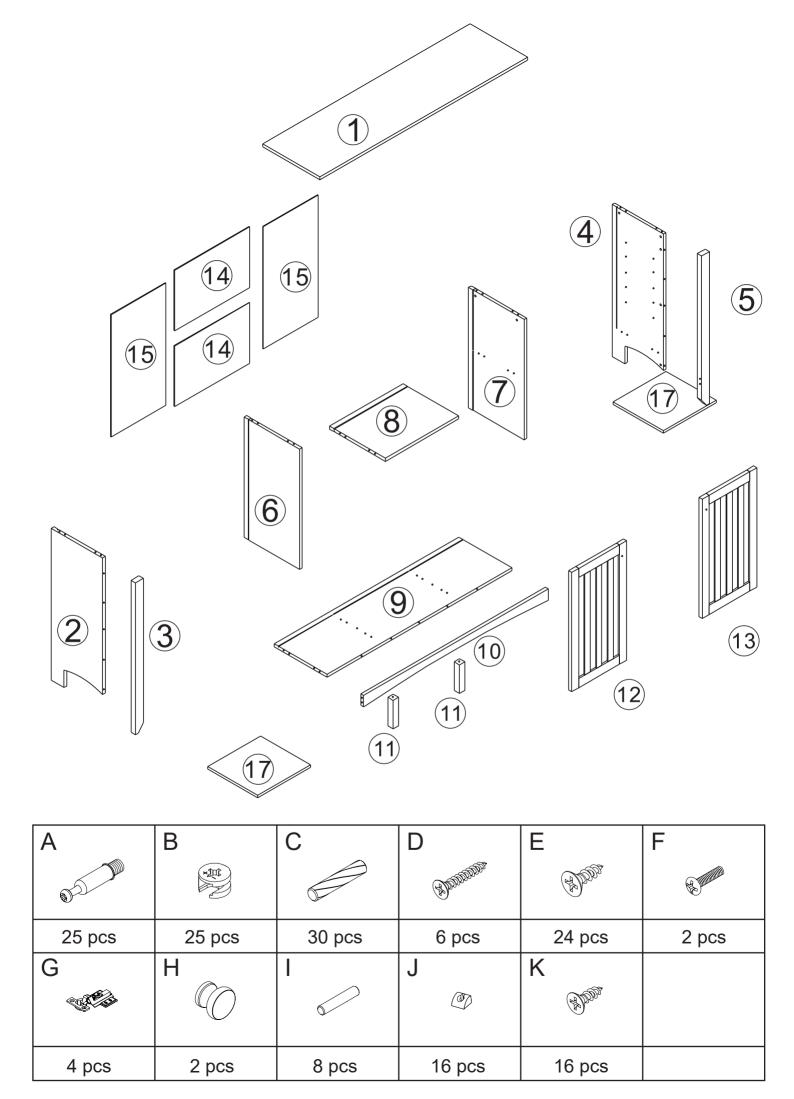


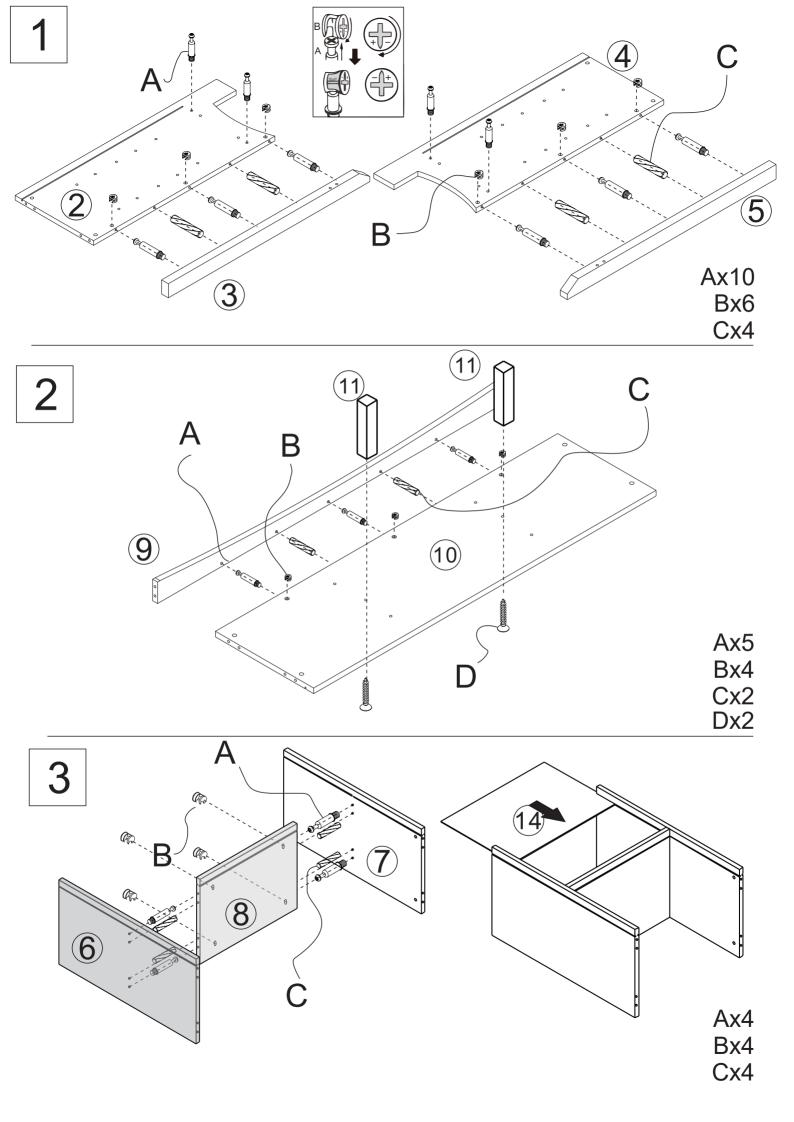

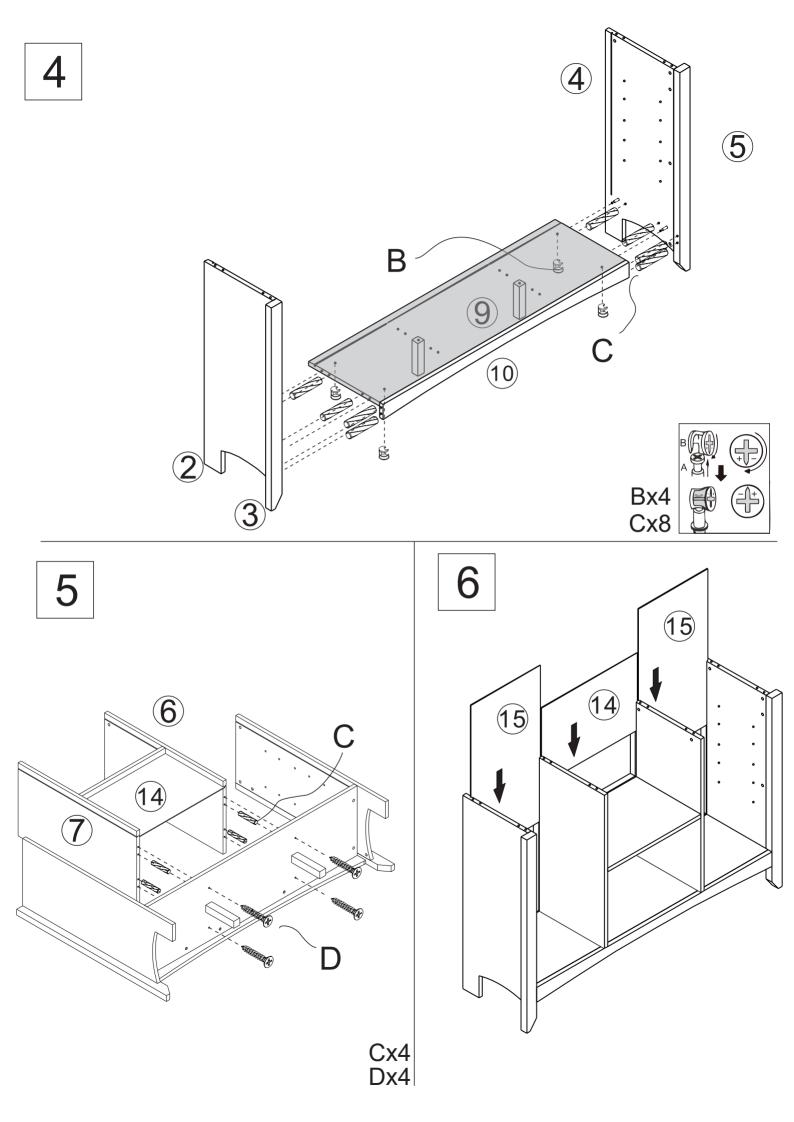


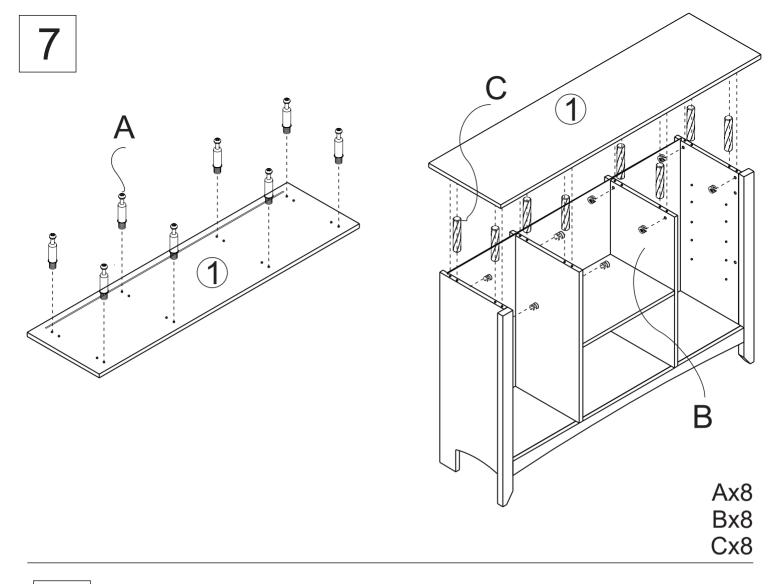

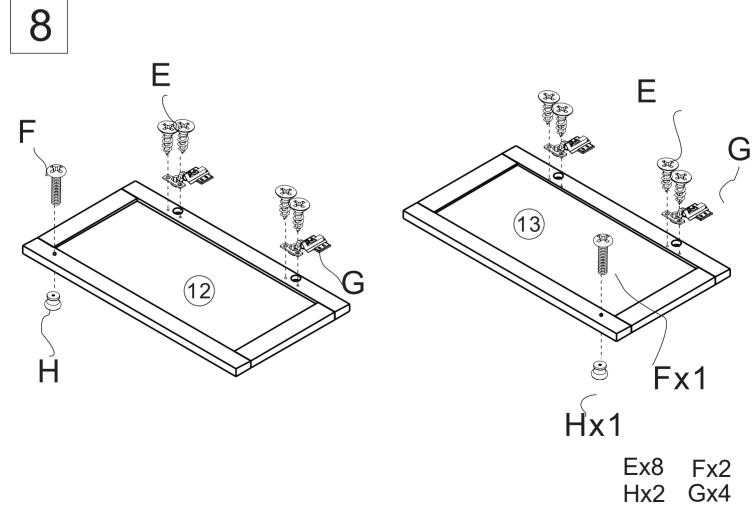

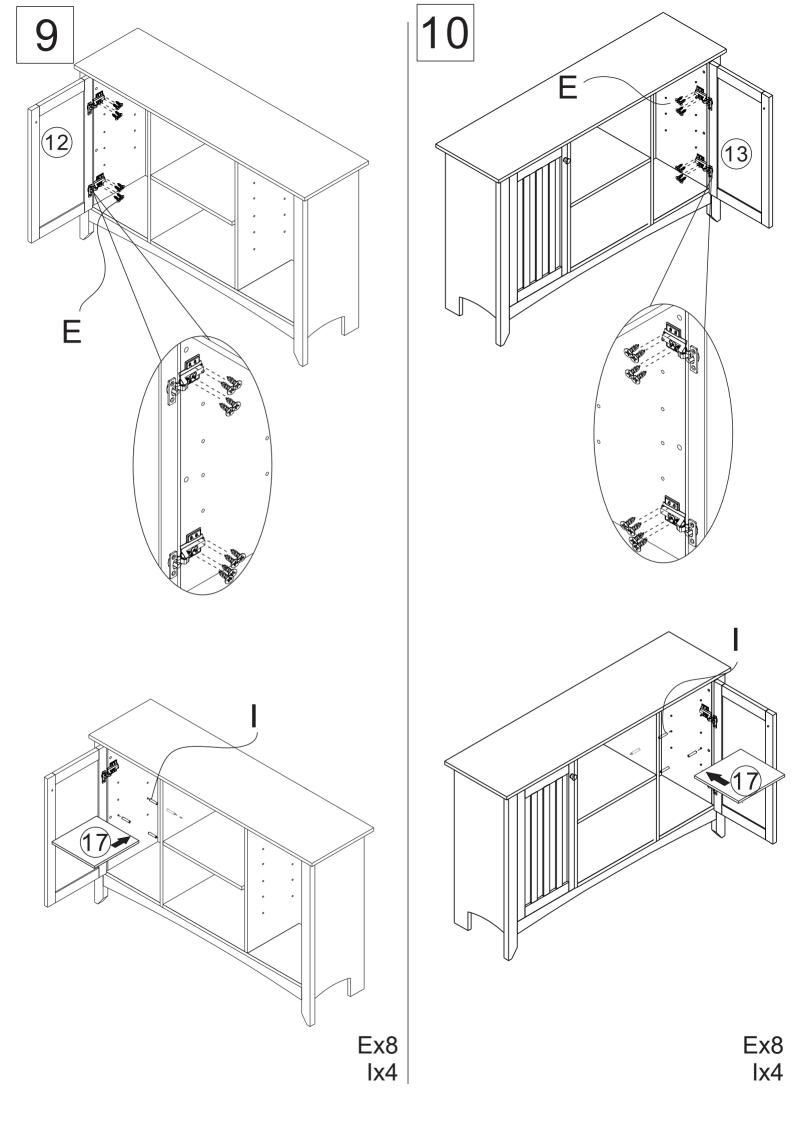

11

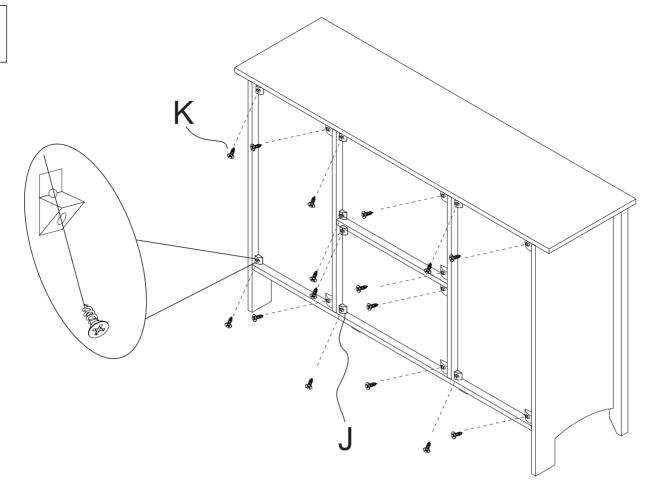

Kx16 Jx16

