




Assembly instruction of 2 doors with 2 drawers wardrobe

A		Ø15x12	59	PCS	J		764MM	1	PCS
B		Ø7x35	59	PCS	K			2	PCS
C		Ø8x30	22	PCS	L		Ø3.5x14	28	PCS
D		Ø4x40	12	PCS	M			4	PCS
E		Ø4x16	32	PCS	N			4	PCS
F		2079MM	2	PCS	O1		16"	2	SETS
G		18MM	76	PCS	O2				
H			8	PCS	P			4	PCS
I		Ø19	8	PCS	Q		M6x50	4	PCS
					R		Ø14	8	PCS

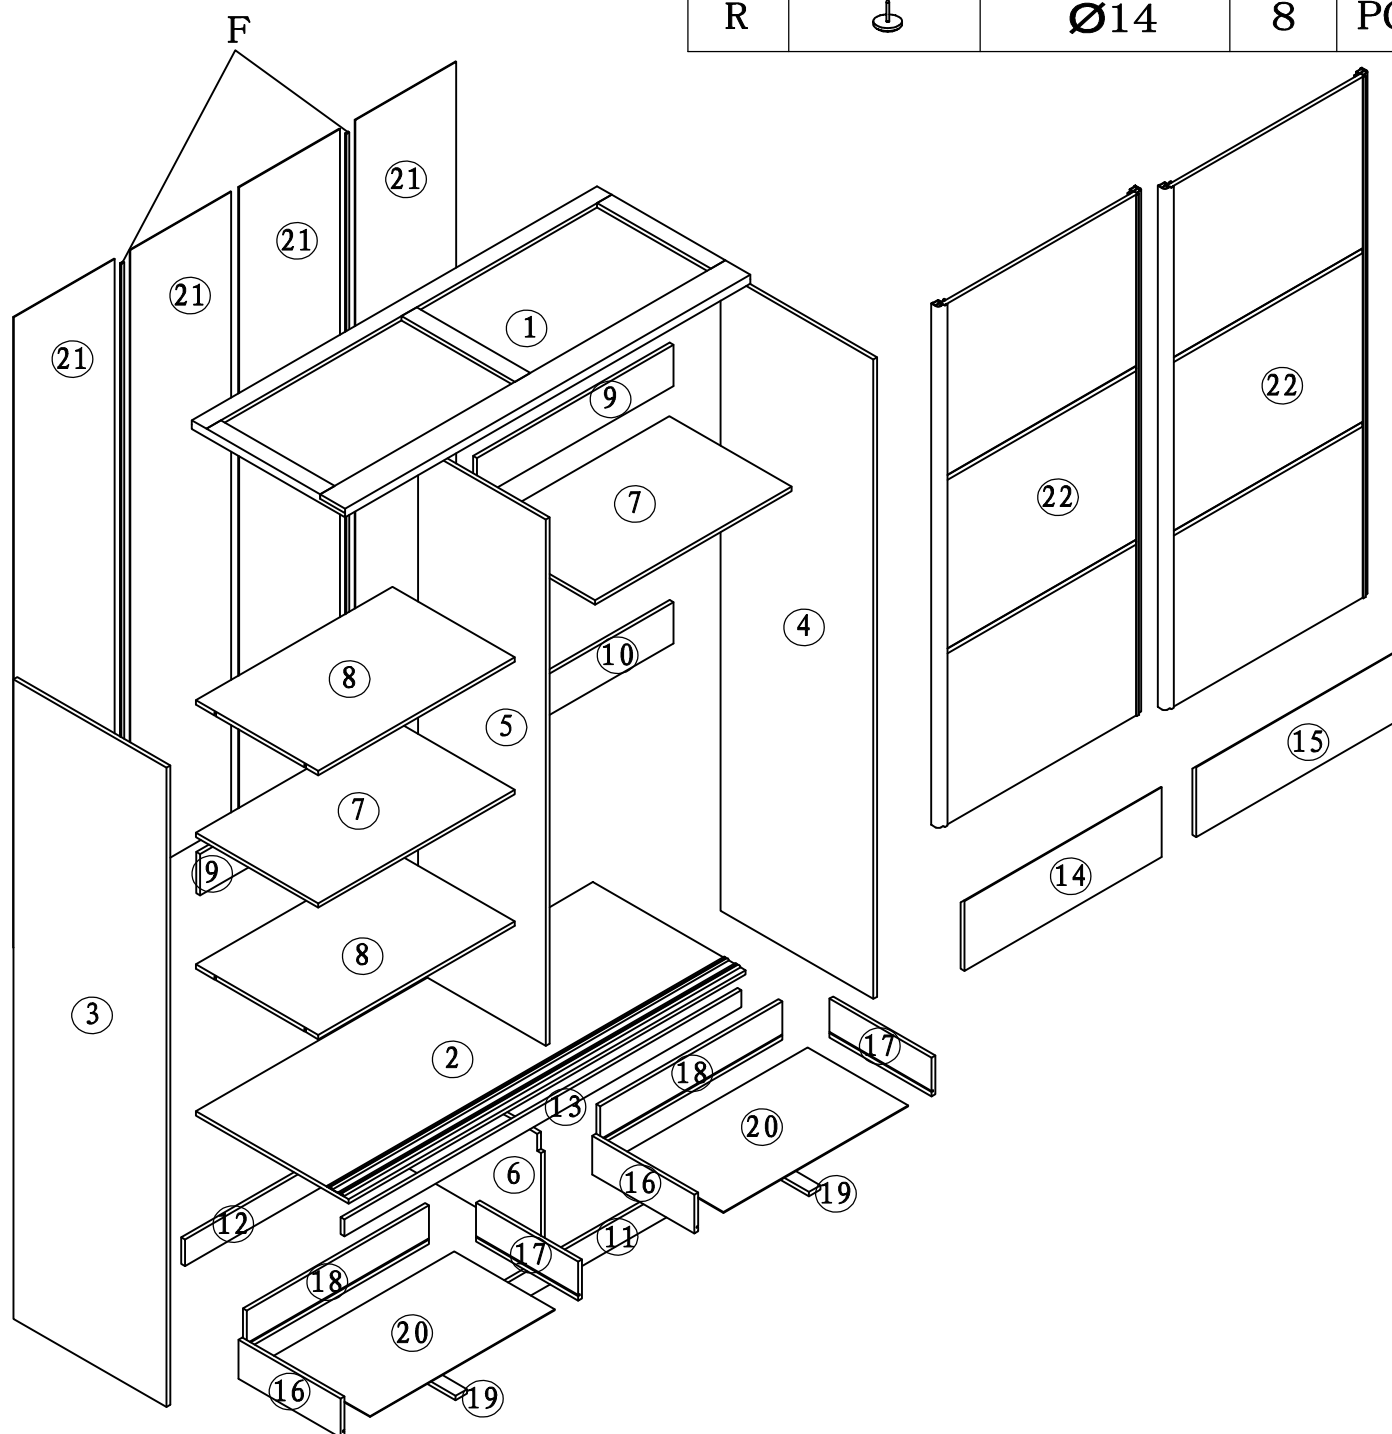


STEP 1

- Ax3
- Bx3
- Dx2
- Lx4
- 01x2

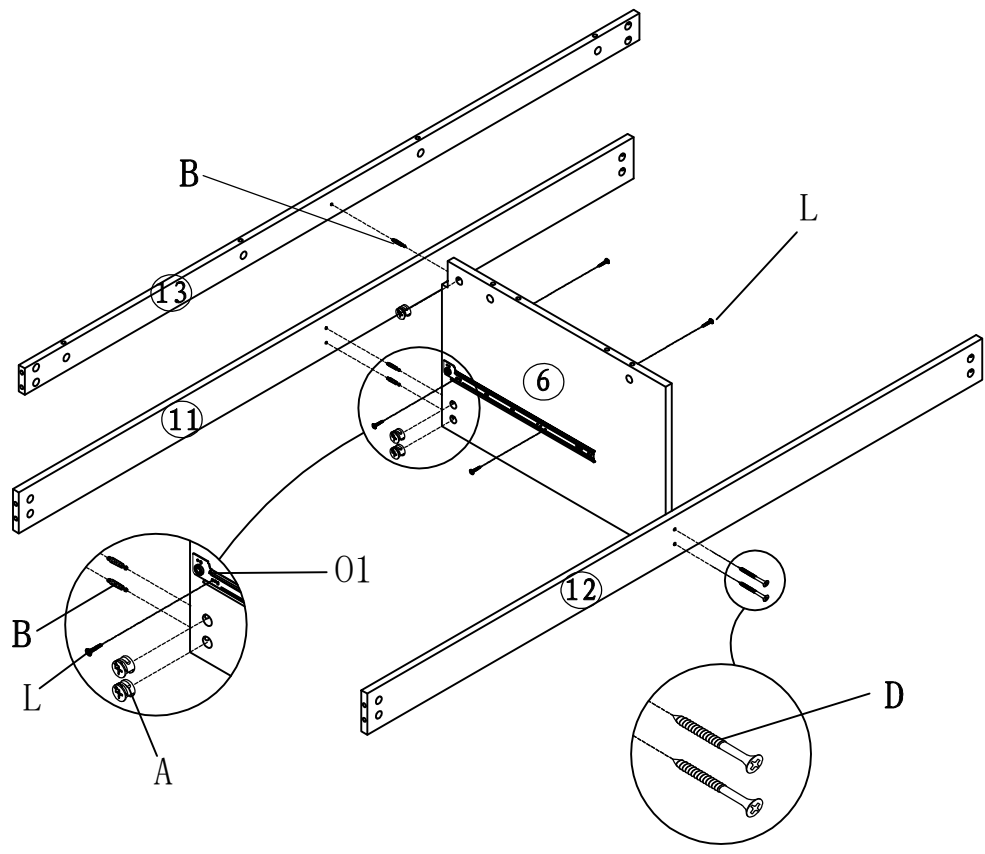


STEP 2

- Ax8
- Bx8
- Cx4

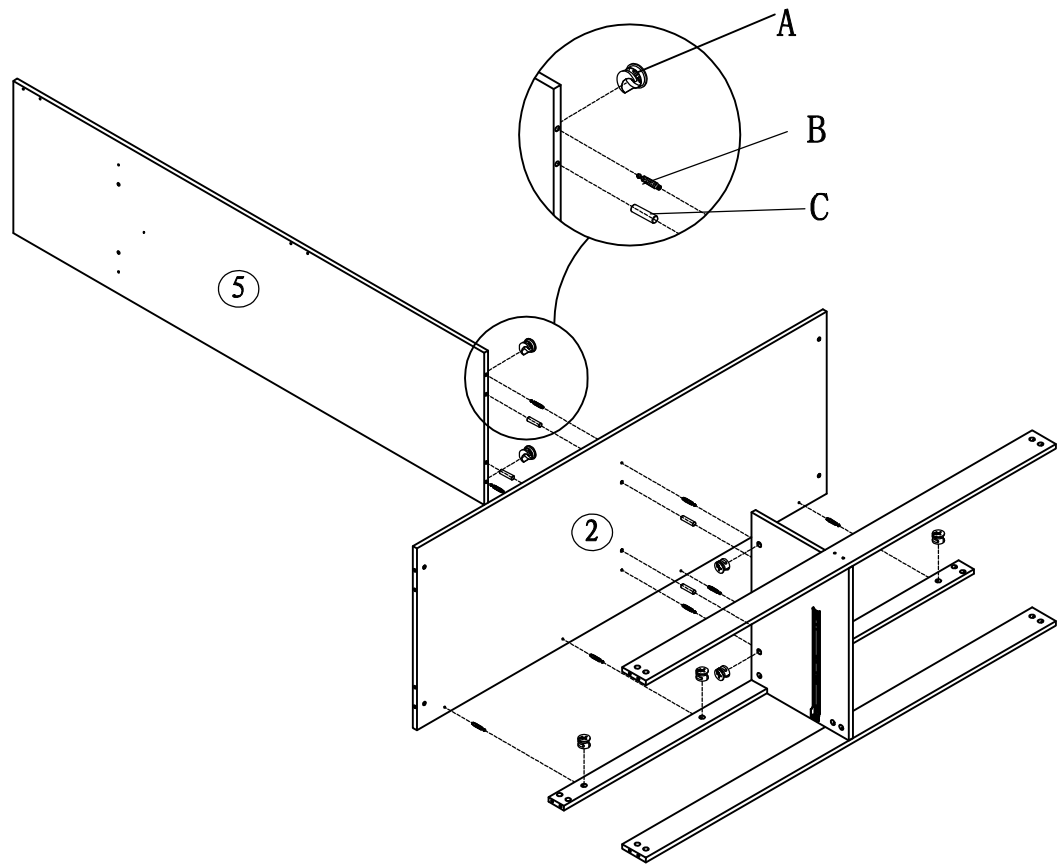


STEP 3

Lx4
01x2

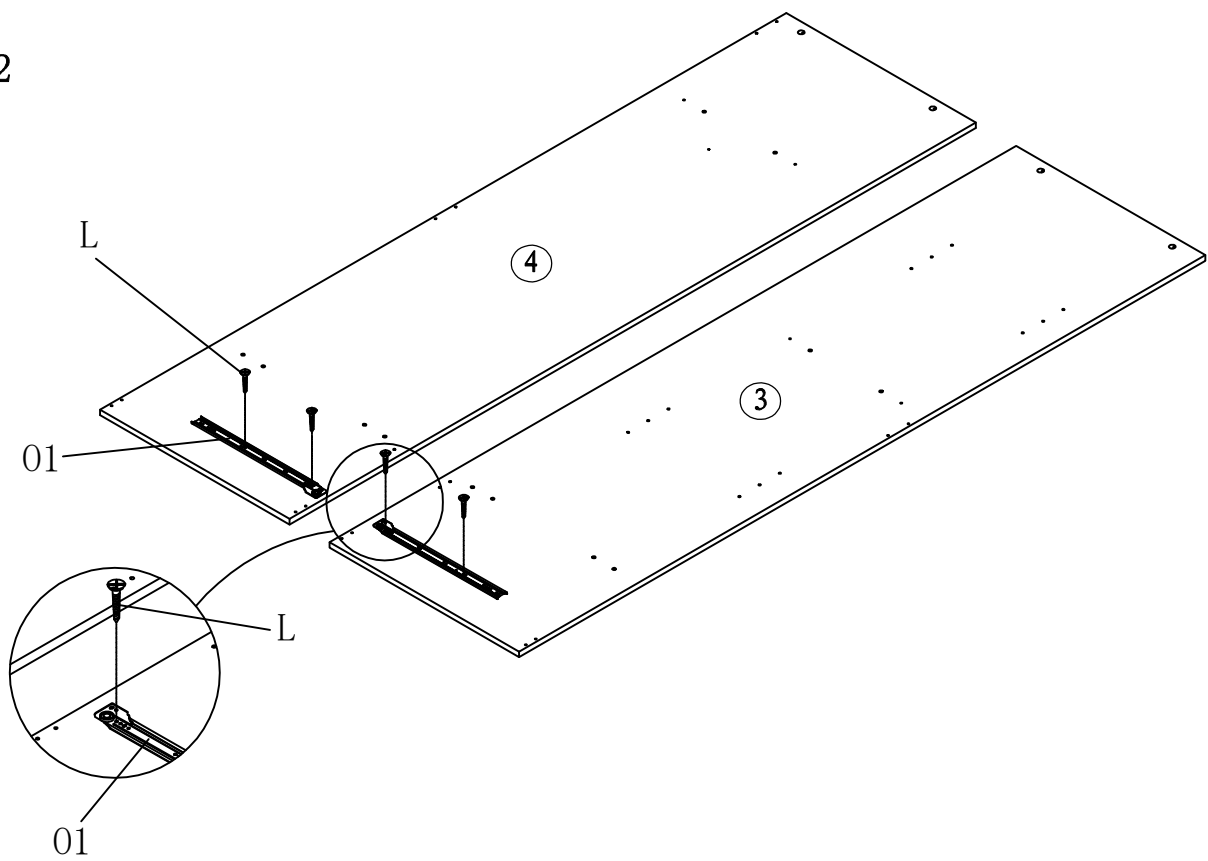


STEP 4

Ax18
Bx18
Cx6
Px2
Qx2

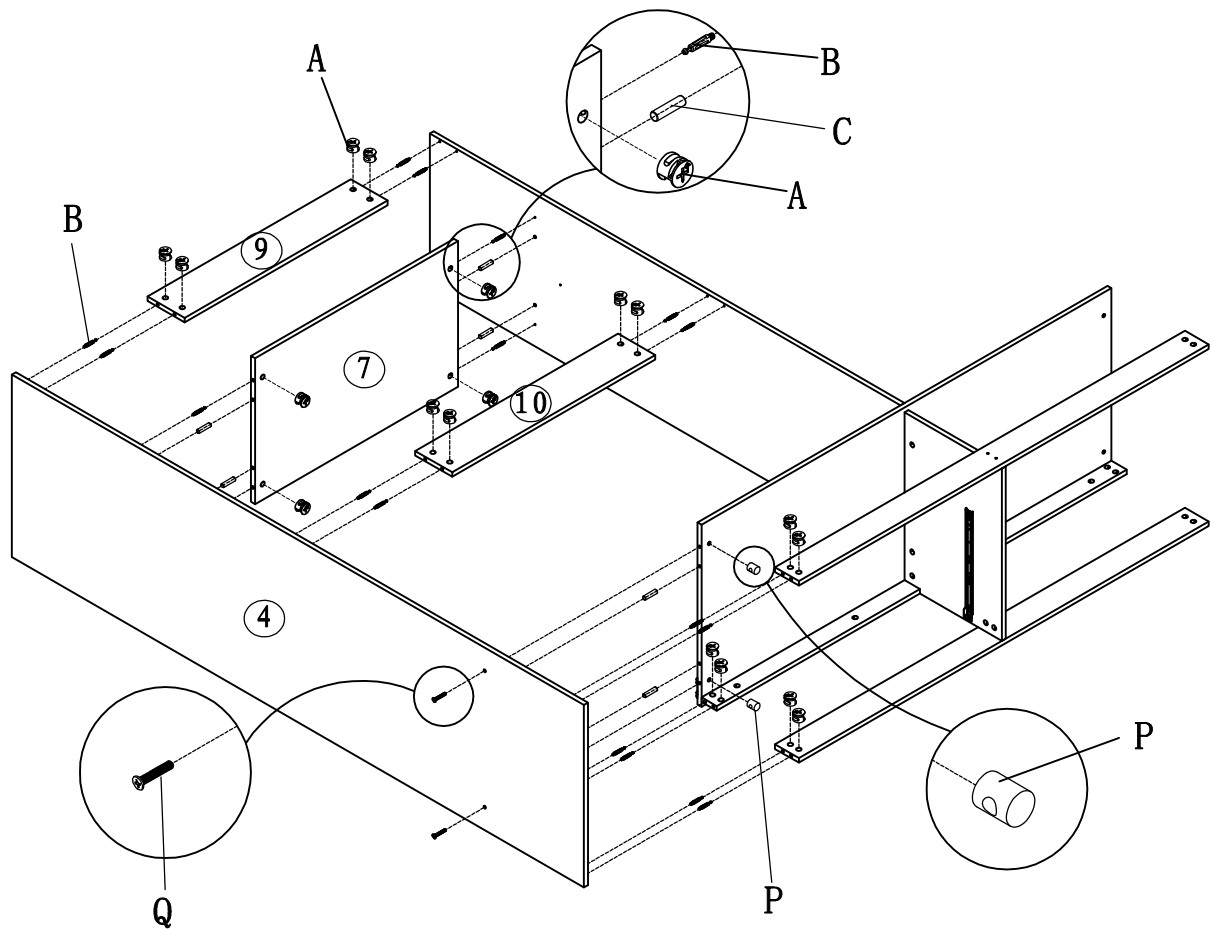


STEP 5

- Ax14
- Bx14
- Cx6
- Px2
- Qx2

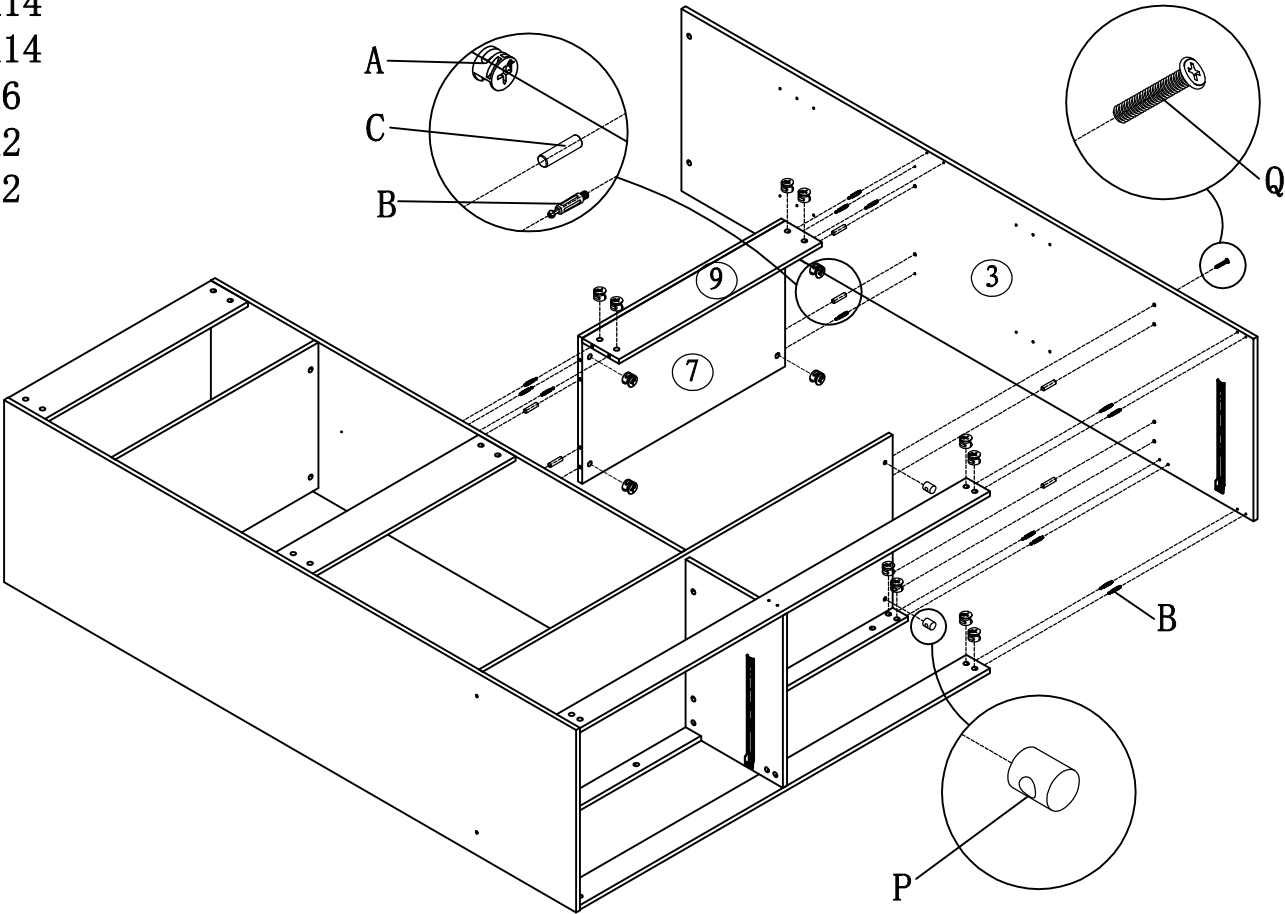


STEP 6

- Ax6
- Bx6
- Cx6

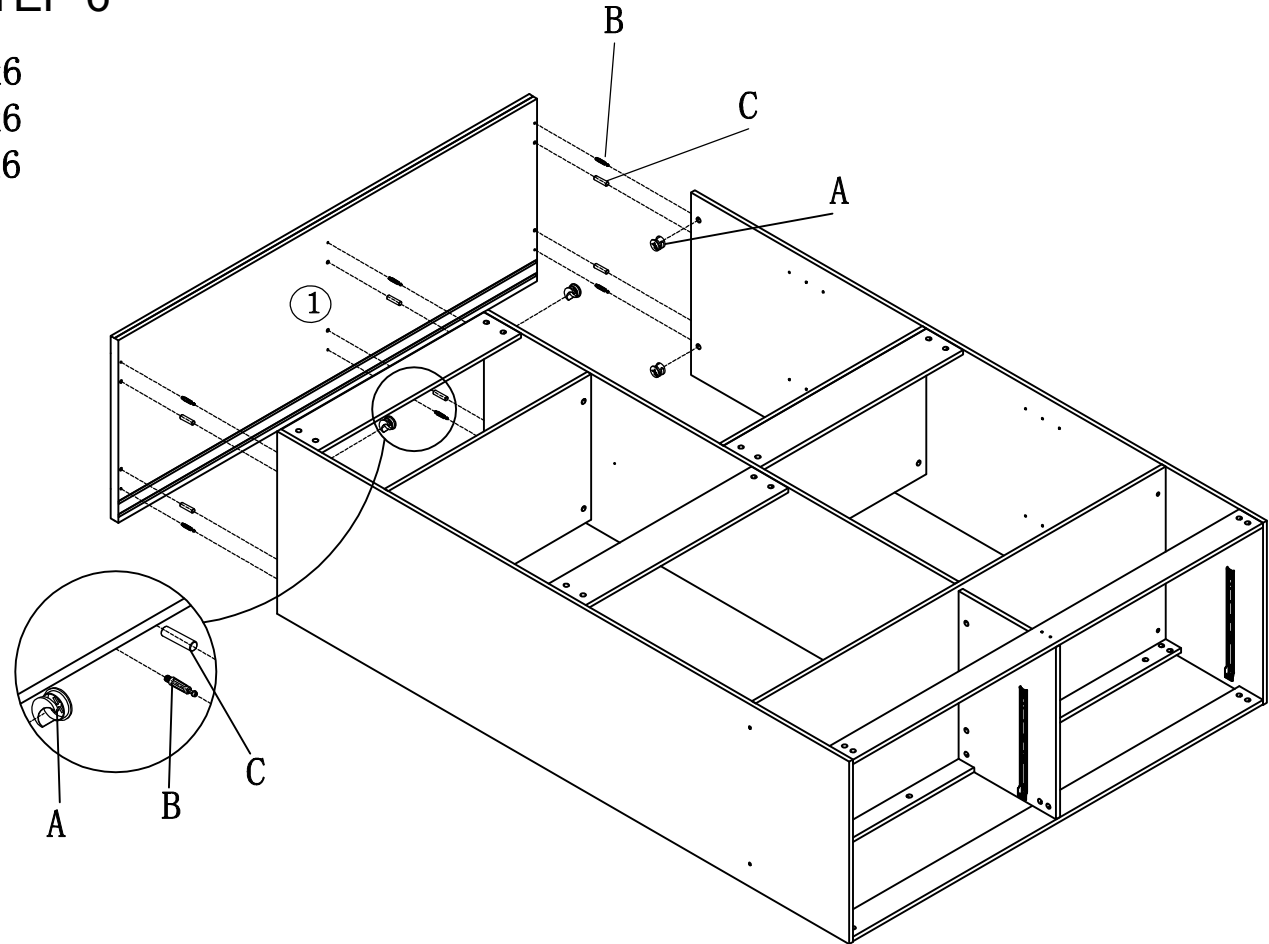


STEP 7

Fx2
Gx76
Lx8
Rx8

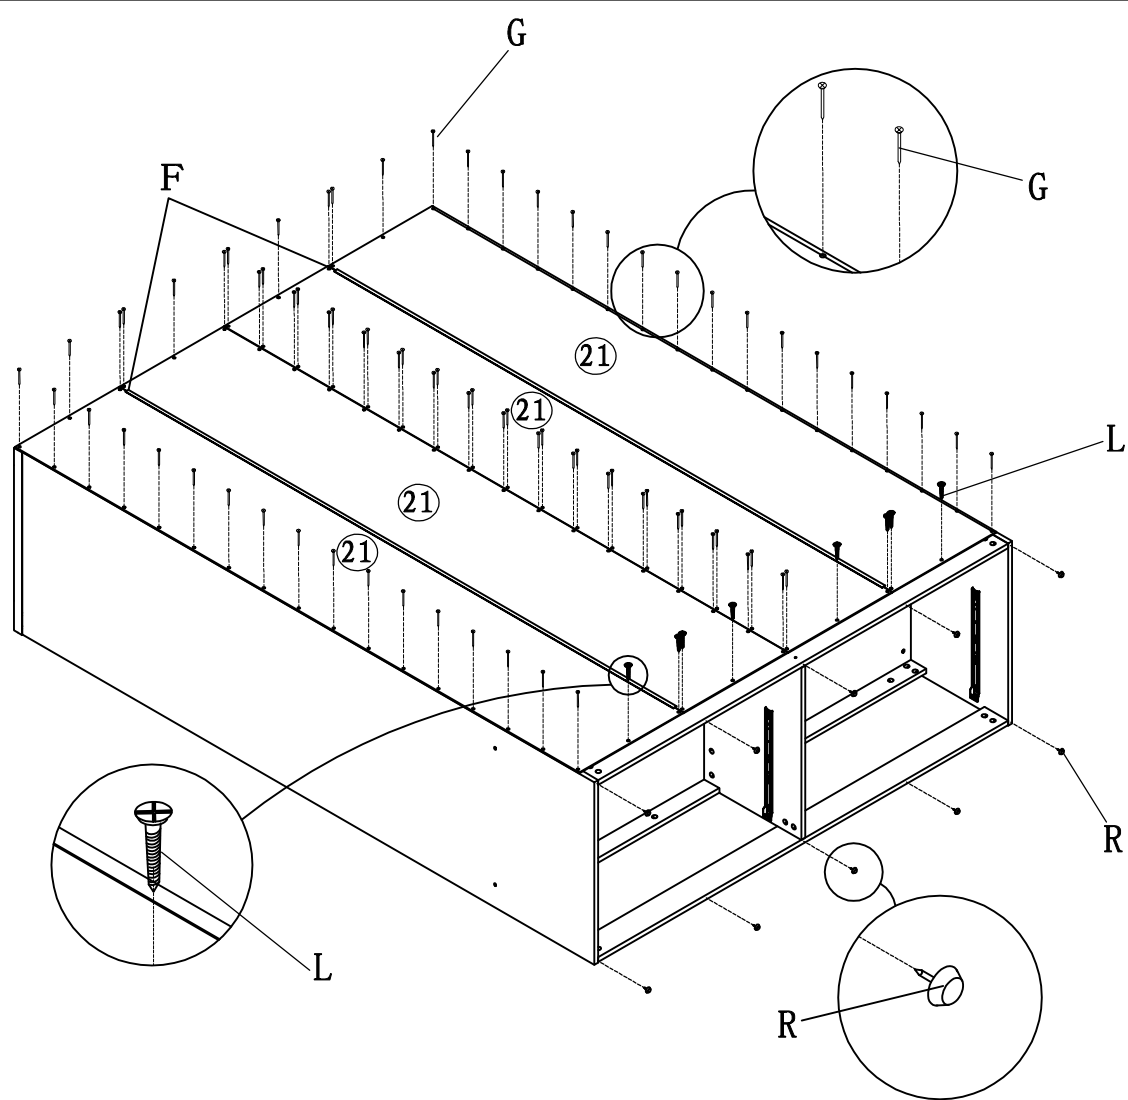


STEP 8

Hx8
Ix8
Jx1
Kx2
Lx4

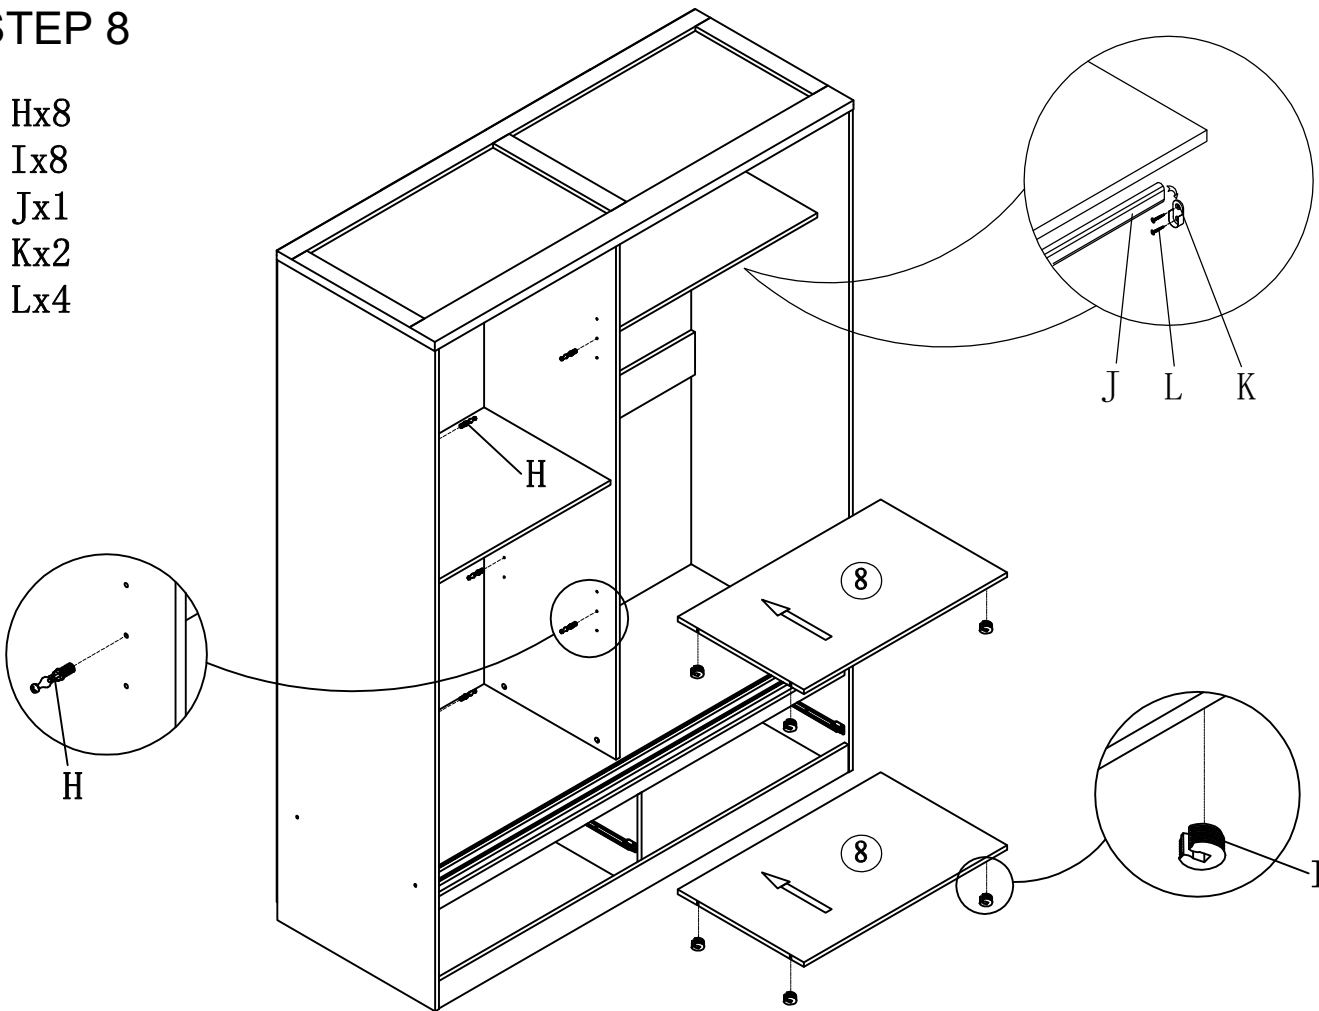


STEP 9

Ex32
Mx4
Nx4

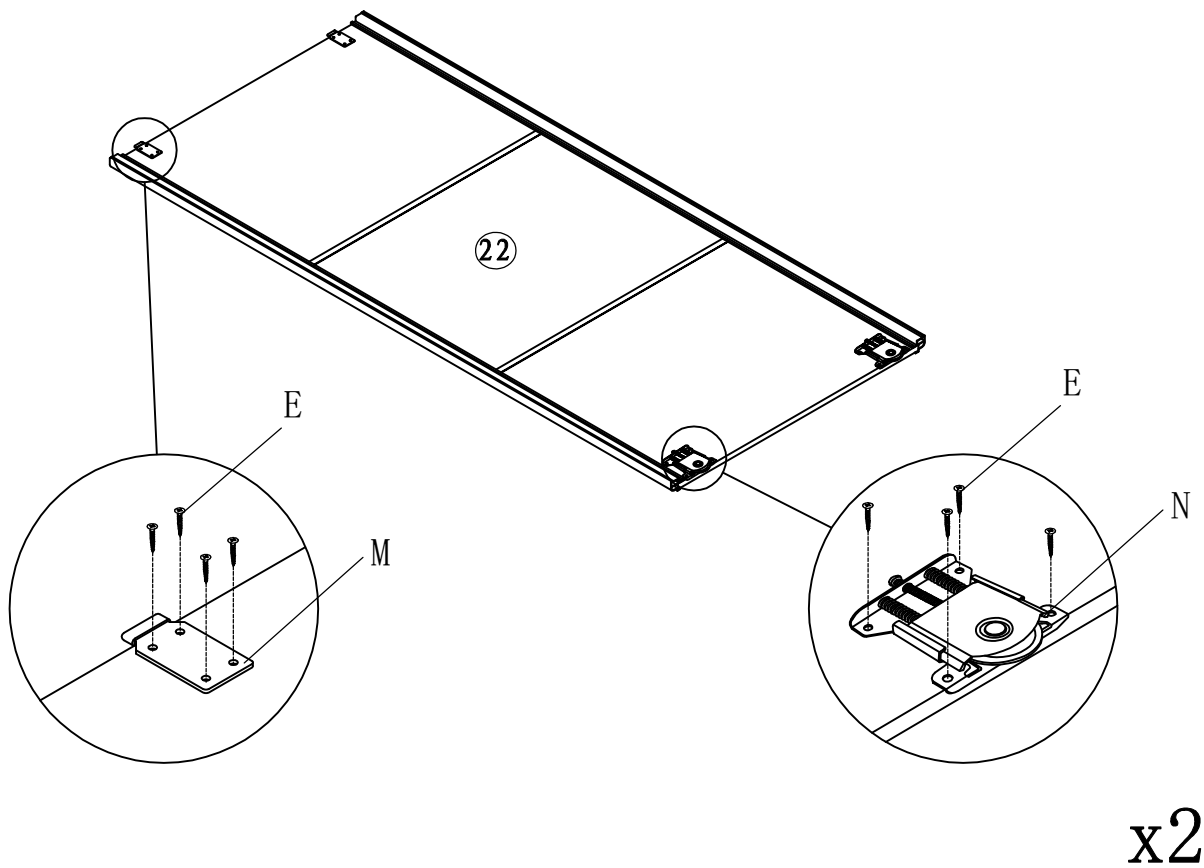


STEP 10

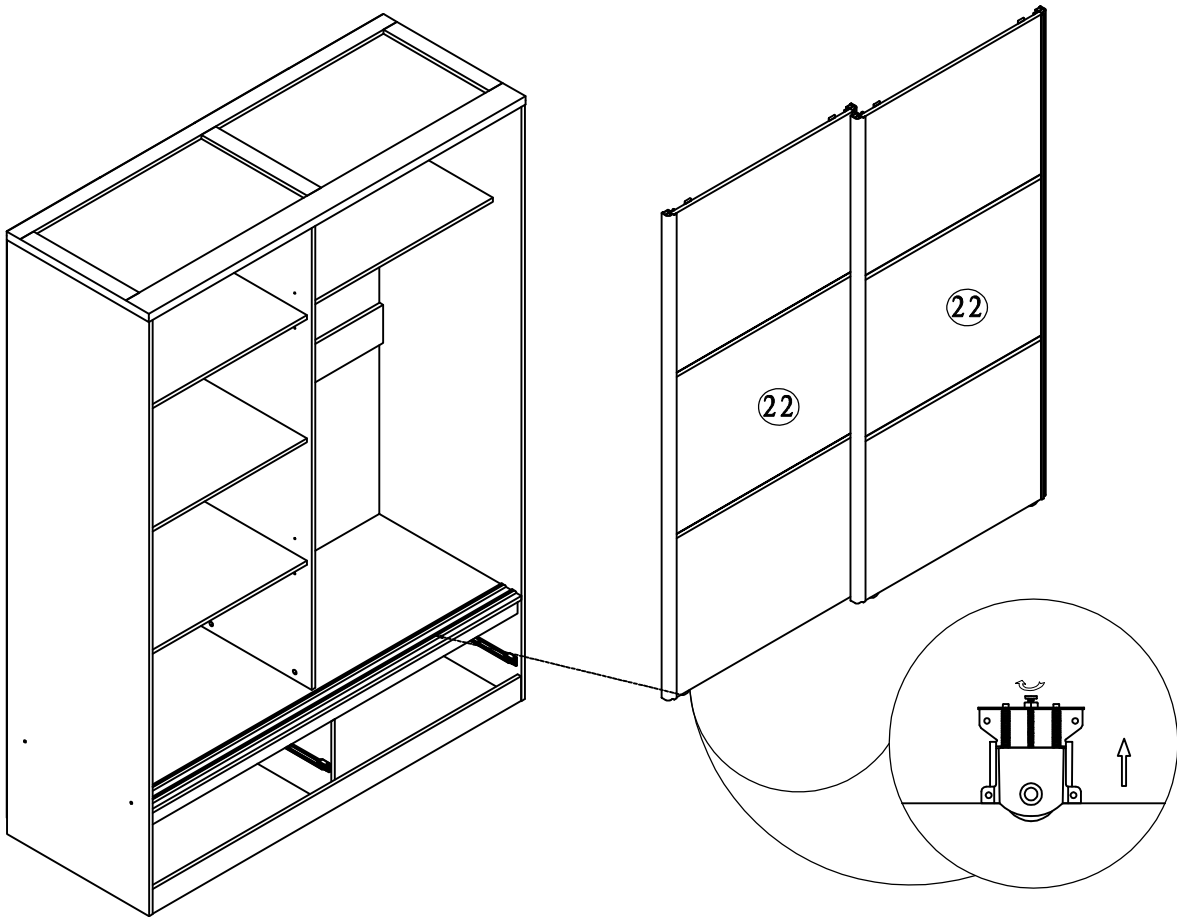


STEP 11

Ax10
Bx10
Dx10
Lx8
O2x4

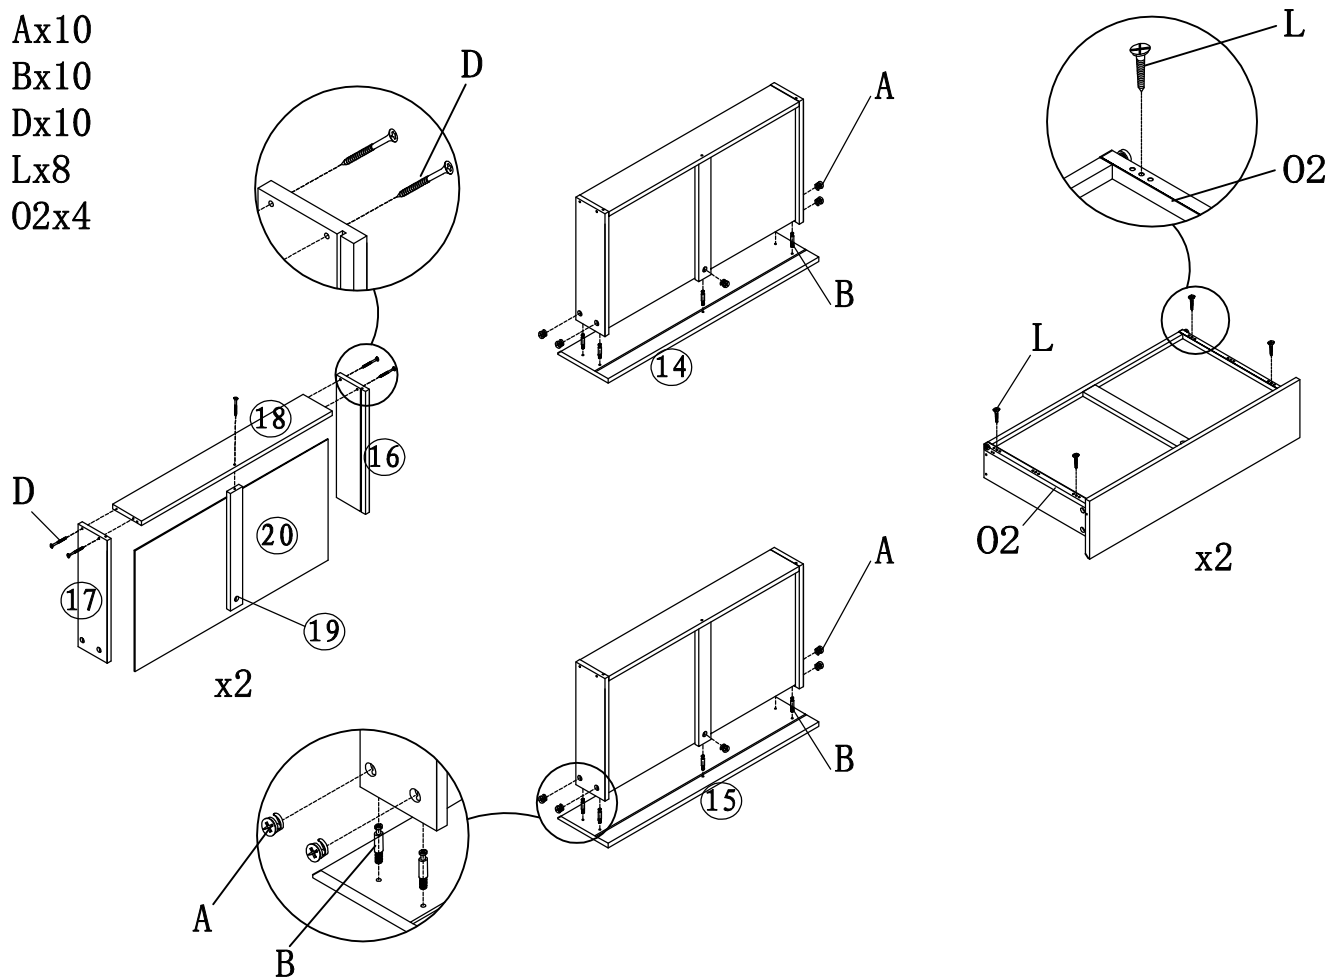

STEP 12

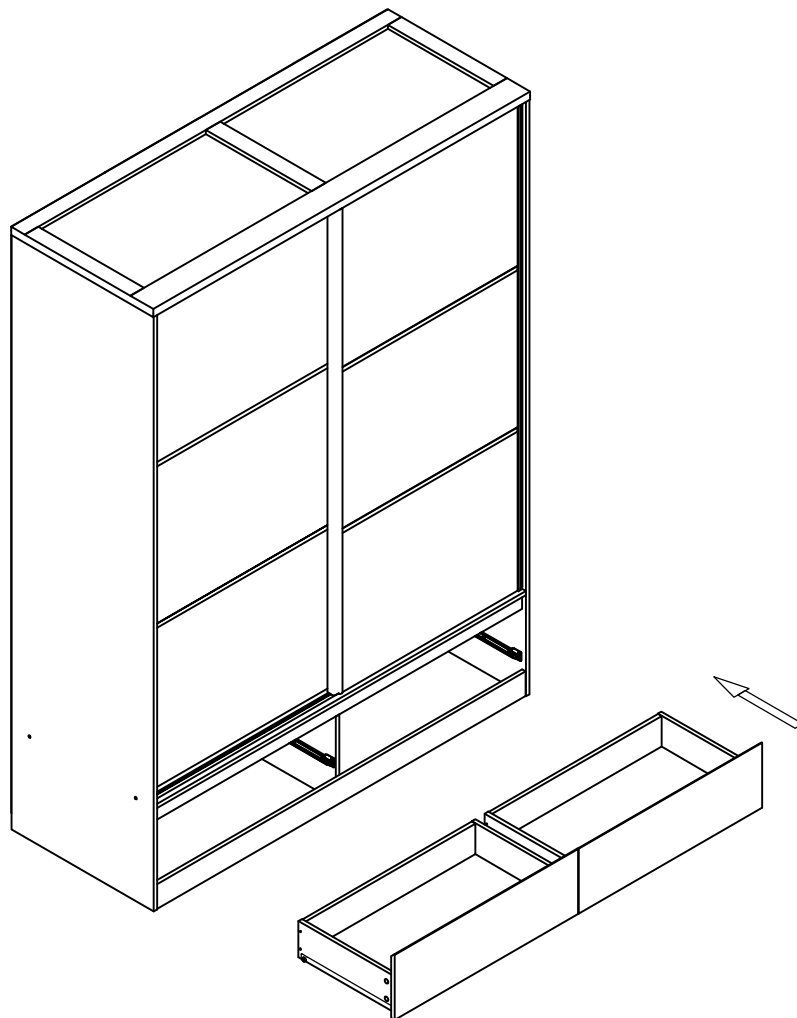

STEP 13

