

ASSEMBLY INSTRUCTIONS

MODEL : HD103A
QUEEN / FULL STORAGE BED(14+1+3)

(Box 1)
BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard	1 pc
B	Footboard	1 pc
C	Headboard Leg (L)	1 pcs

(Box 1)
HARDWARE LIST (HEADBOARD)

No	ITEM	Qty
1	JCBC M6 x 35mm	8 pcs
2	SPRING WASHER 1/4" Rbw	8 pcs
3	Flat Washer 1/4"ID x 13mmOD Blk	8 pcs
4	ALLEN KEY m4x65mm Blk	1 pc
5	12V+12W+1A Adaptor x 1 With ETL Certificate (US)	1 pc


(Box 2)
HARDWARE LIST (SIDE RAIL)

No	ITEM	Qty
5	CSK M4 x 32mm	32 pcs
6	JCBC M6 x 35mm	2 pcs
7	JCBC M6 x 50mm	3 pcs
8	SPRING WASHER 1/4" Rbw	2 pcs
9	Flat Washer 1/4"ID x 13mmOD Blk	2 pcs
10	ALLEN KEY m4x65mm Blk	1 pc
11	ALLEN KEY m5x65mm Blk	1 pc


(Box 3)
BOX OF DRAWER

No	ITEM	Qty
J	Drawer	2 pcs

STEP 1 : Attach Head Board Leg (C) to Head Board (A) as shown using JCBC BOLT (1) with Spring Washer (2),Flat washer (3) and securing with ALLEN KEY (4).

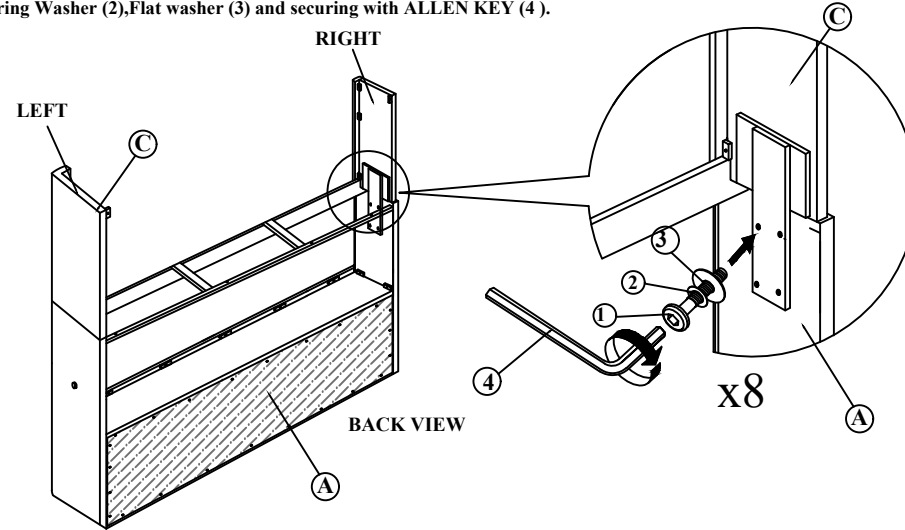


STEP 2 : Loosen the JCBB Bolt from Headboard (A) and Footboard (B) using ALLEN KEY (11). Attach the Side Rail (D) to Headboard (A) and Footboard (B) by pushing the bracket down to fit it. Tighten the JCBB Bolt by ALLEN KEY (11).

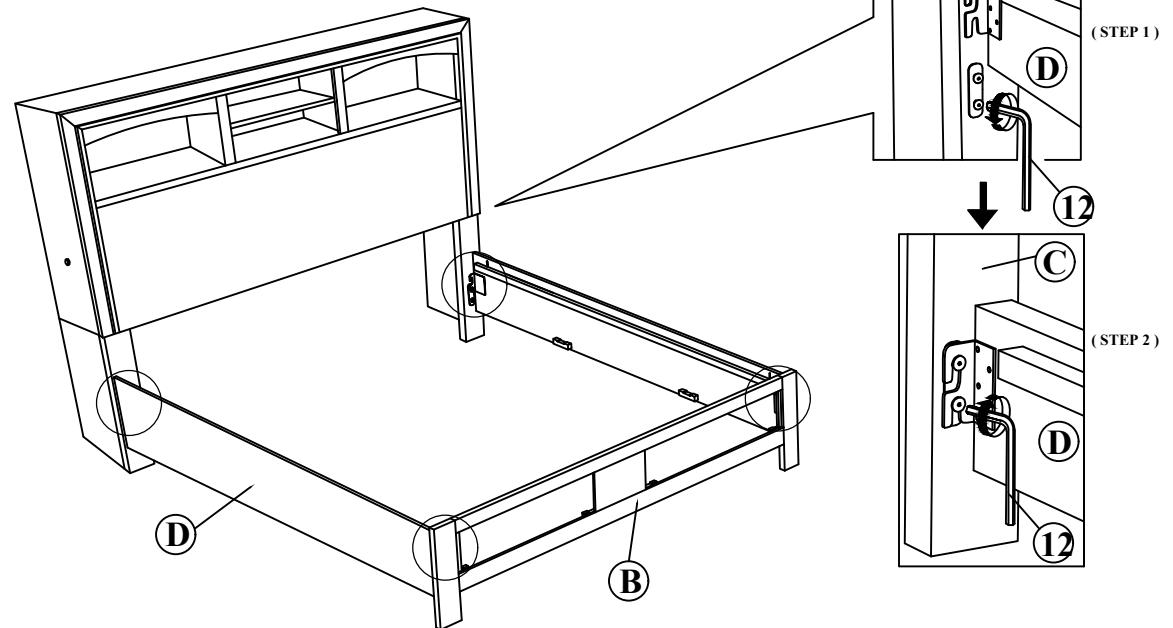


ASSEMBLY INSTRUCTIONS

STEP 3 : Attach the Center Slat Drawer (E) to Side Rail (D) as shown using CSK Screw (5) and tighten with Screw Driver.(Not Included)

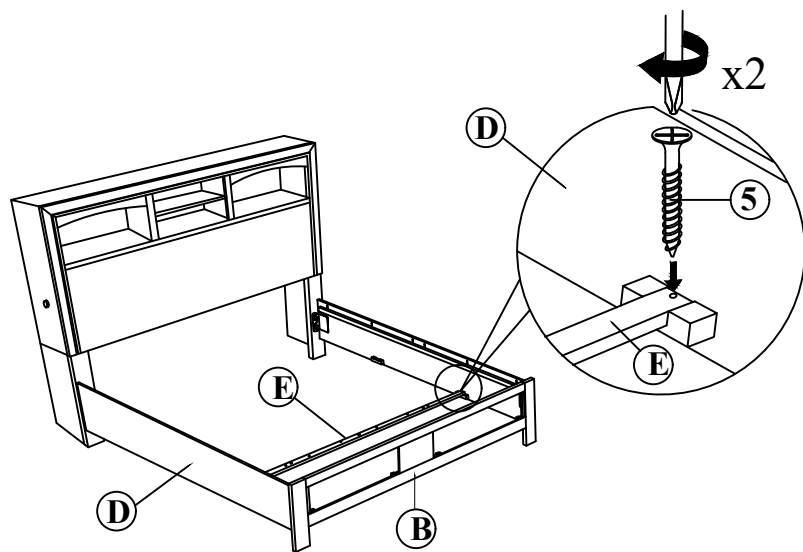


STEP 4 : Attach the Support Slat Drawer (H) to Center Slat Drawer (E) as shown using JCBC Bolt (7) and tighten with ALLEN KEY (10).

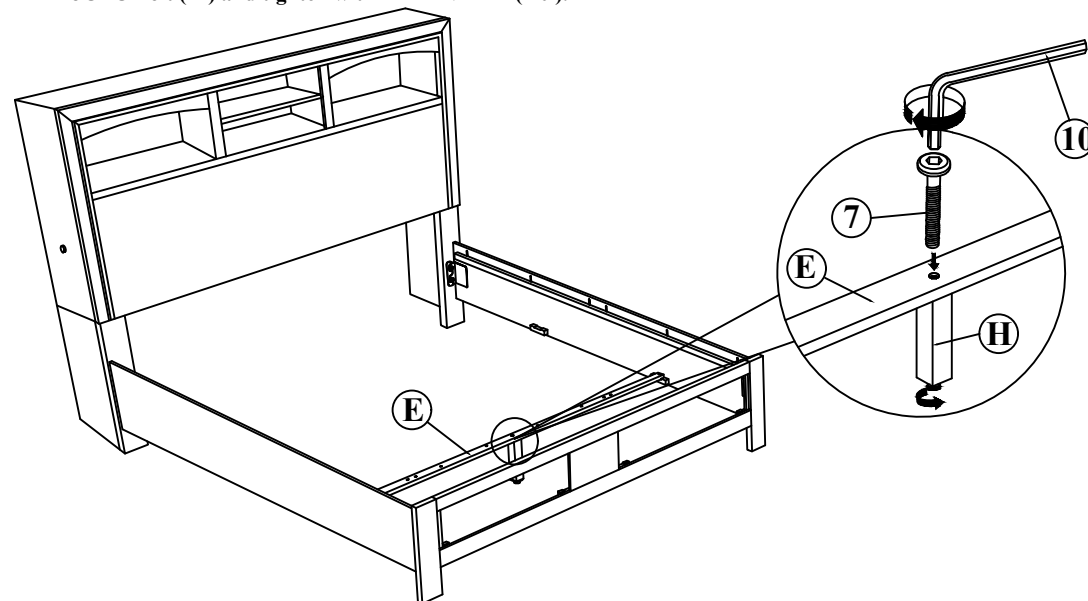


STEP 5.1 : Attach the Drawer Support Rail (I) as shown using CSK Screw (5) and tighten with Screw Driver.(Not Included)

STEP 5.2 : Using JCBC Bolt (8) with Spring Washer (9),Flat Washer (10) and securing with ALLEN KEY (11).

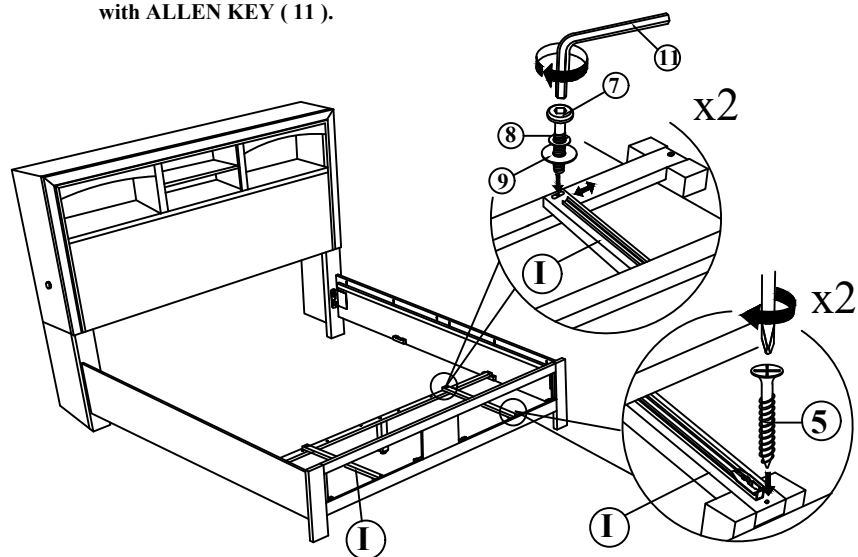


STEP 6.1 : Insert the Drawer (J) at the Drawer Support Rail (I).

STEP 6.2 : Remove HANDLE and using a Philips head screw driver as shown

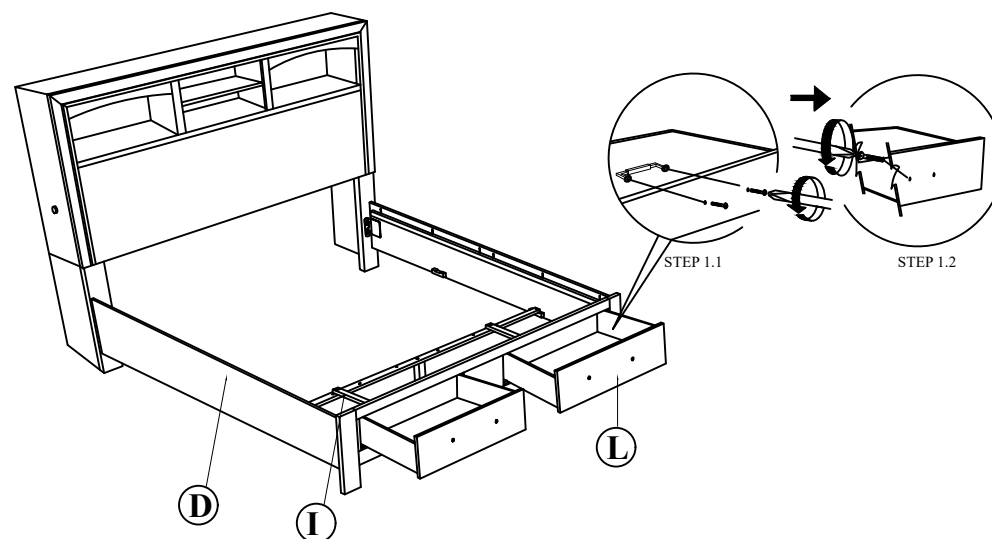


ASSEMBLY INSTRUCTIONS


STEP 7 : Attach slat support (G) and center slat (E) to bed slat (F) as shown. Using JCBC BOLT (7) then securing with ALLEN KEY (10).

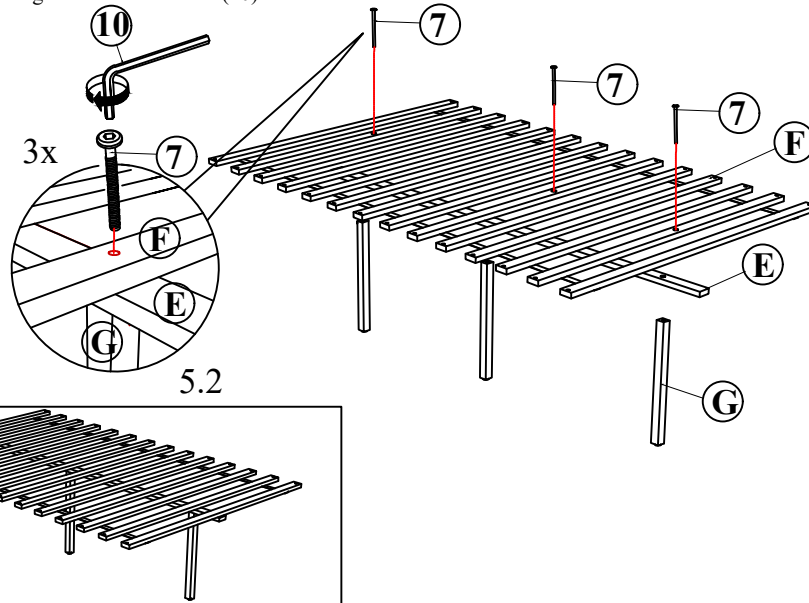

STEP 8 : Fix the Bed Slat (F) by push closely to the Side Rail (D) by using CSK Screw (5) as shown.

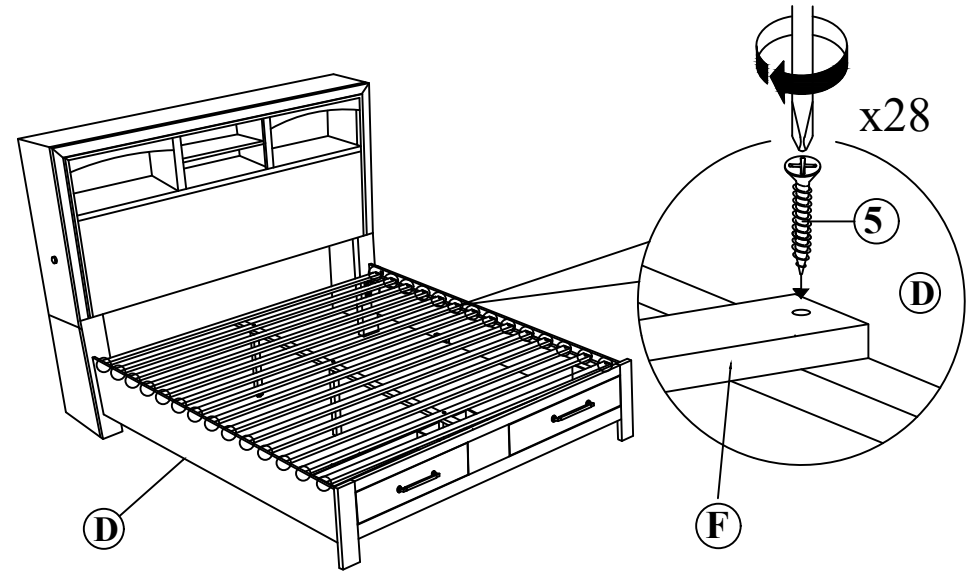

STEP 9 :

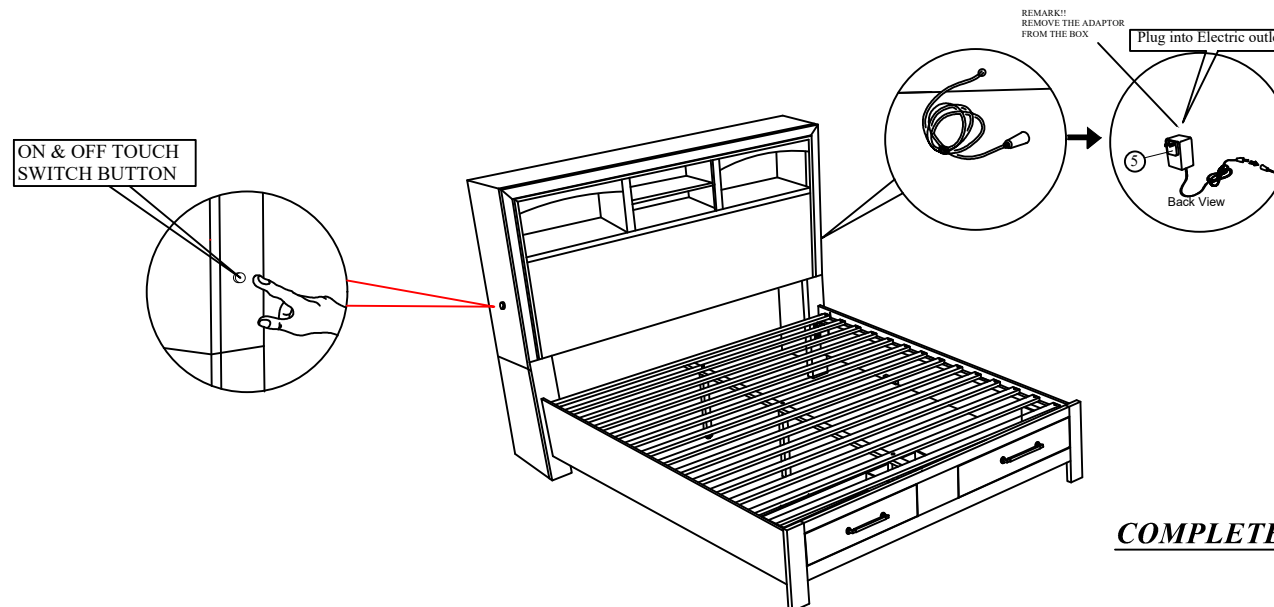

COMPLETED ASSEMBLY

ASSEMBLY INSTRUCTIONS

MODEL : HD103A
KING STORAGE BED(14+1+3)

(Box 1)
BOX OF HEADBOARD & FOOTBOARD

No	ITEM	Qty
A	Headboard	1 pc
B	Footboard	1 pc
C	Headboard Leg (L)	1 pcs

(Box 1)
HARDWARE LIST (HEADBOARD)

No	ITEM	Qty
1	JCBC M6 x 35mm	8 pcs
2	SPRING WASHER 1/4" Rbw	8 pcs
3	Flat Washer 1/4"ID x 13mmOD Blk	8 pcs
4	ALLEN KEY m4x65mm Blk	1 pc
5	12V+12W+1A Adaptor x 1 With ETL Certificate (US)	1 pc

(Box 2)
HARDWARE LIST (SIDE RAIL)

No	ITEM	Qty
5	CSK M4 x 32mm	32 pcs
6	JCBC M6 x 35mm	2 pcs
7	JCBC M6 x 50mm	3 pcs
8	SPRING WASHER 1/4" Rbw	2 pcs
9	Flat Washer 1/4"ID x 13mmOD Blk	2 pcs
10	ALLEN KEY m4x65mm Blk	1 pc
11	ALLEN KEY m5x65mm Blk	1 pc


(Box 2)
BOX OF SIDE RAIL

No	ITEM	Qty
D	Side rail	2 pcs
E	Center slat drawer	1 pc
F	Bed slat	3 pcs
G	Bed slat support	3 pcs
H	Drawer slat support	1 pc
I	Drawer support rail	2 pcs


(Box 3)
BOX OF DRAWER

No	ITEM	Qty
J	Drawer	2 pcs

STEP 1 : Attach Head Board Leg (C) to Head Board (A) as shown using JCBC BOLT (1) with Spring Washer (2), Flat washer (3) and securing with ALLEN KEY (4).

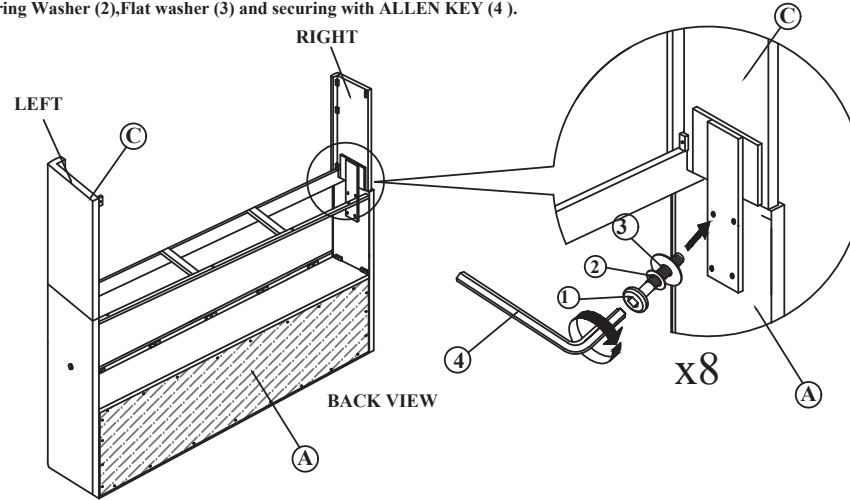

STEP 2 : Loosen the JCBB Bolt from Headboard (A) and Footboard (B) using ALLEN KEY (11). Attach the Side Rail (D) to Headboard (A) and Footboard (B) by pushing the bracket down to fit it. Tighten the JCBB Bolt by ALLEN KEY (11).

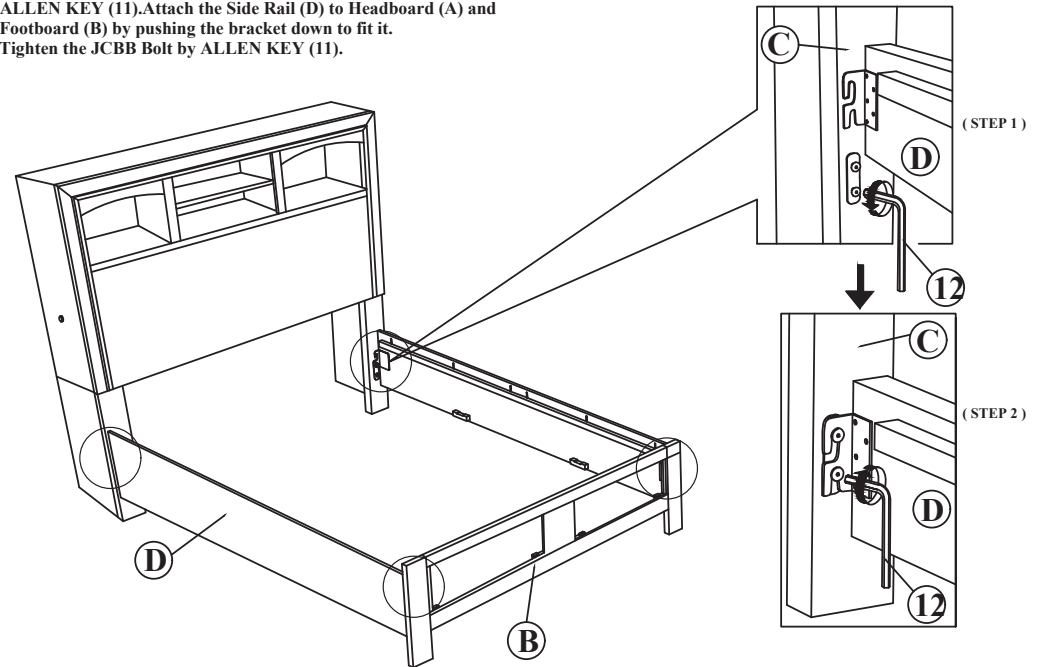


NOTE : MUST TIGHTEN SCREWS PERIODCALLY. SCREW NATURALLY LOOSEN WITH USE. CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


PAGE 1 OF 3

ASSEMBLY INSTRUCTIONS

STEP 3 : Attach the Center Slat Drawer (E) to Side Rail (D) as shown using CSK Screw (5) and tighten with Screw Driver.(Not Included)

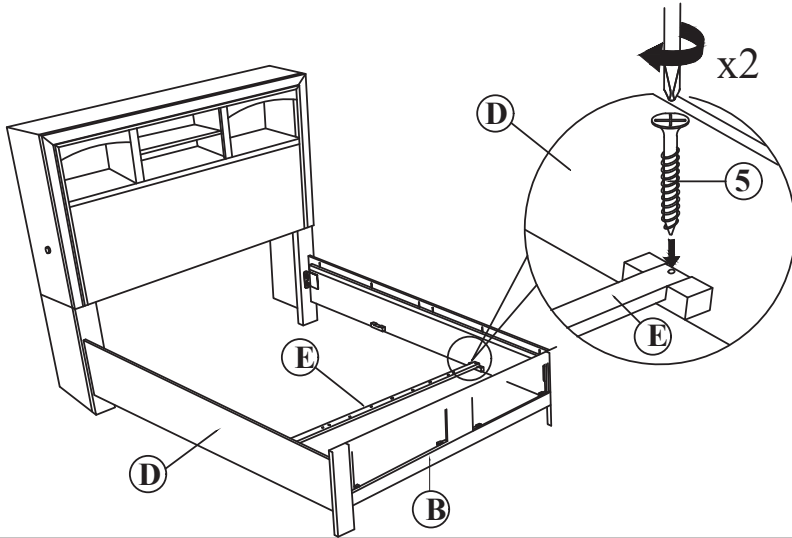


STEP 4 : Attach the Support Slat Drawer (H) to Center Slat Drawer (E) as shown using JCBC Bolt (7) and tighten with ALLEN KEY (10).

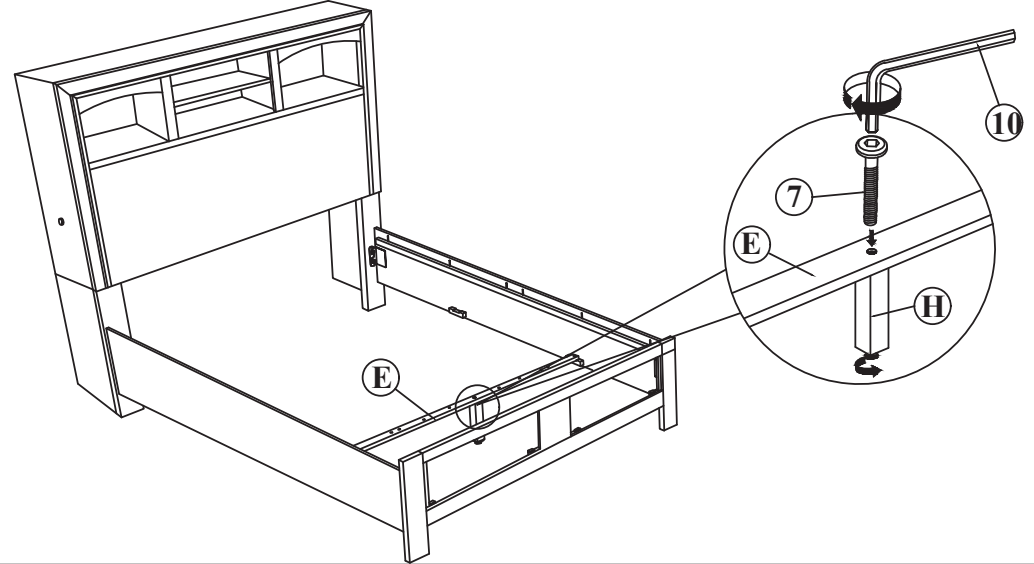


STEP 5.1 : Attach the Drawer Support Rail (I) as shown using CSK Screw (5) and tighten with Screw Driver.(Not Included)

STEP 5.2 : Using JCBC Bolt (8) with Spring Washer (9),Flat Washer (10) and securing with ALLEN KEY (11).

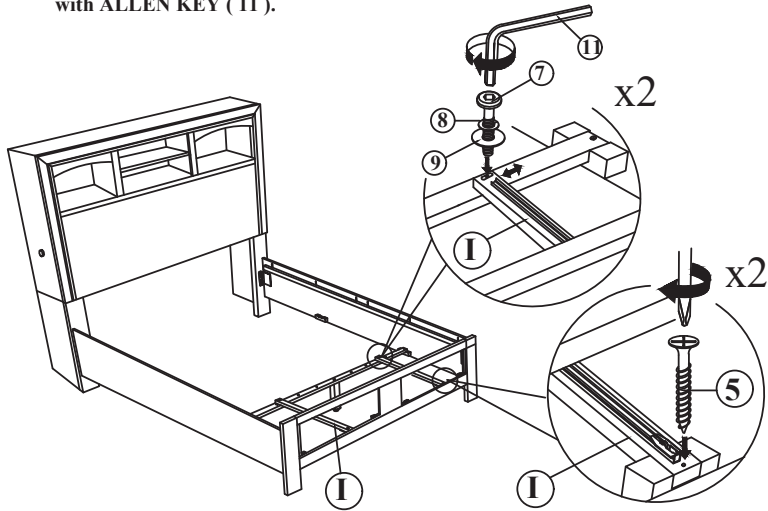

STEP 6.1 : Insert the Drawer (J) at the Drawer Support Rail (I).

STEP 6.2 : Remove HANDLE and using a Philips head screw driver as shown

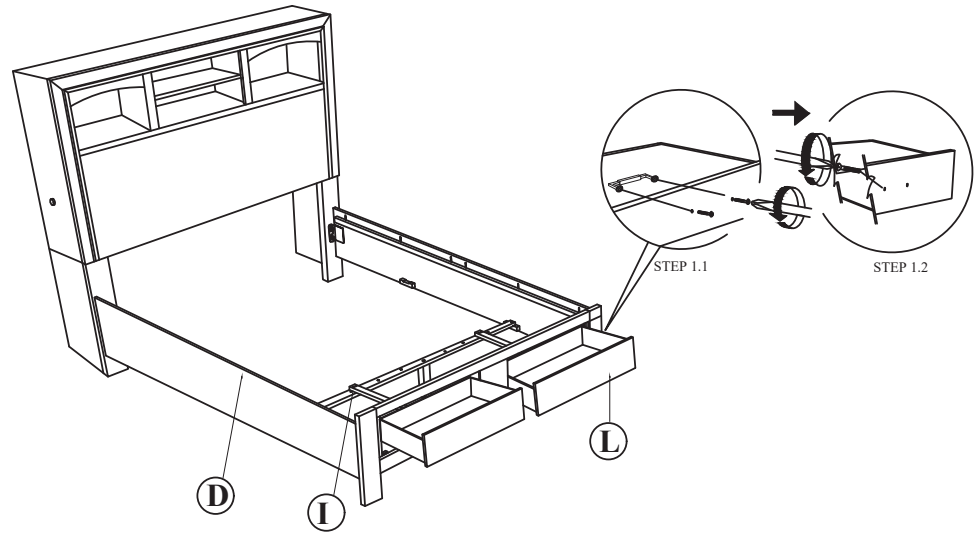


NOTE : MUST TIGHTEN SCREWS PERIODCALLY.SCREW NATURALLY LOOSEN WITH USE.CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


PAGE 2 OF 3

ASSEMBLY INSTRUCTIONS


STEP 7 : Attach slat support (G) and center slat (E) to bed slat (F) as shown. Using JCBC BOLT (7) then securing with ALLEN KEY (10).

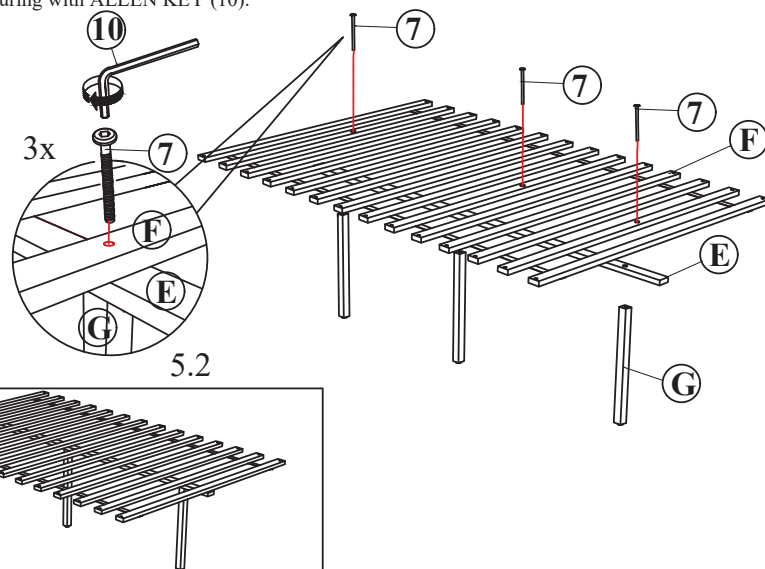

STEP 8 : Fix the Bed Slat (F) by push closely to the Side Rail (D) by using CSK Screw (5) as shown.

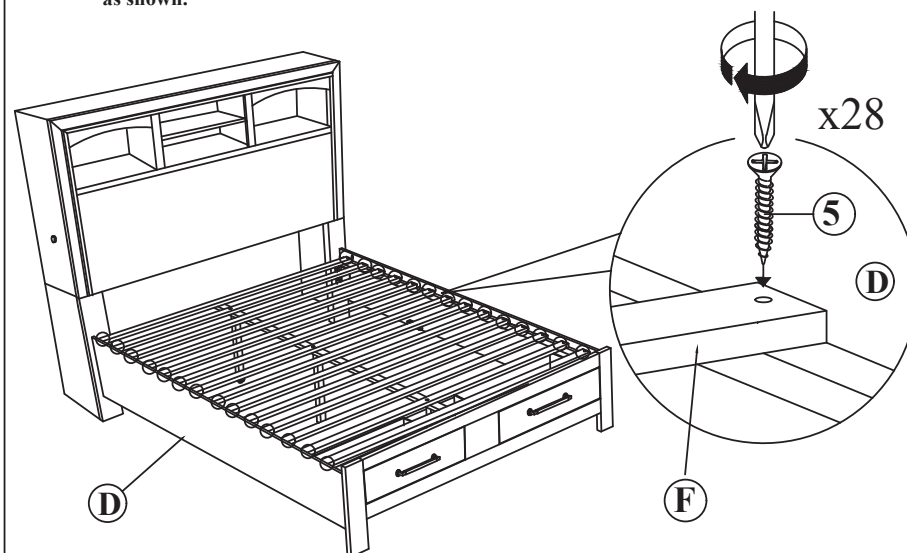

STEP 9 :

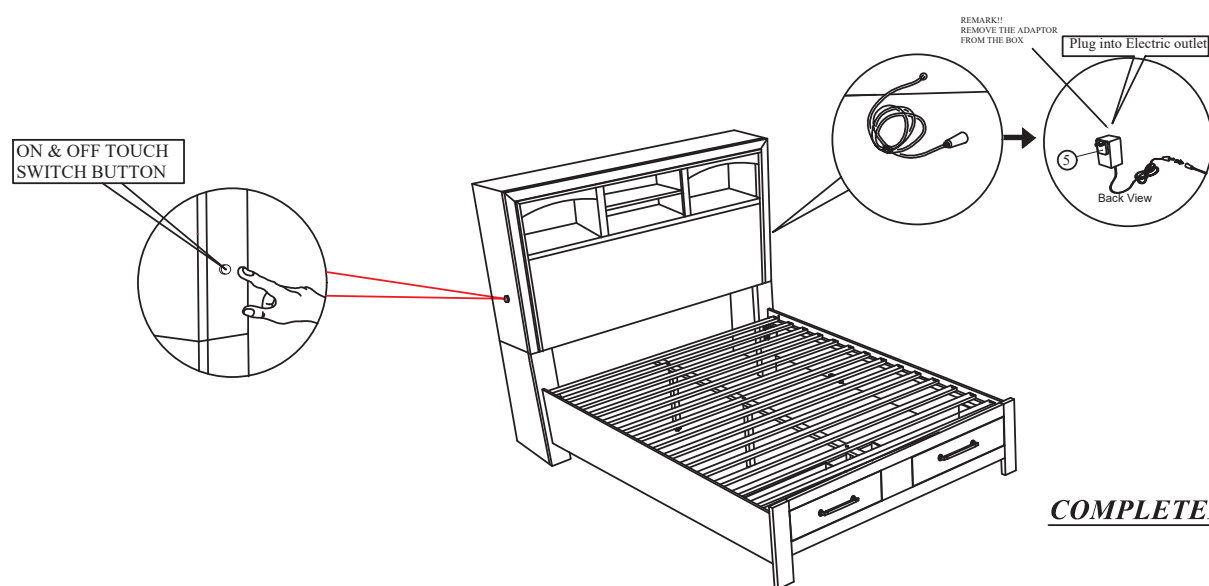

NOTE : MUST TIGHTEN SCREWS PERIODCALLY.SCREW NATURALLY LOOSEN WITH USE.CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.


PAGE 3 OF 3

ASSEMBLY INSTRUCTIONS

MODEL : HD103A DRESSER & MIRROR



(BOX 1)

BOX OF MIRROR

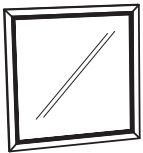NO	ITEM	QTY
	MIRROR	
A		1 PC



(BOX 2)

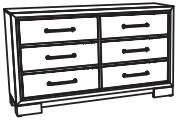BOX OF DRESSER


NO	ITEM	QTY
	DRESSER	
B		1 PC
	MIRROR SUPPORT	
C		2 PCS

(BOX 1)


BOX OF MIRROR

NO	ITEM	QTY
1	FLAT HEAD CHIPBOARD SCREW m4 x 25mm RBW 	6 PCS
2	FLAT HEAD CHIPBOARD SCREW m4 x 32mm RBW 	4 PCS



STEP 1 : Cut of the Raffia String from the back of DRESSER (B).

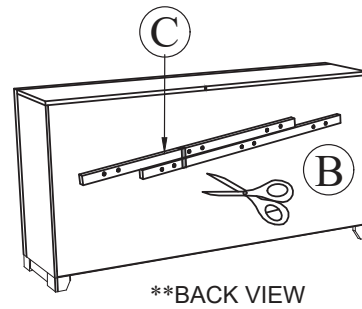

STEP 2 : Turn the MIRROR SUPPORT RAIL (C) upward at the back of DRESSER (B), then Tighten with CSK SCREW (1). Place the MIRROR FRAME (A) on the top of DRESSER (B). Tighten with Flat Head Chipboard Screw (1).

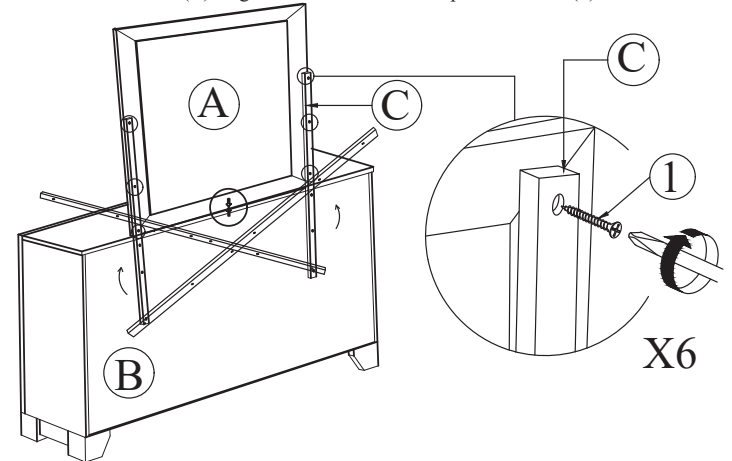

STEP 3 : Tighten the Flat Head Chipboard Screw (2) as shown.

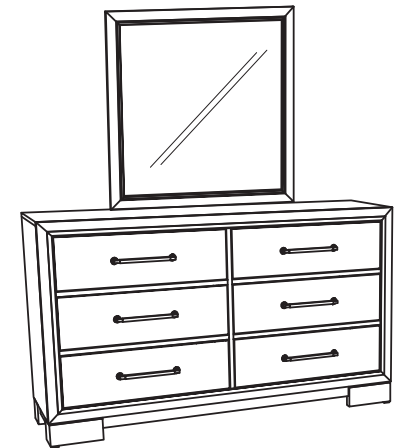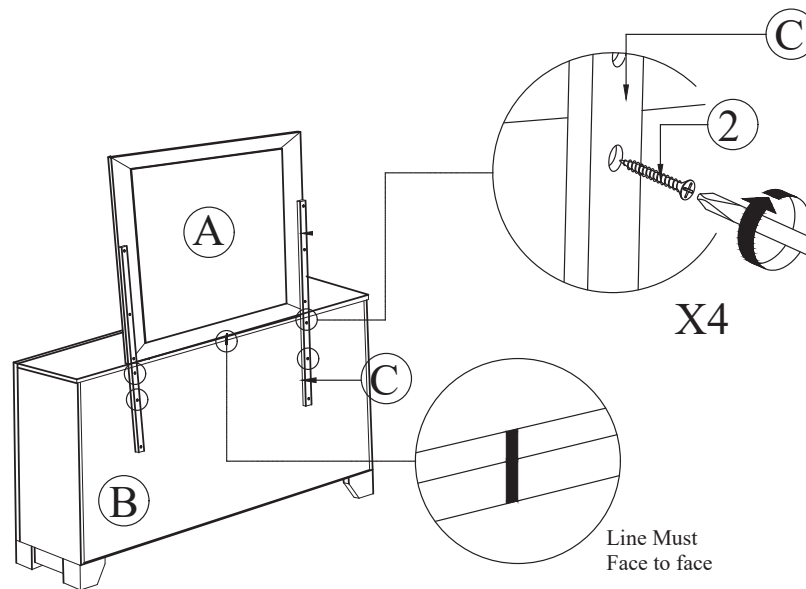

COMPLETE ASSEMBLY

NOTE : MUST TIGHTEN SCREWS PERIODCALLY WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.