




ASSEMBLY INSTRUCTIONS

ITEM:ALICE








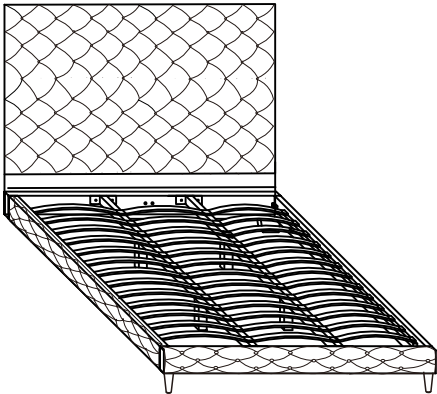



BOX LIST

E	SideRail	2PCS
F	Center Support bar	2PCS

H	Footboard	1PCS
I	Small Slat	36PCS
J	Feet	4PCS
P	Metal Leg Support	4PCS
L	LONG SLAT	2PCS



HARDWARE PACKED LIST IN BOX

a	Allen Key ø5/16"	1PCS	b	Bolt ø5/16"*1.5"	16PCS	c	Bolt ø1/4"*1.5"	16PCS	d	Flat Washer ø5/16" ø1/4"	24 16
											
e	Spring Washer ø5/16" ø1/4"	24 16	f		0PCS	g	NUT ø5/16"	8PCS	h	Rails plastic slat	26PCS
											
i	Center plastic slat	26PCS	Wrench		Not provided	j	Allen Key ø1/4"	1PCS	k	Bolt ø5/16"*2"	8PCS
											


MADE IN CHINA

ASSEMBLY INSTRUCTIONS

ITEM:1826K


STEP 1

Fasten (J) to bottom of footboard (H) with screw(c).

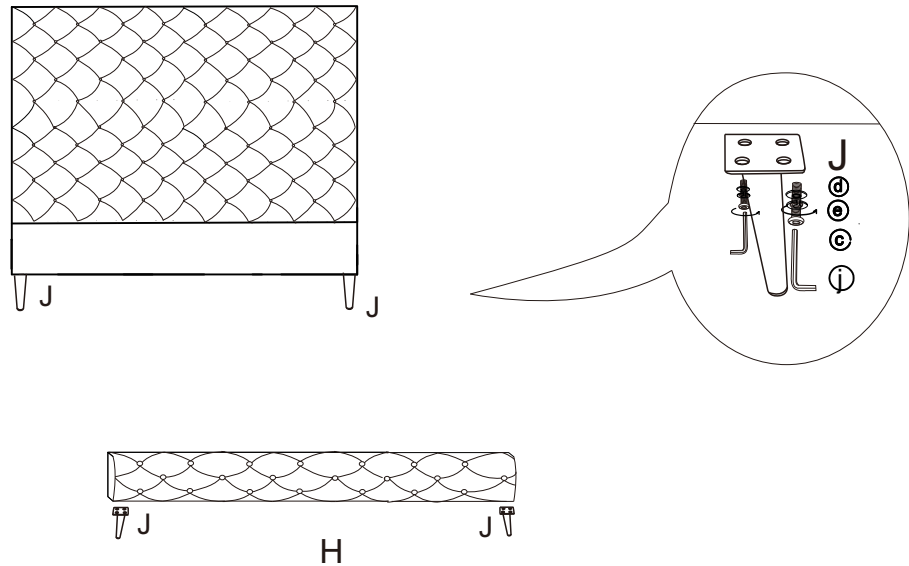


STEP 2

Bolts to use for side rails, should already come pre-inserted on the HB. Place bolt (b) , washers (e , d) and fasten to Headboard with preinstalled hardware, Repeat step 2 for Footboard. Do not tighten until step 3.

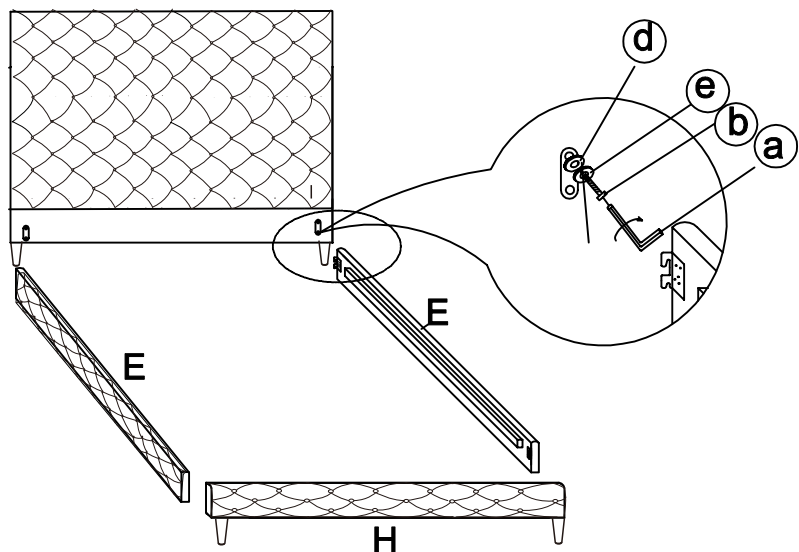


MADE IN CHINA


STEP 3
Attach siderail (E) to headboard (G) and footboard (H) using bolt (b) and allen key (a) as shown in diagram. Do not tighten bolts completely until assembly is completed.

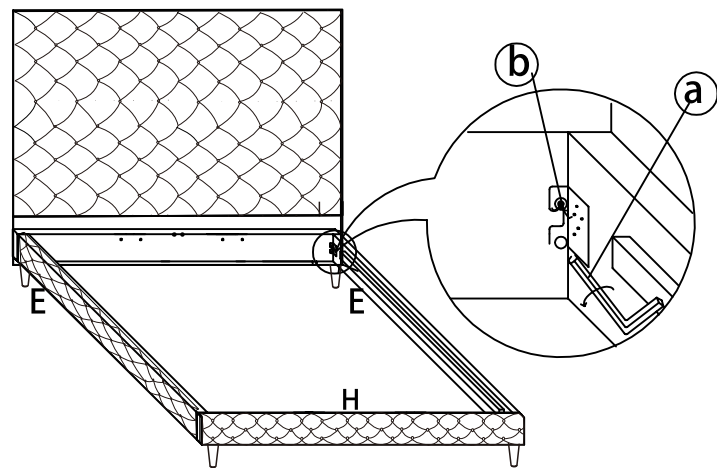


STEP 4
Attach center support (F) to headboard (G) by using bolt (b) through washers(e , d) as shown in diagram.

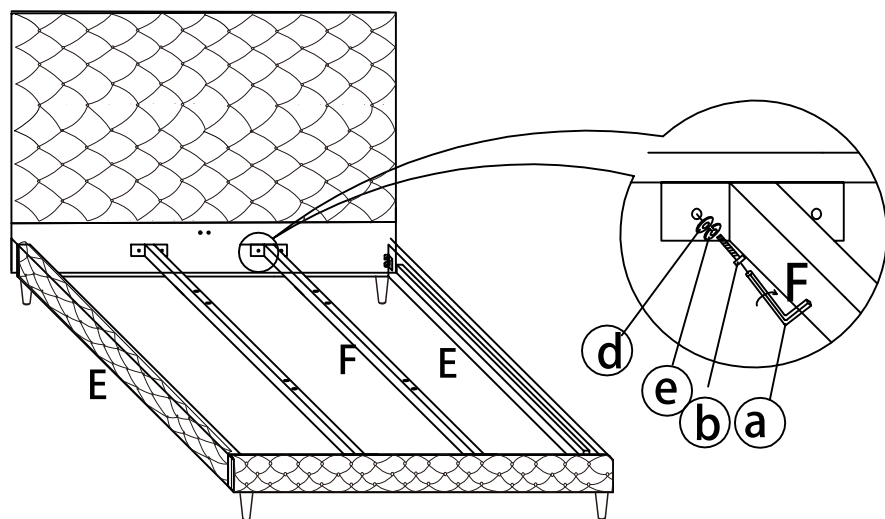

STEP 5
Attach leg support (K) to center support bar (F) by using bolt (k), washers(e , d), nut (g), and tighten the nut(g) by wrench.

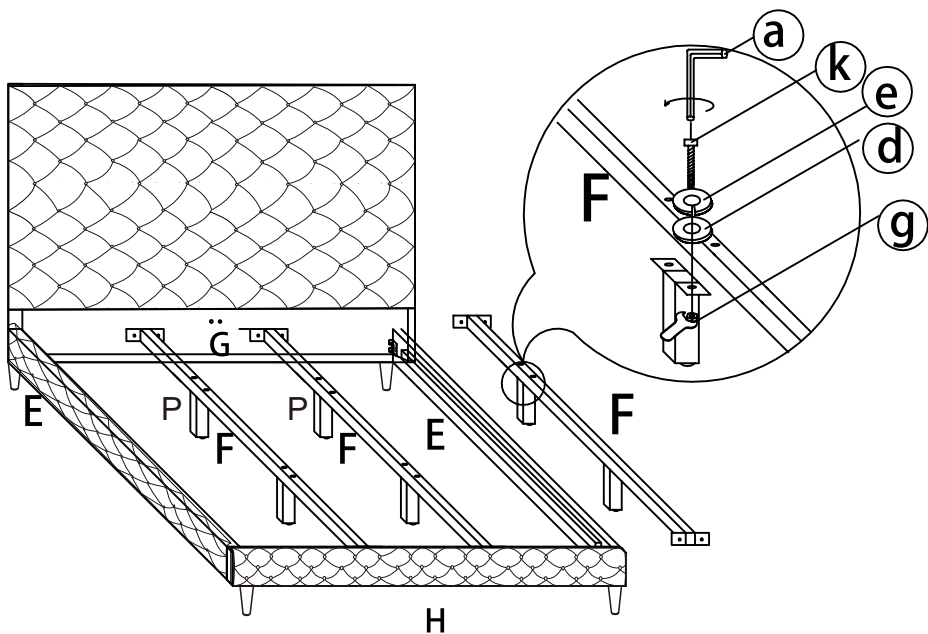


STEP 6
Insert center plastic slot (i) into holes on center support bar (F). Press firmly into place as shown in diagram. Attach rail plastic slat (h) using same procedure.

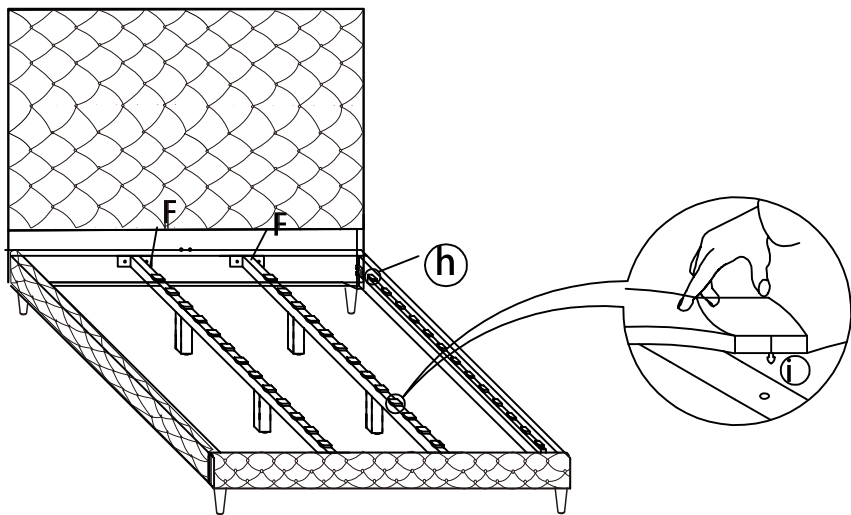

MADE IN CHINA

STEP 7

Insert small slat (I) into plastic slats (h , i) as shown in diagram. Attach long slat (L) to Siderail (E) with bolt f as shown.

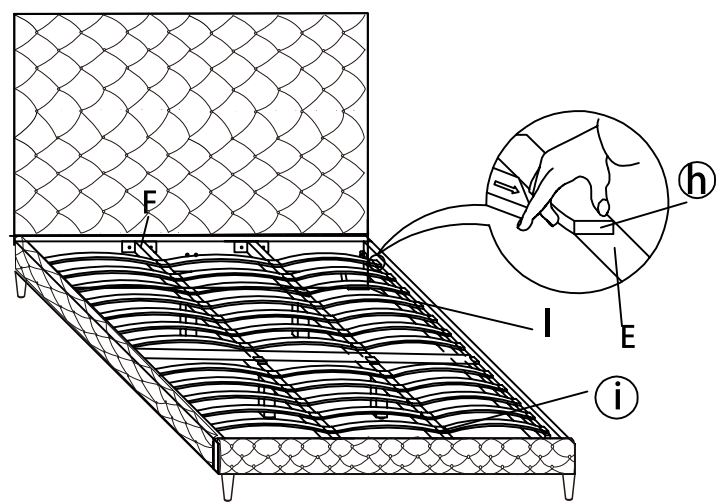

STEP 8

Assembly is complete.

