

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#: 171922 27091

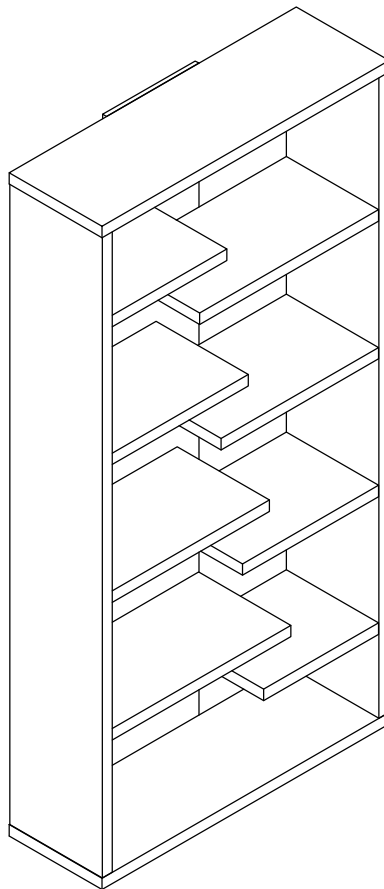

PARTS IDENTIFICATION








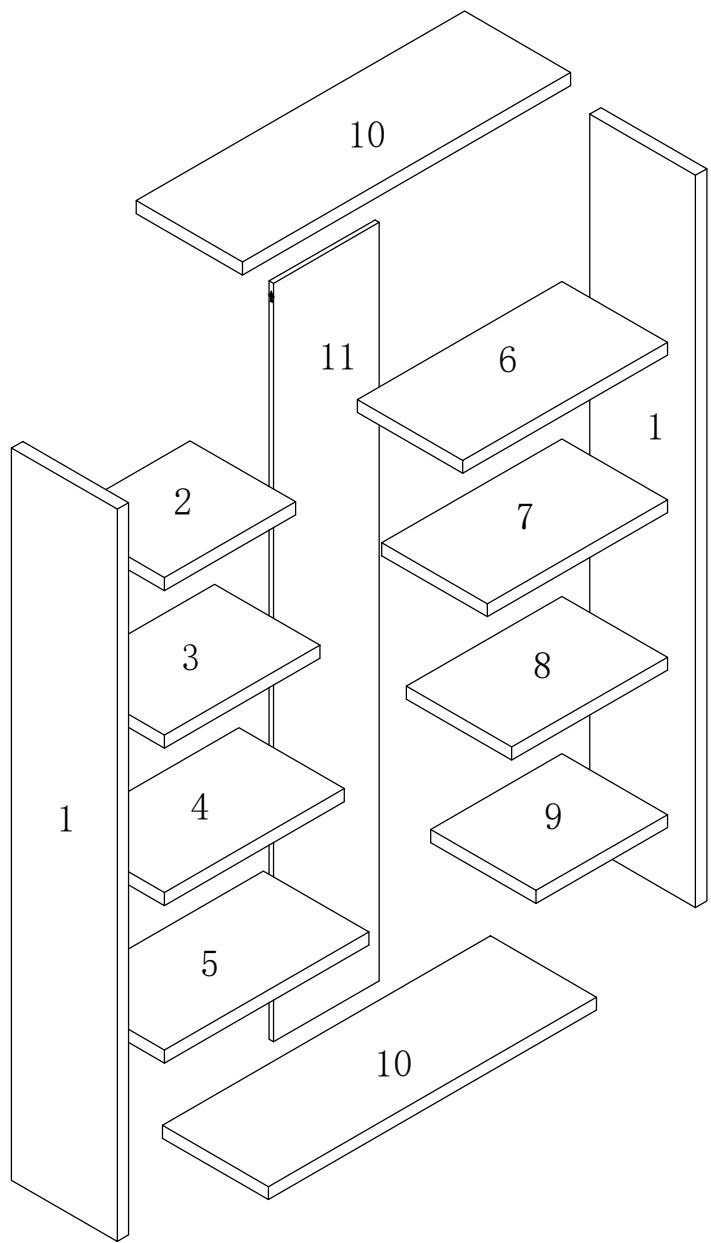



ITEM#:171922 27091




(1)	2pcs	(5)	1pc	(9)	1pc
(2)	1pc	(6)	1pc	(10)	2pcs
(3)	1pc	(7)	1pc	(11)	1pc
(4)	1pc	(8)	1pc		

HARDWARE IDENTIFICATION

ITEM#:171922 27091

A		LD131	16pcs
B		$\phi 15$	16pcs
C		$\phi 7 \times 58$	8pcs
D		$\phi 4.2 \times 30$	20pcs
E		$\phi 22$	16pcs
F		$\phi 8 \times 25$	12pcs
G		$197 \times 5 \times 1$	1pc
H		$12 \times 12 \times 1$	2pcs
I		$\phi 4 \times 25$	1pc
J		$\phi 5 \times 40$	1pc
K		$\phi 8 \times 40$	1pc

ASSEMBLY INSTRUCTION

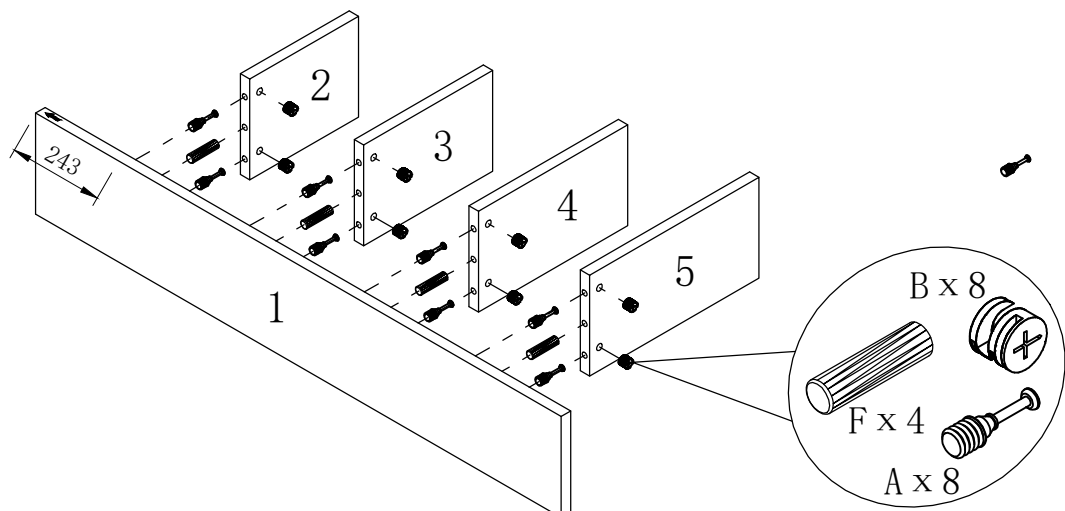

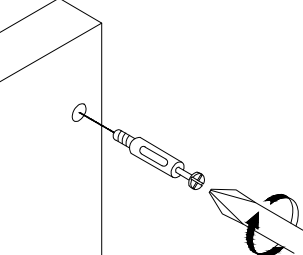
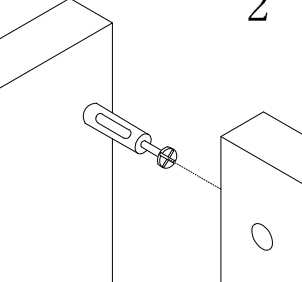
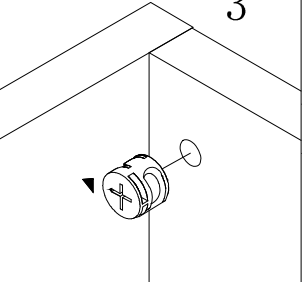
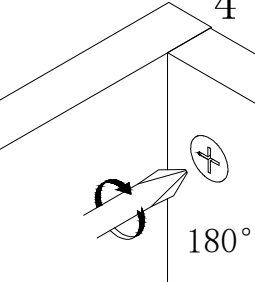



STEP1

PAGE:3 OF 6

ASSEMBLY INSTRUCTION


ITEM#:171922 27091

HOW TO	1	2	3	4
 Cam Bolt  Cam Lock				
	1. Screw Cam Bolt into panel.	2. Insert Cam Bolt into bolt hole of joining panel.	3. Insert Cam Lock. arrow facing bolt.	4. Gently turn Cam Lock clockwise to lock position.

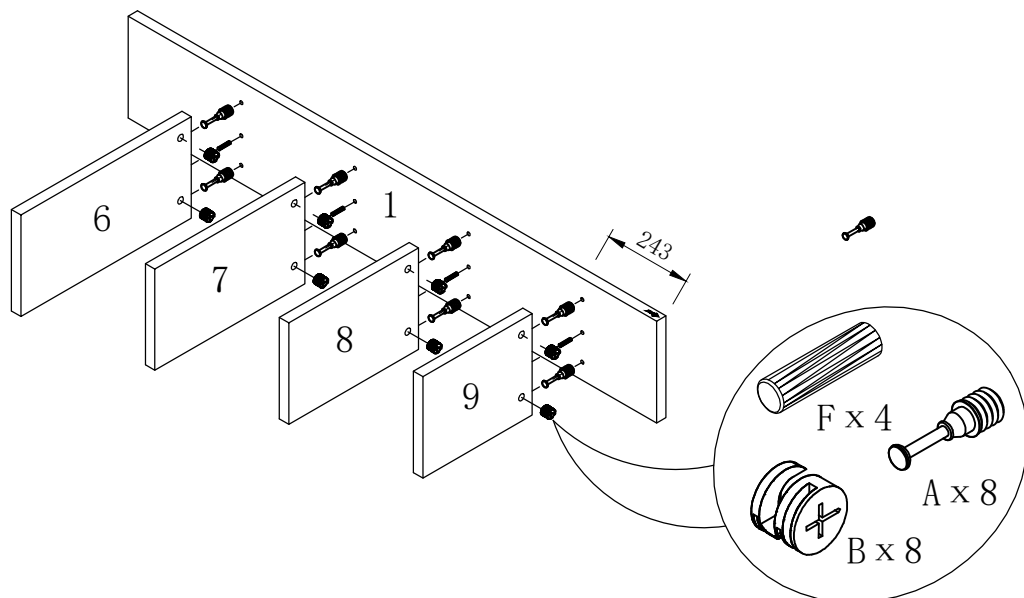


STEP2

STEP3

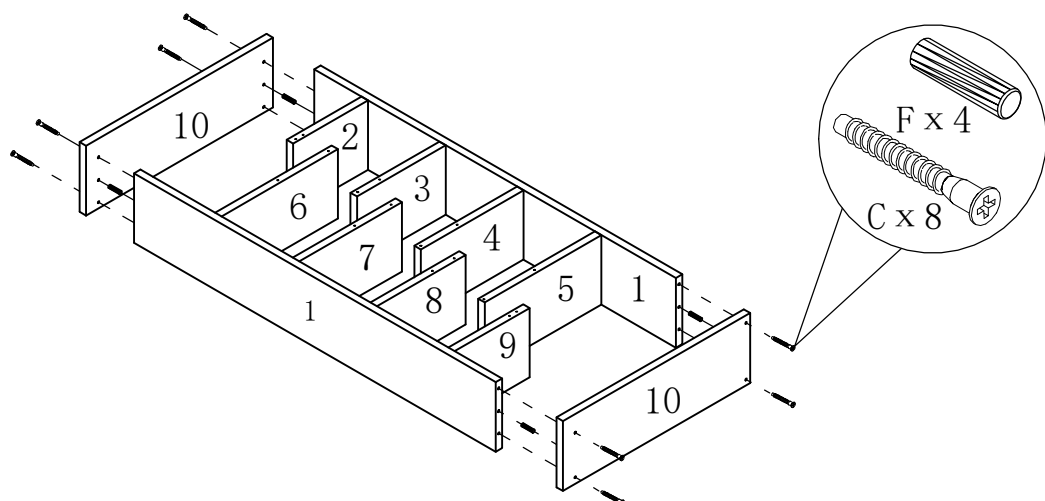


ASSEMBLY INSTRUCTION

ITEM#:171922 27091

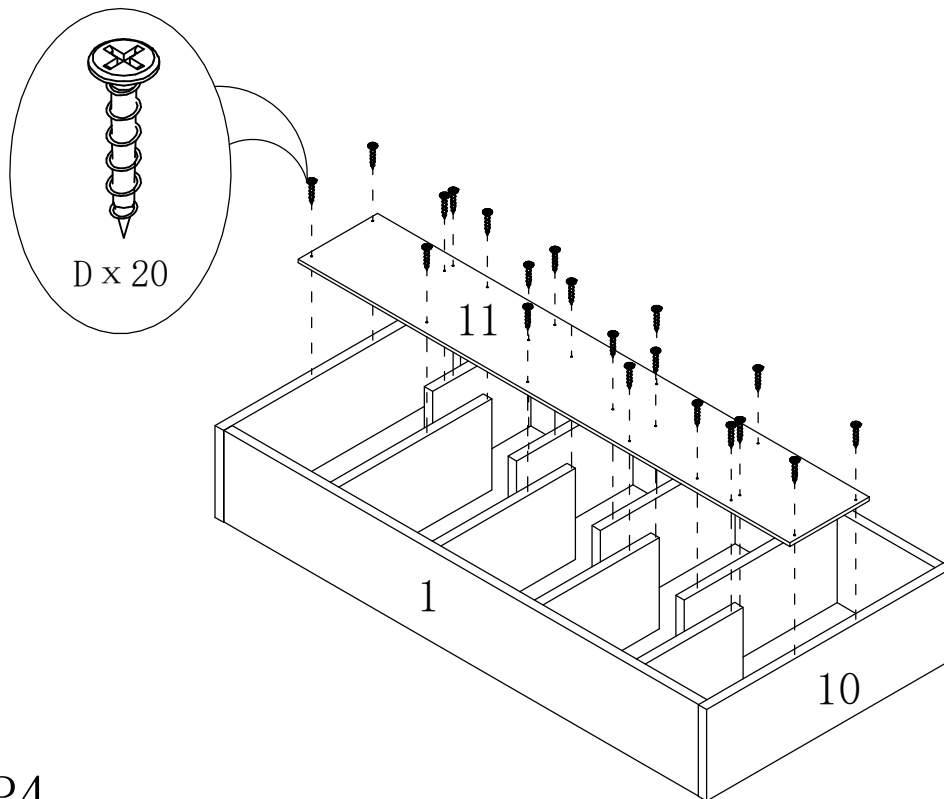

STEP4


STEP5

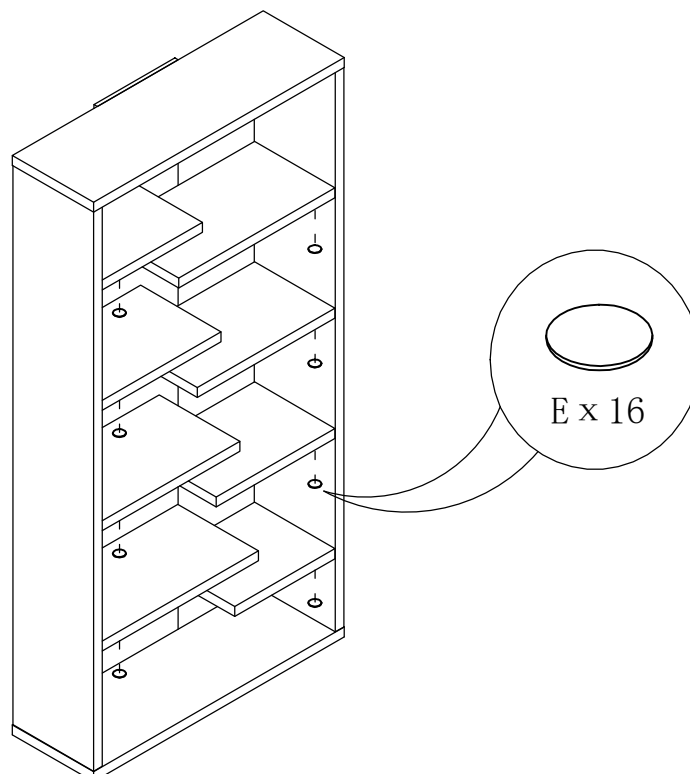


ANTI-TIPPING STRAP INSTRUCTION

HARDWARE (INCLUDED) :

TOOLS NEEDED (NOT INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS




DRYWALL SCREW $\phi 5 \times 40$ X 1PC



STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

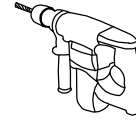


DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

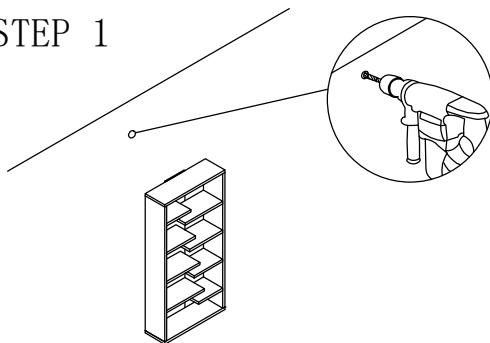


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

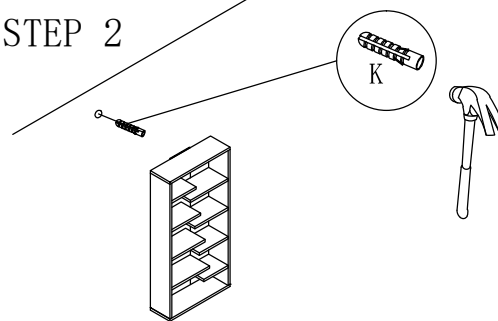


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

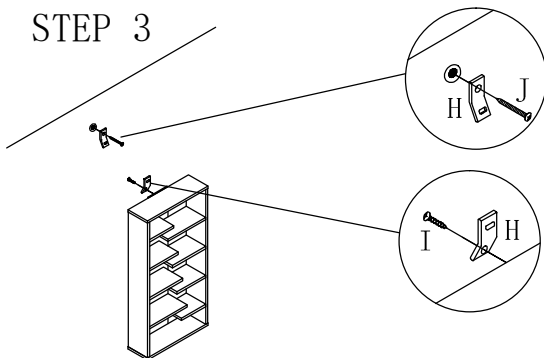

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item, along top edge.

STEP 4

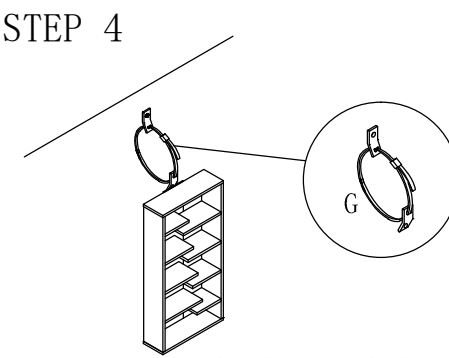

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.