

Instruction Manual














6-Drawer Dresser SHX12077

SAFETY WALL STRAP INSTALLATION

Note: Safety Metal kit (#14) must be installed to prevent tipping, damage and/or injury.






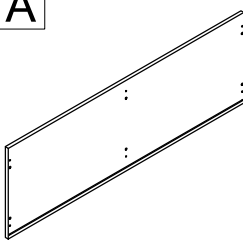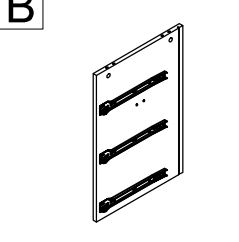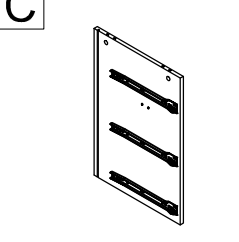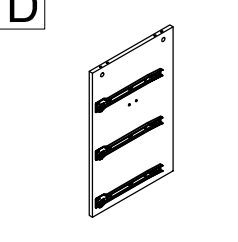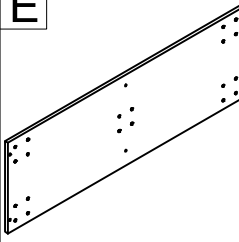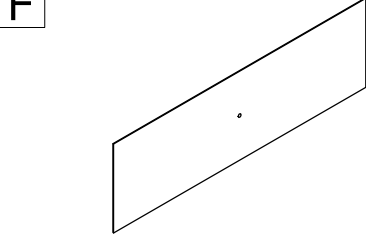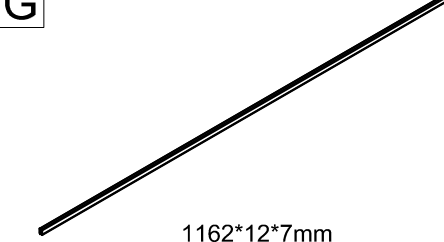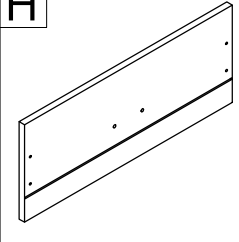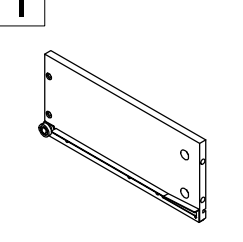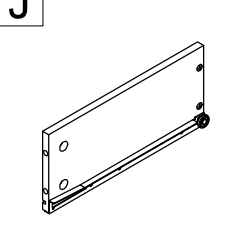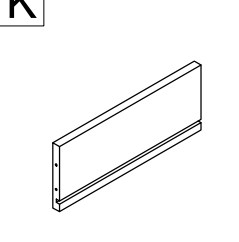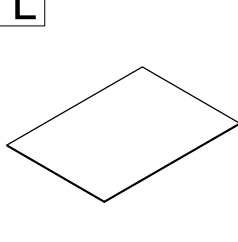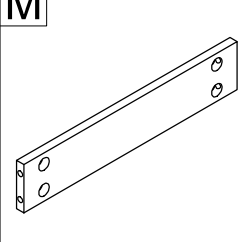











PART LIST

				
<p>Top Panel 1 PC</p>	<p>Left Panel 1 PC</p>	<p>Right Panel 1 PC</p>	<p>Partition Panel 1 PC</p>	<p>Bottom Panel 1 PC</p>
	 <p>1162*12*7mm</p>			
<p>Back Panel 2 PCS</p>	<p>Back Plastic Strip 1 PC</p>		<p>Drawer Front Panel 6 PCS</p>	
				
<p>Drawer Left Panel 6 PCS</p>	<p>Drawer Right Panel 6 PCS</p>	<p>Drawer Back Panel 6 PCS</p>	<p>Drawer Bottom Panel 6 PCS</p>	<p>Center Rail 2 PCS</p>

SAFETY WALL STRAP INSTALLATION

Note: Safety Metal kit (#14) must be installed to prevent tipping, damage and/or injury.

HARDWARE LIST
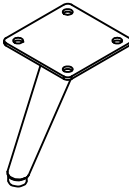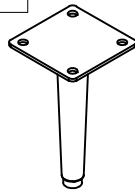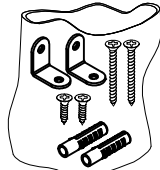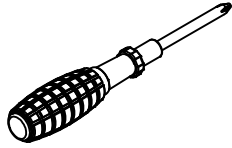
#1  Ø5*40mm	#2  Ø6*30mm	#3  Ø3*30mm	#4  Ø6*35mm	#5  Ø15*9mm
Screw	Wood Dowel	Screw	Cam-bolt	Cam-lock
6 PCS (Extra 1)	12PCS (Extra 2)	24PCS (Extra 2)	38PCS (Extra 3)	38PCS(Extra 3)
#6  150*32*Ø12mm	#7  M4*20mm	#8  14*10mm	#9  Ø3.5*15mm	#10  M6*10mm
Handle	Round Head Bolt	Back Bracket	Screw	Bolt
6 PCS	12 PCS (Extra 2)	8 PCS (Extra 2)	10 PCS (Extra 2)	20 PCS (Extra 2)
#11  4mm	#12 	#13 	#14 	
Allen Wrench	Leg	Center Leg	Safety Metal Kit	Phillips Screwdriver
1 PC	4 PCS	1 PC	1 SET	1 PC


SAFETY WALL STRAP INSTALLATION

Note: Safety Metal kit (#14) must be installed to prevent tipping, damage and/or injury.


ASSEMBLY OVERVIEW

SAFETY WALL STRAP INSTALLATION

Note: Safety Metal kit (#14) must be installed to prevent tipping, damage and/or injury.

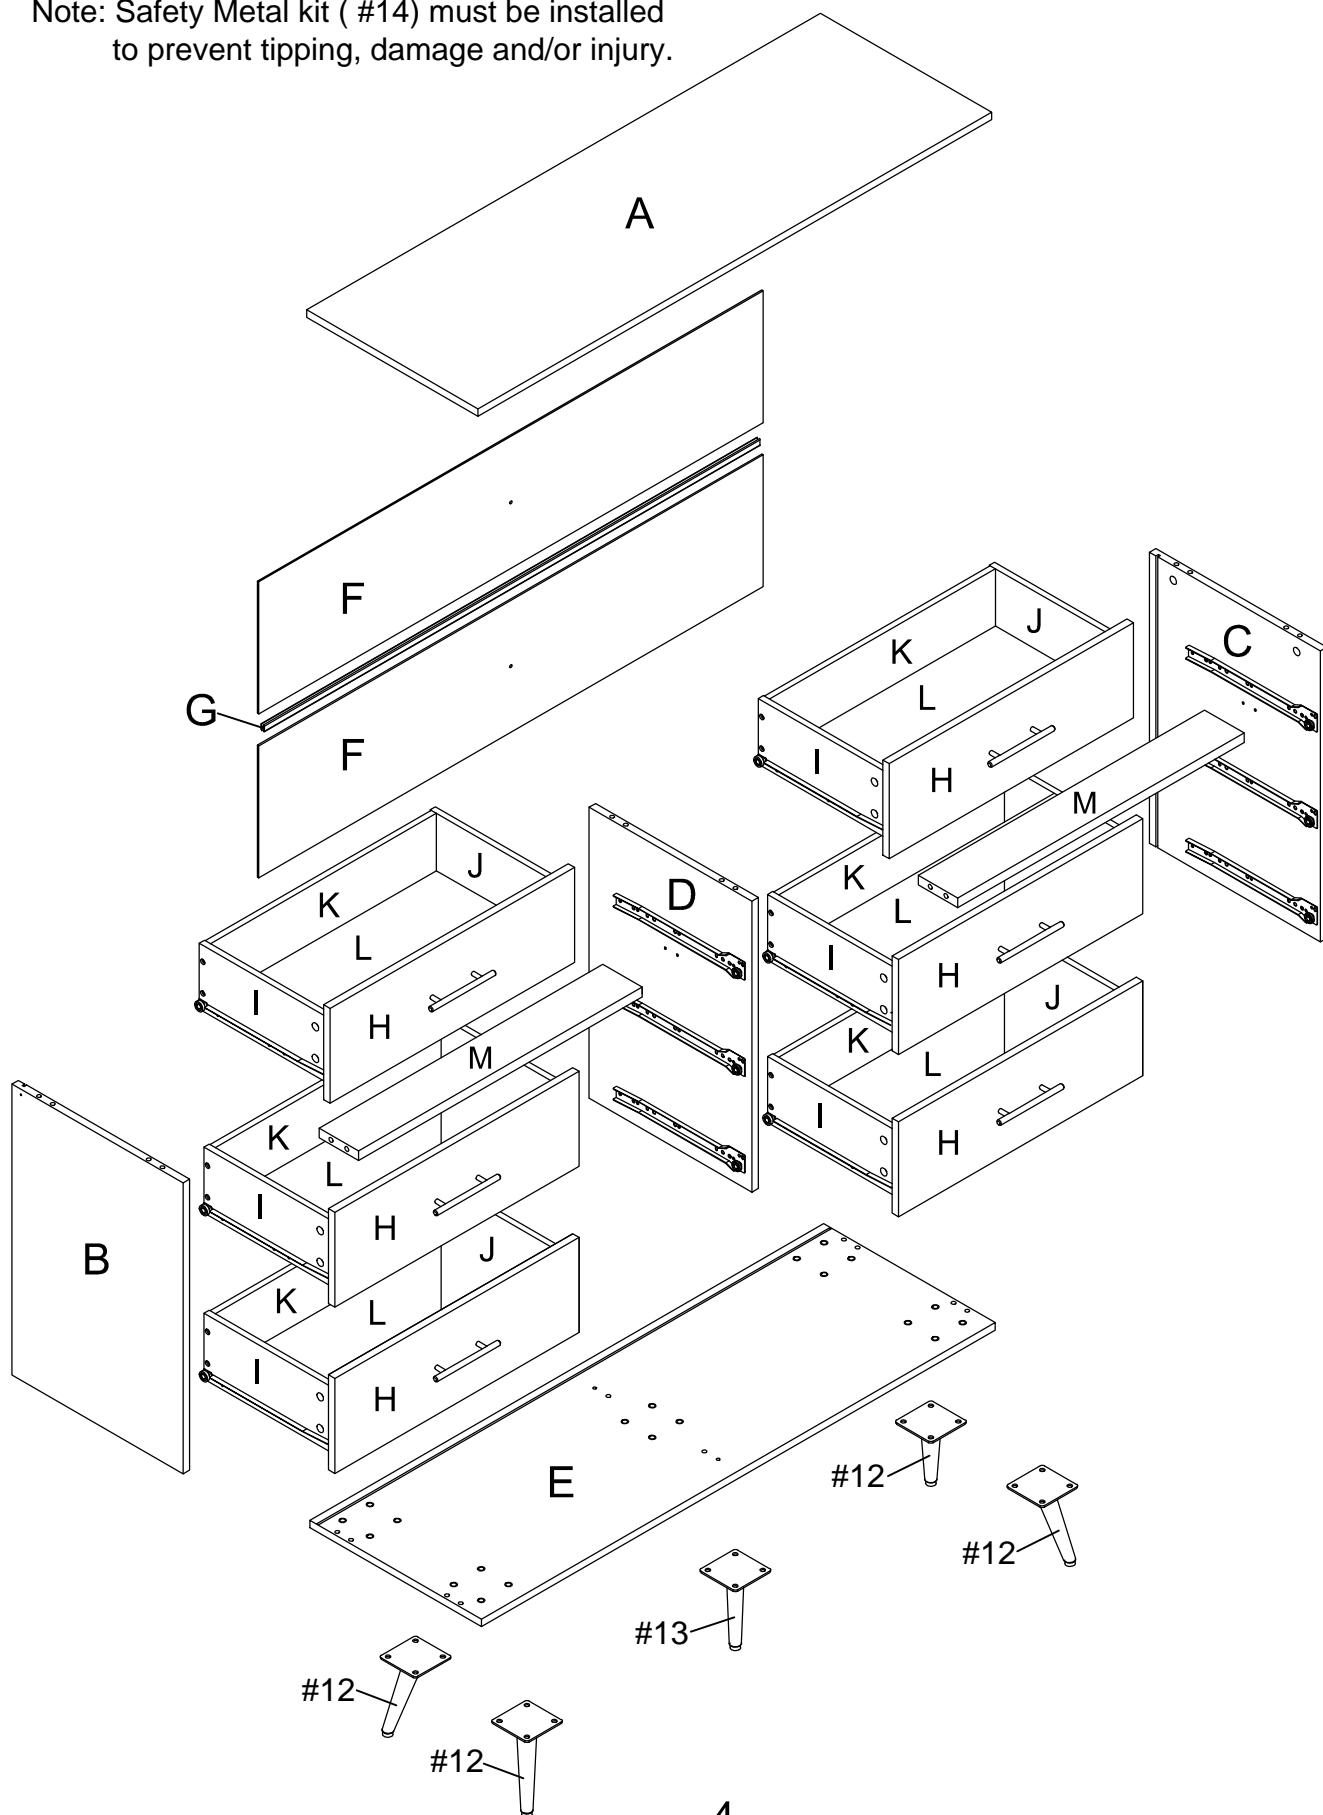

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

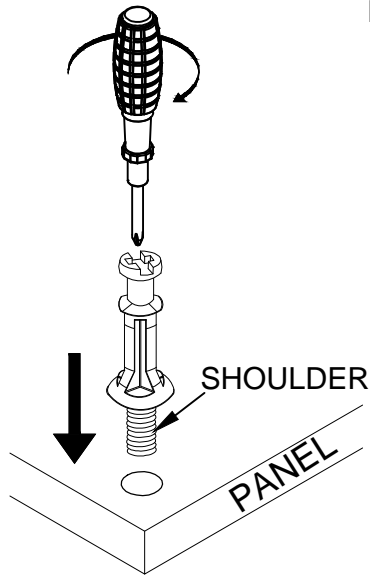

Place Cam-bolt on pre-drilled hole and screw in vertically

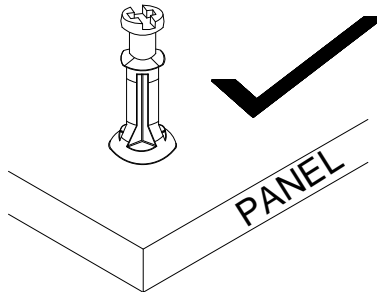


Shoulder is flushed (on the same level) with the panel.

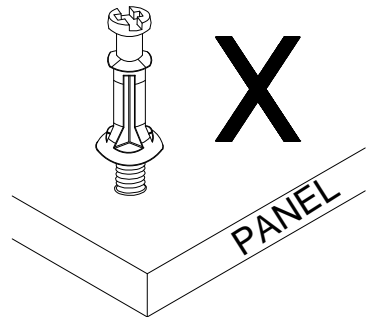

Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.

INSERTING CAM-LOCK

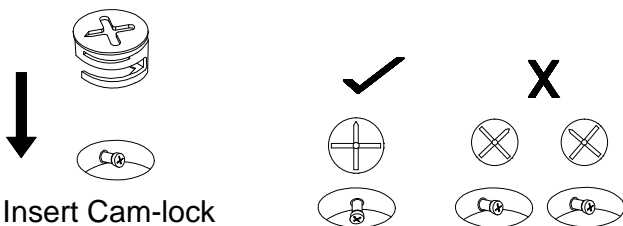


Insert Cam-lock with arrow align to Cam-bolt head

CORRECT

WRONG



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK


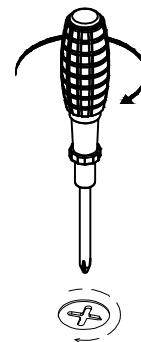


Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.



Step 1.

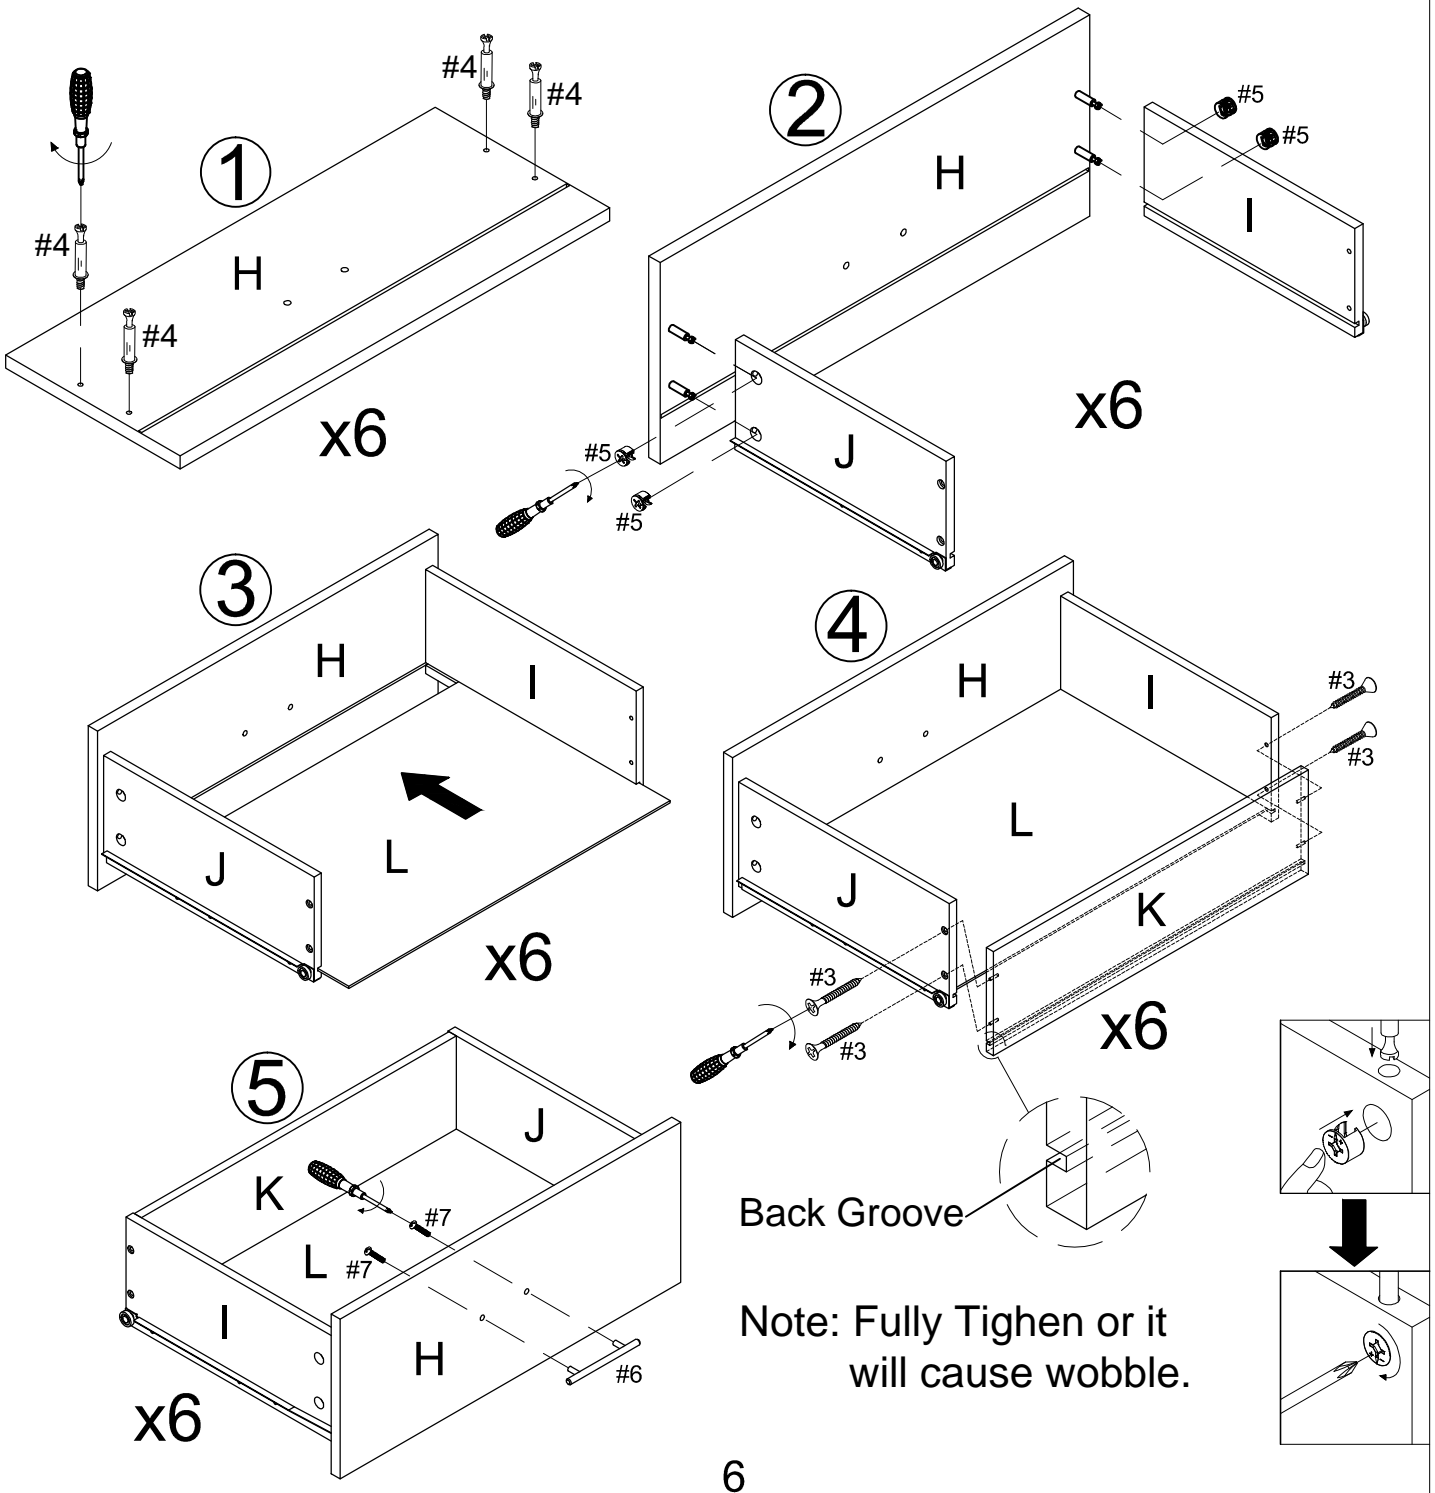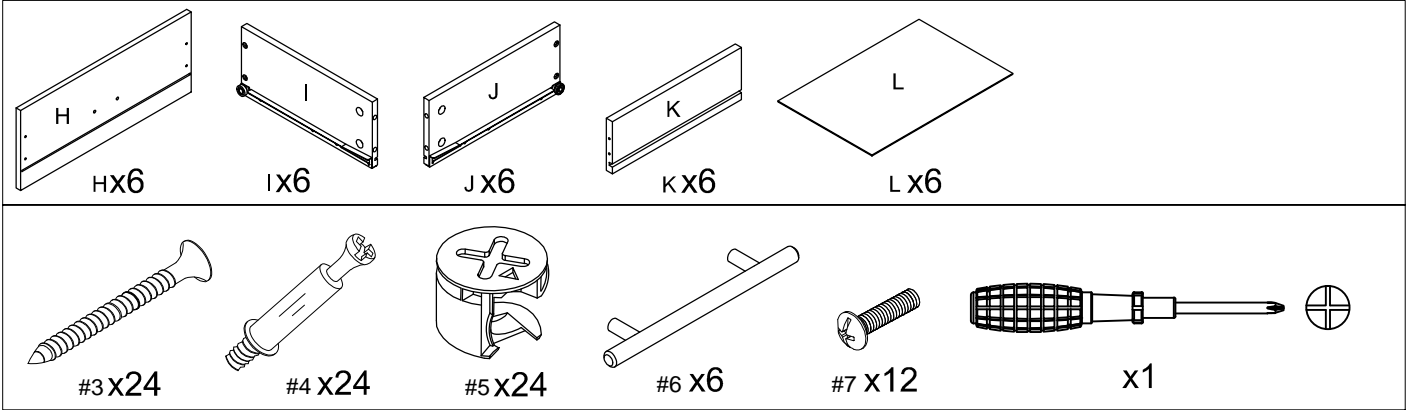


Step 2.

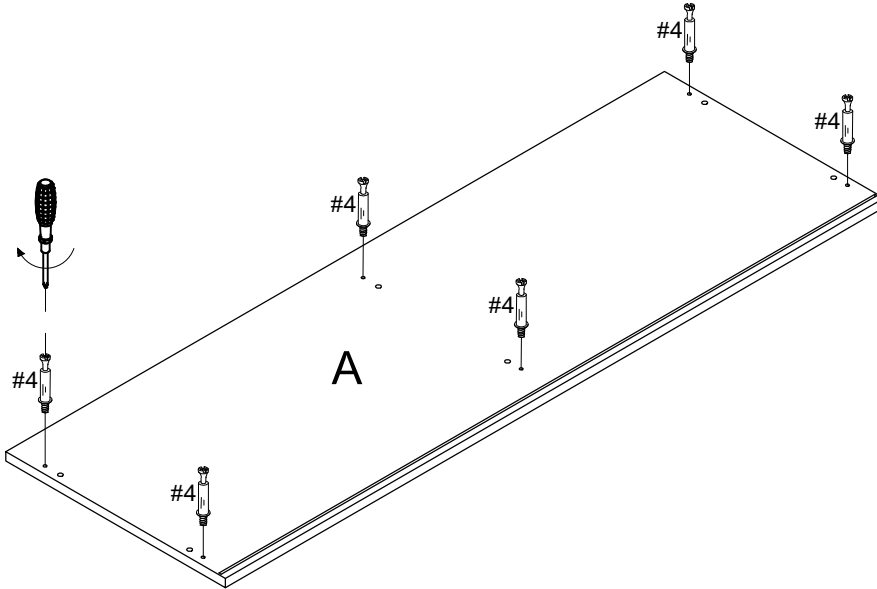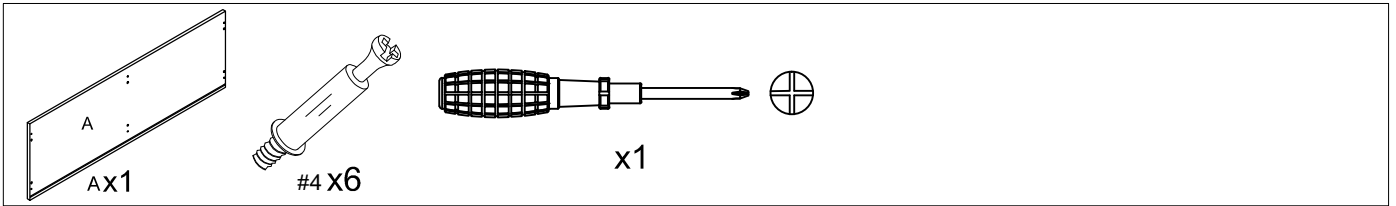


Step 3.

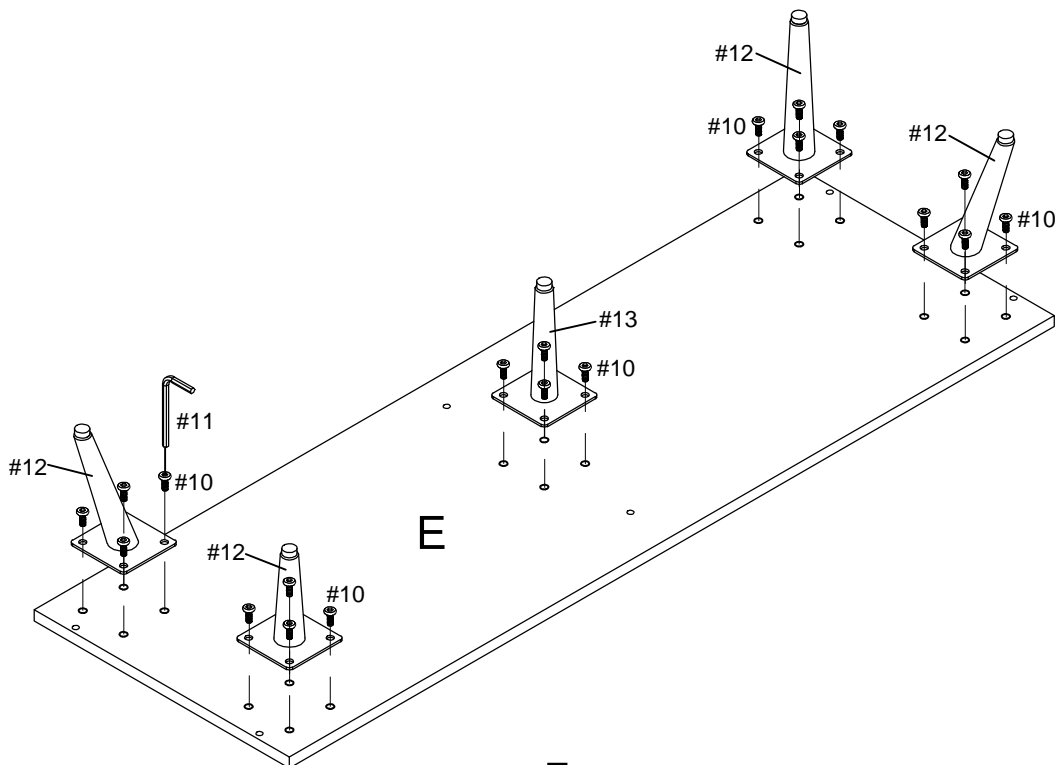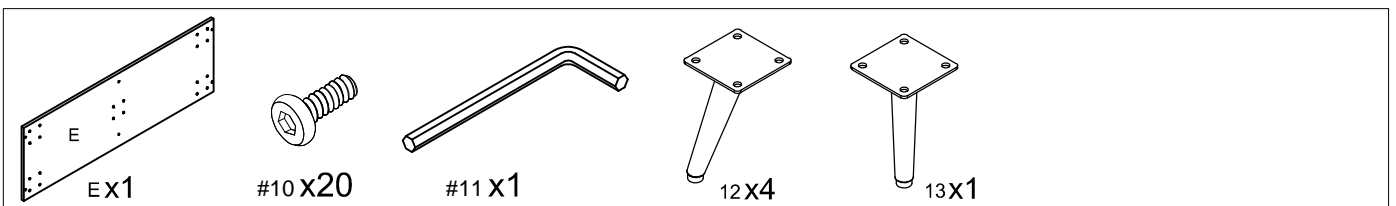



Step 4.

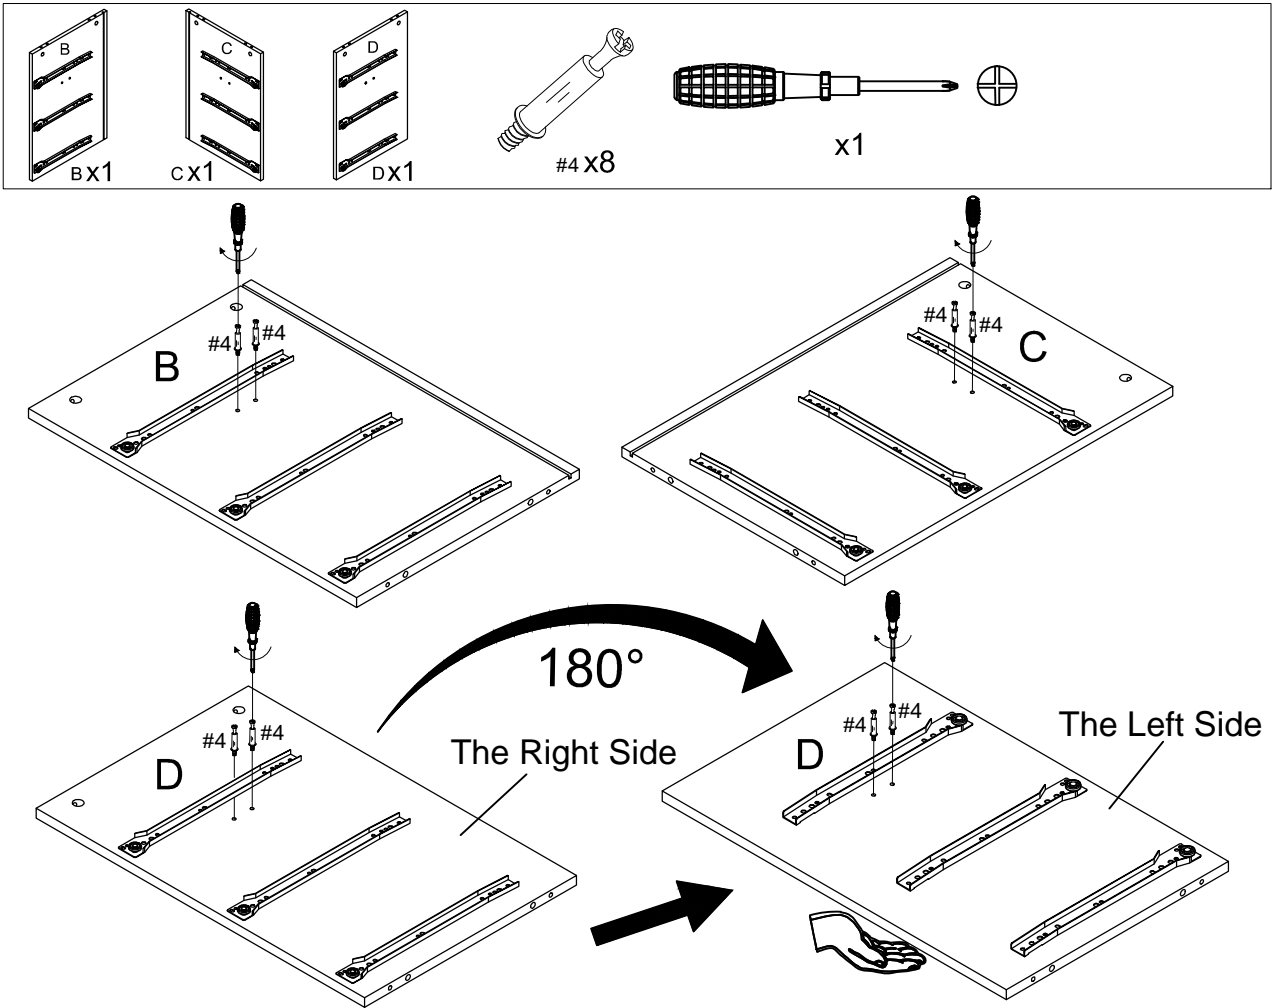



Step 5.

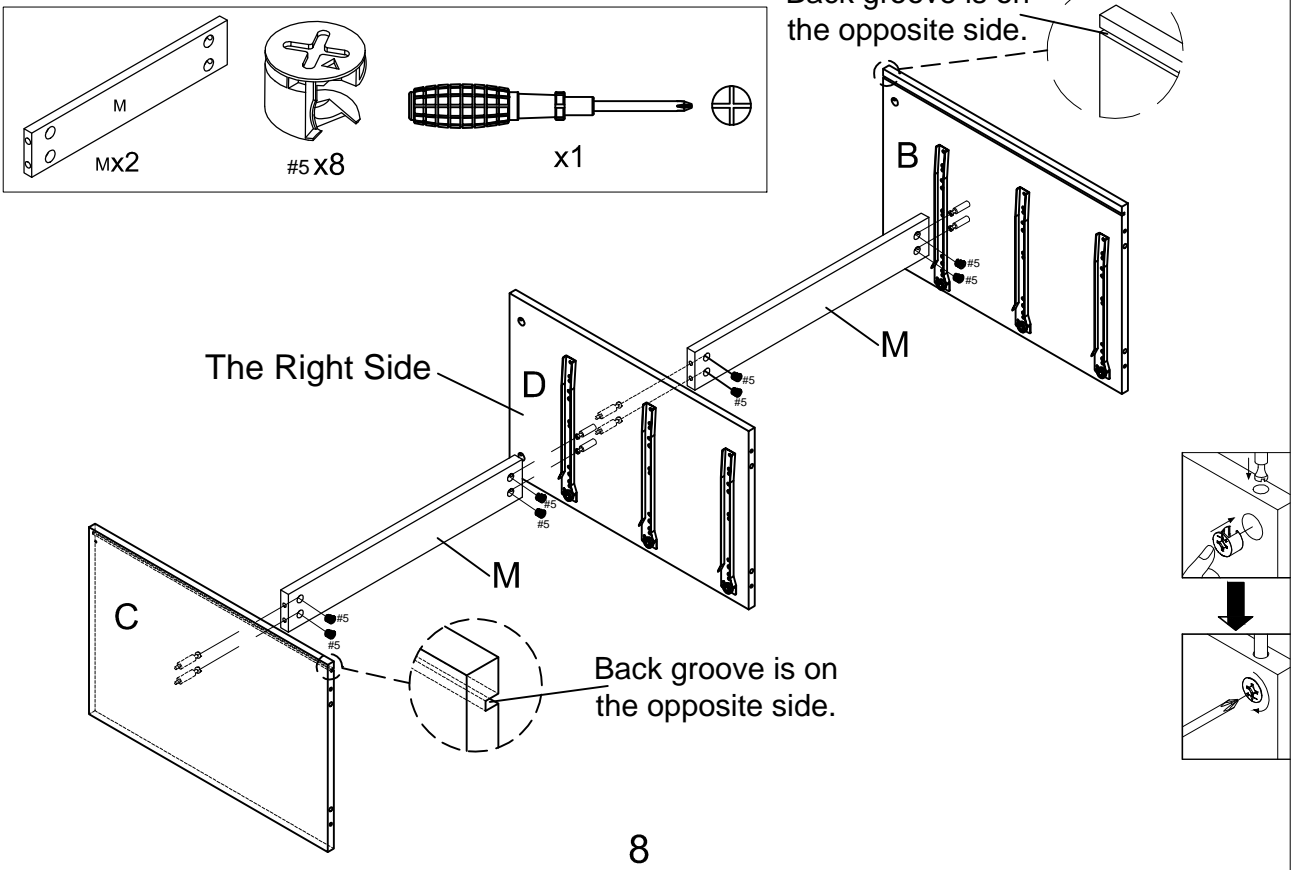


Step 6.

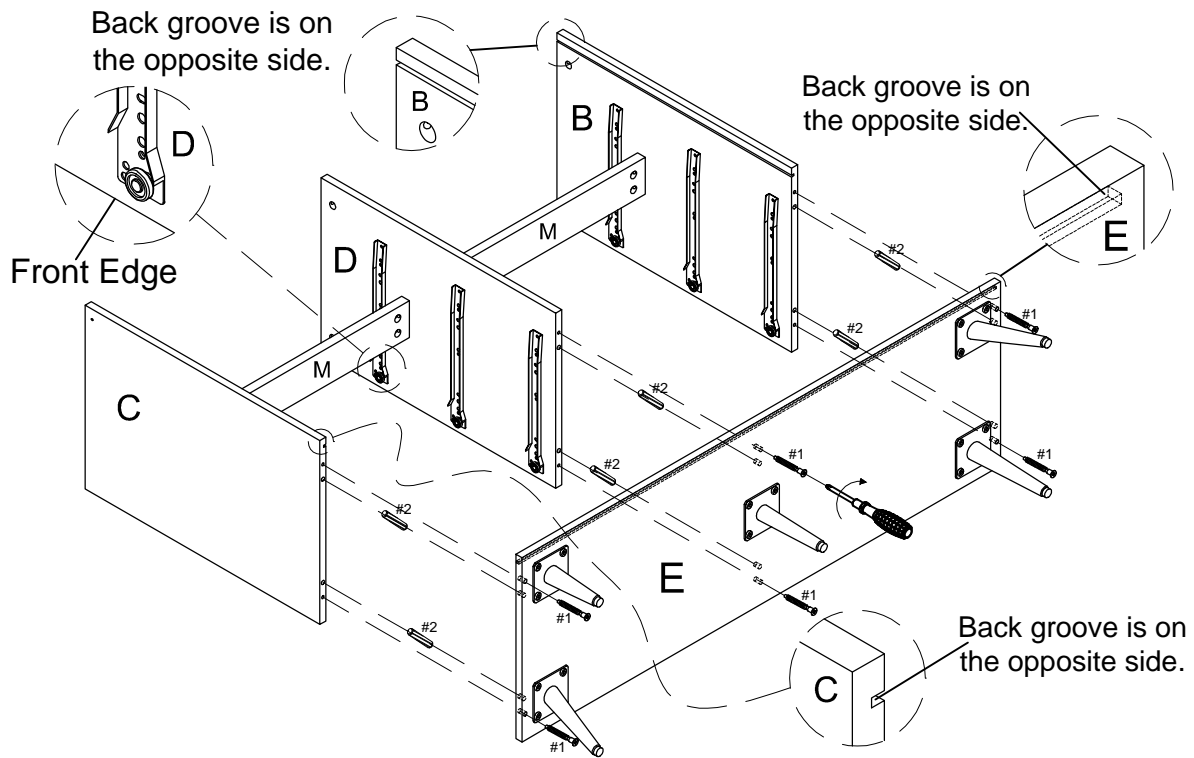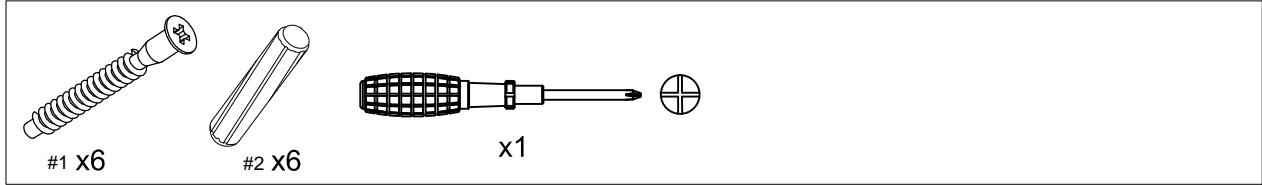

Step 7.

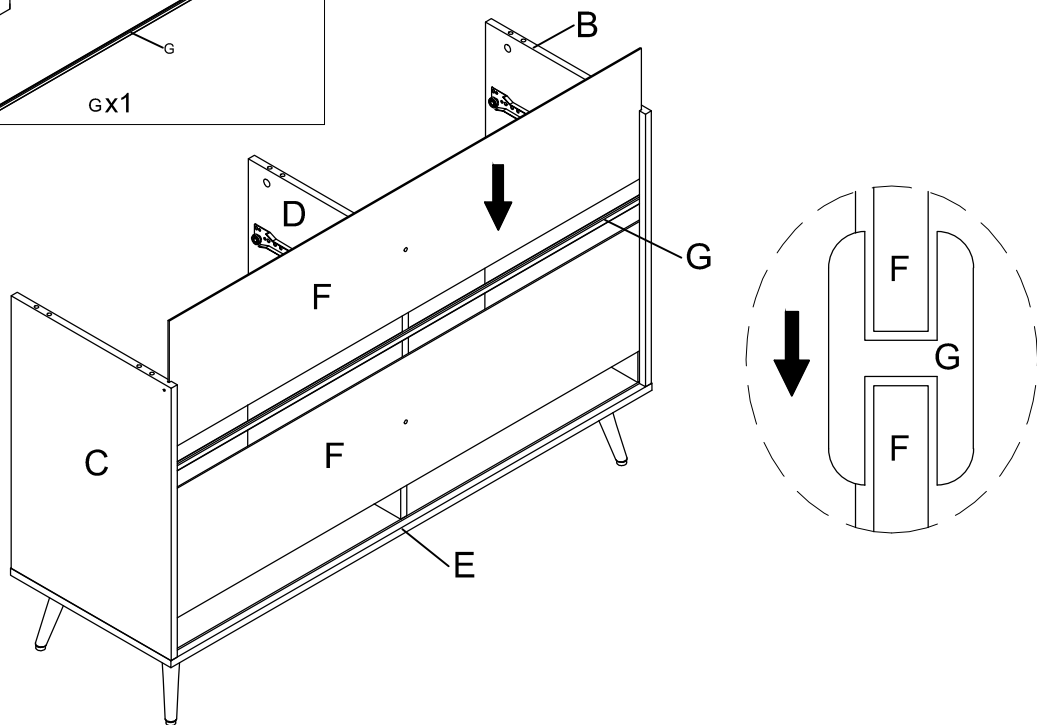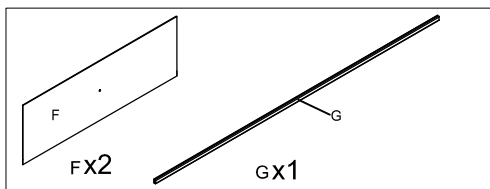


Step 10.

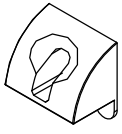



#8 x 8








#9 x 10



x1

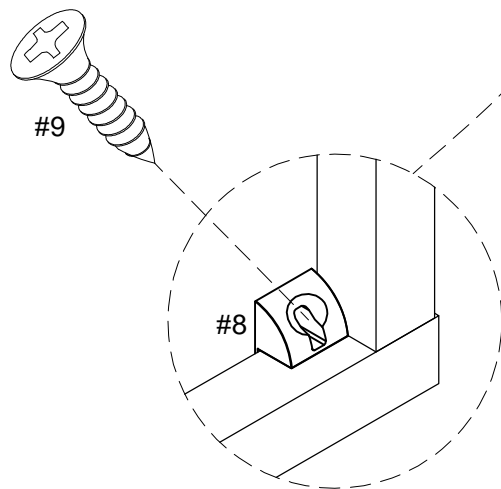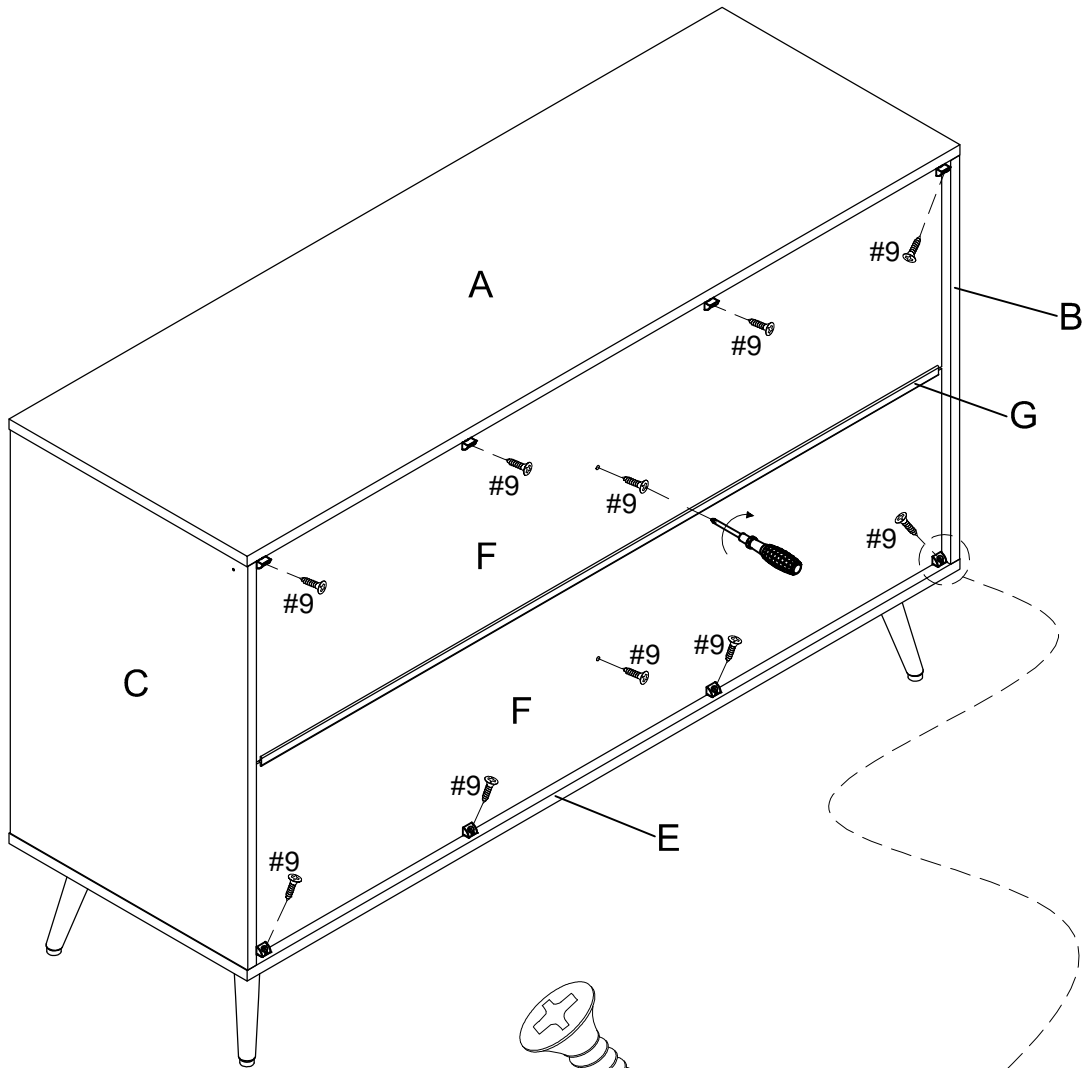


Step 11.
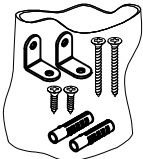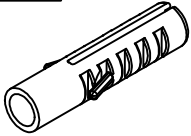
#14		#14-A		#14-B		#14-C		#14-D	
Safety Metal Kit		Angel Iron		Wall Anchor		Short Screw		Long Screw	
1 SET		2 PCS		2 PCS		2 PCS		2 PCS	

SAFETY WALL STRAP INSTALLATION

Note: Safety Metal kit (#14) must be installed to prevent tipping, damage and/or injury.

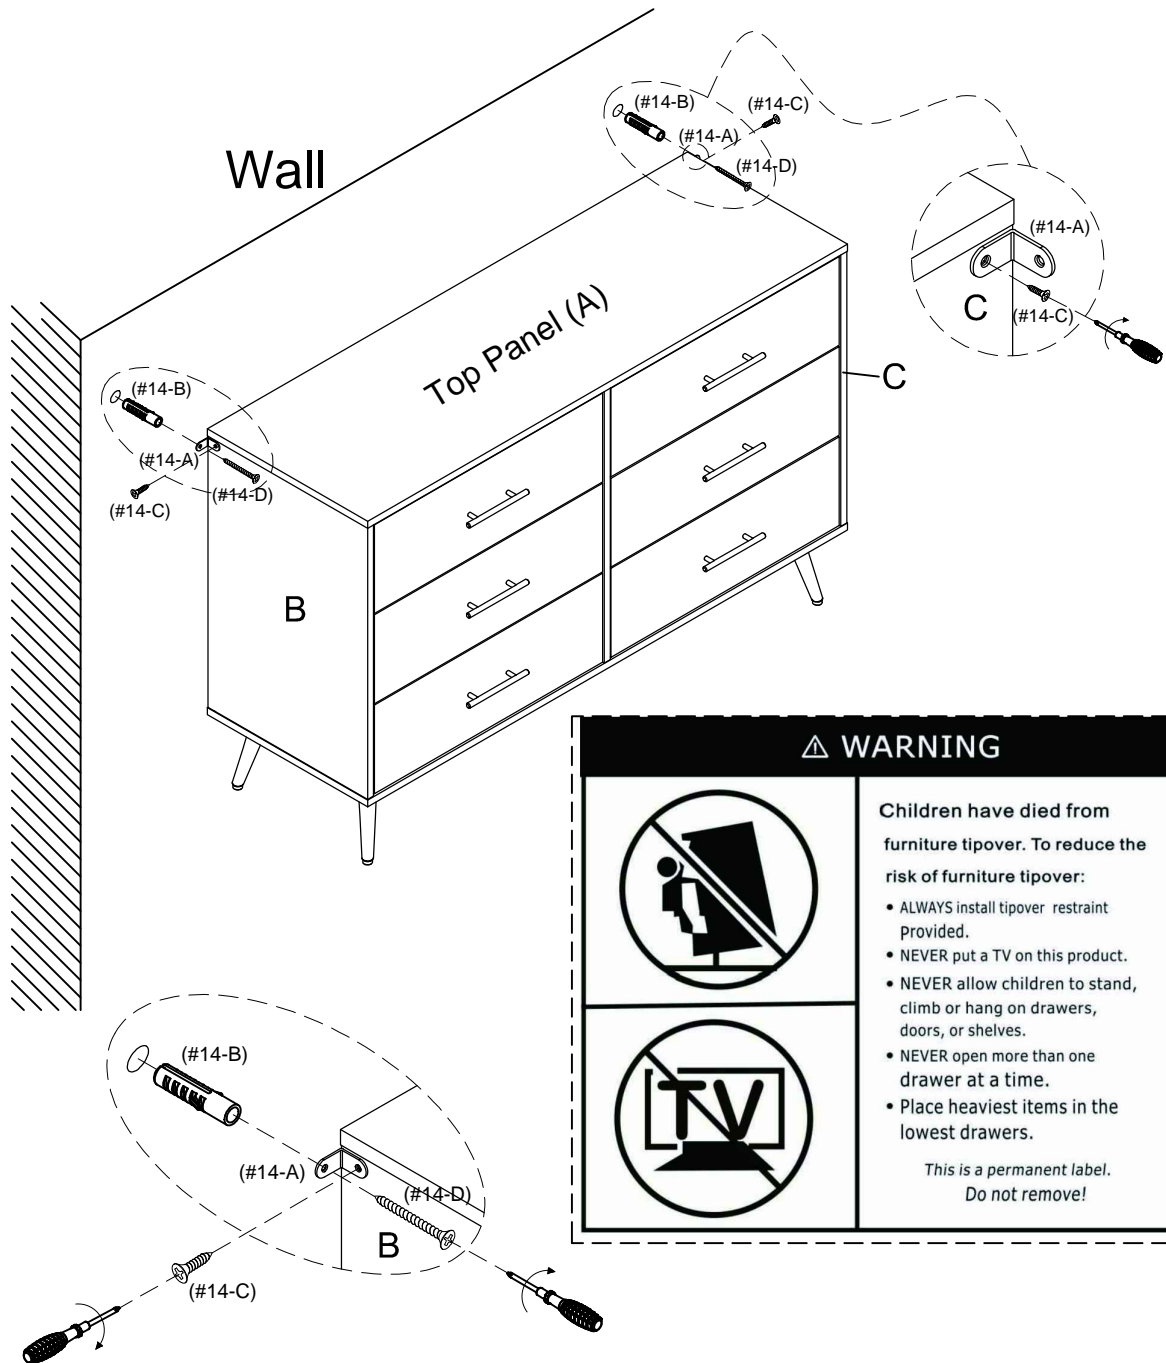

The assembly of the cabinet is complete.

Warning:

Seller is responsible for the product-related issues occurred upon receipt, but will not be responsible for the personal injury, property damage or loss resulting from the incorrect assembly, improper use, inadequate maintenance or neglect of this product.

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

- 1). Remove all packaging materials, staples and packing straps from the carton.
- 2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
- 3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
- 4). Allow ample room for assembly and assemble the product near where the product will be placed.
- 5). During assembly, do not over-tighten any fittings as this may cause damage.
- 6). Always place the product on a flat, level surface.

2. CARE AND MAINTENANCE

- 1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- 3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.

3. TIPS TO PROTECT & CARE FOR YOUR FURNITURE

- 1). Avoid placing your furniture in direct sunlight, as sunlight causes fading.
- 2). Use a protective pad when writing on the furniture surface.
- 3). Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.