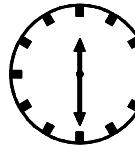
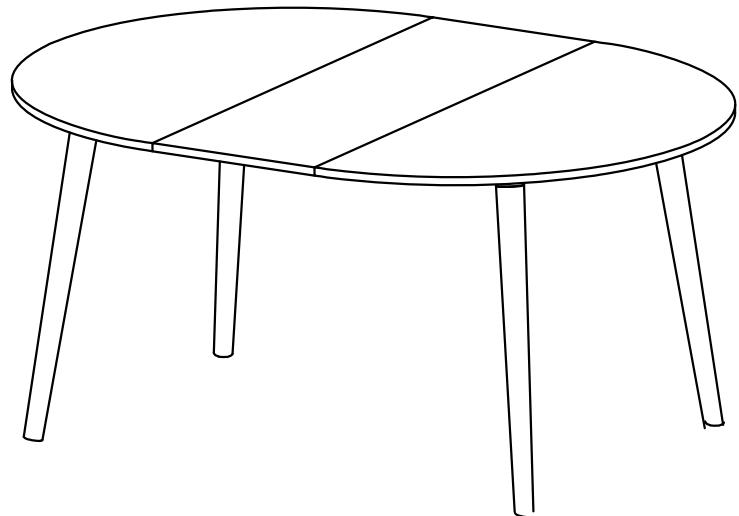


**MAX****180 MN**Number of Packages
2Mounting Surface
6M²

120-160*120*76CM

Maintenance Tips


Wood: Dust regularly with a clean, soft cloth that is free of abrasives and acidic products. Never use solvents.

Required Tools: Screwdriver



Important: Make sure you have received all the parts before starting to assemble your furniture.

A		16	B		1	C		16	D		16	E		2	F		16		
G		16	H		1	I		4	J		4	K		4	L		16	M	

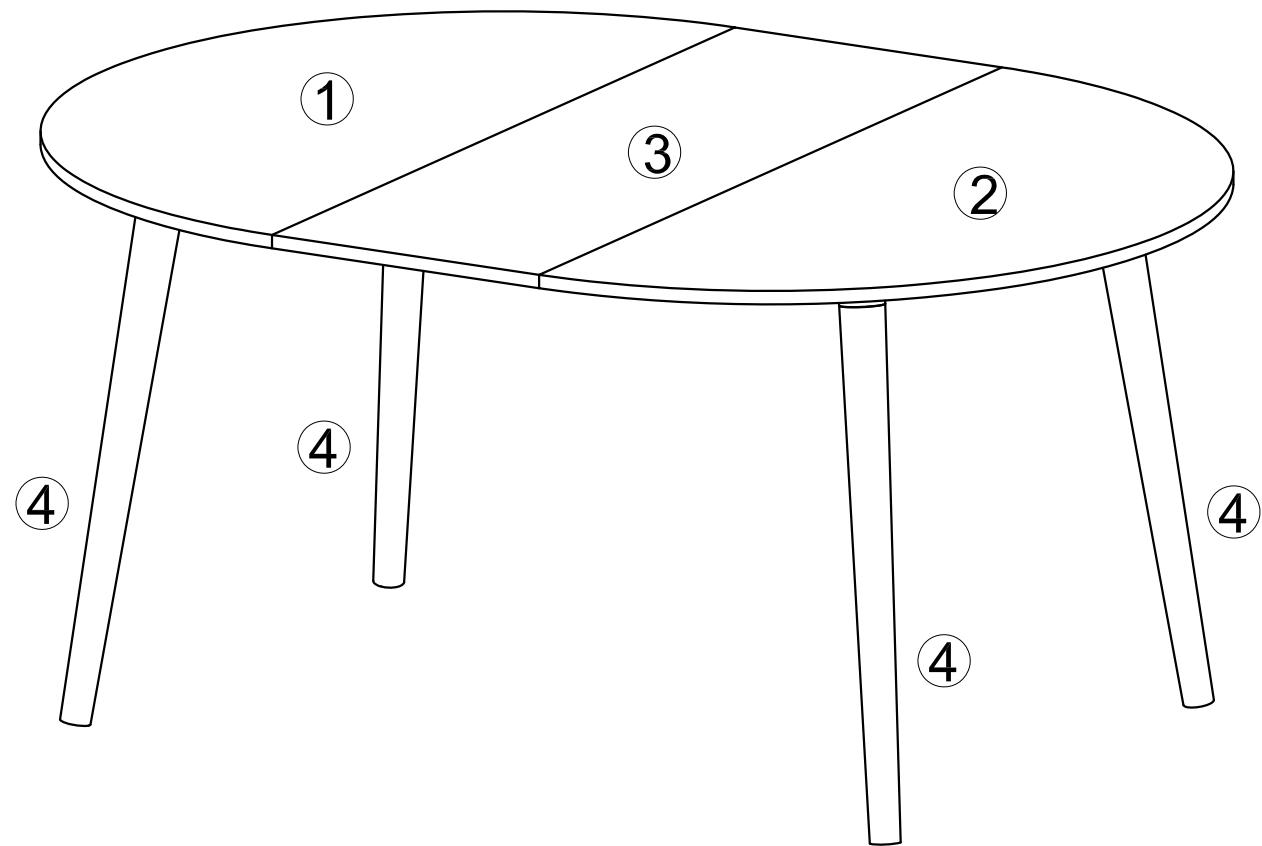

2-1

④		4	742*60*40MM
---	---	---	-------------

2-2

①		1	1200*600*18MM
---	--	---	---------------

②		1	1200*600*18MM
---	--	---	---------------

③		1	1200*400*18MM
---	--	---	---------------


--	--	--	--

--	--	--	--


--	--	--	--

1


Please be sure to follow the positions of parts J and K.

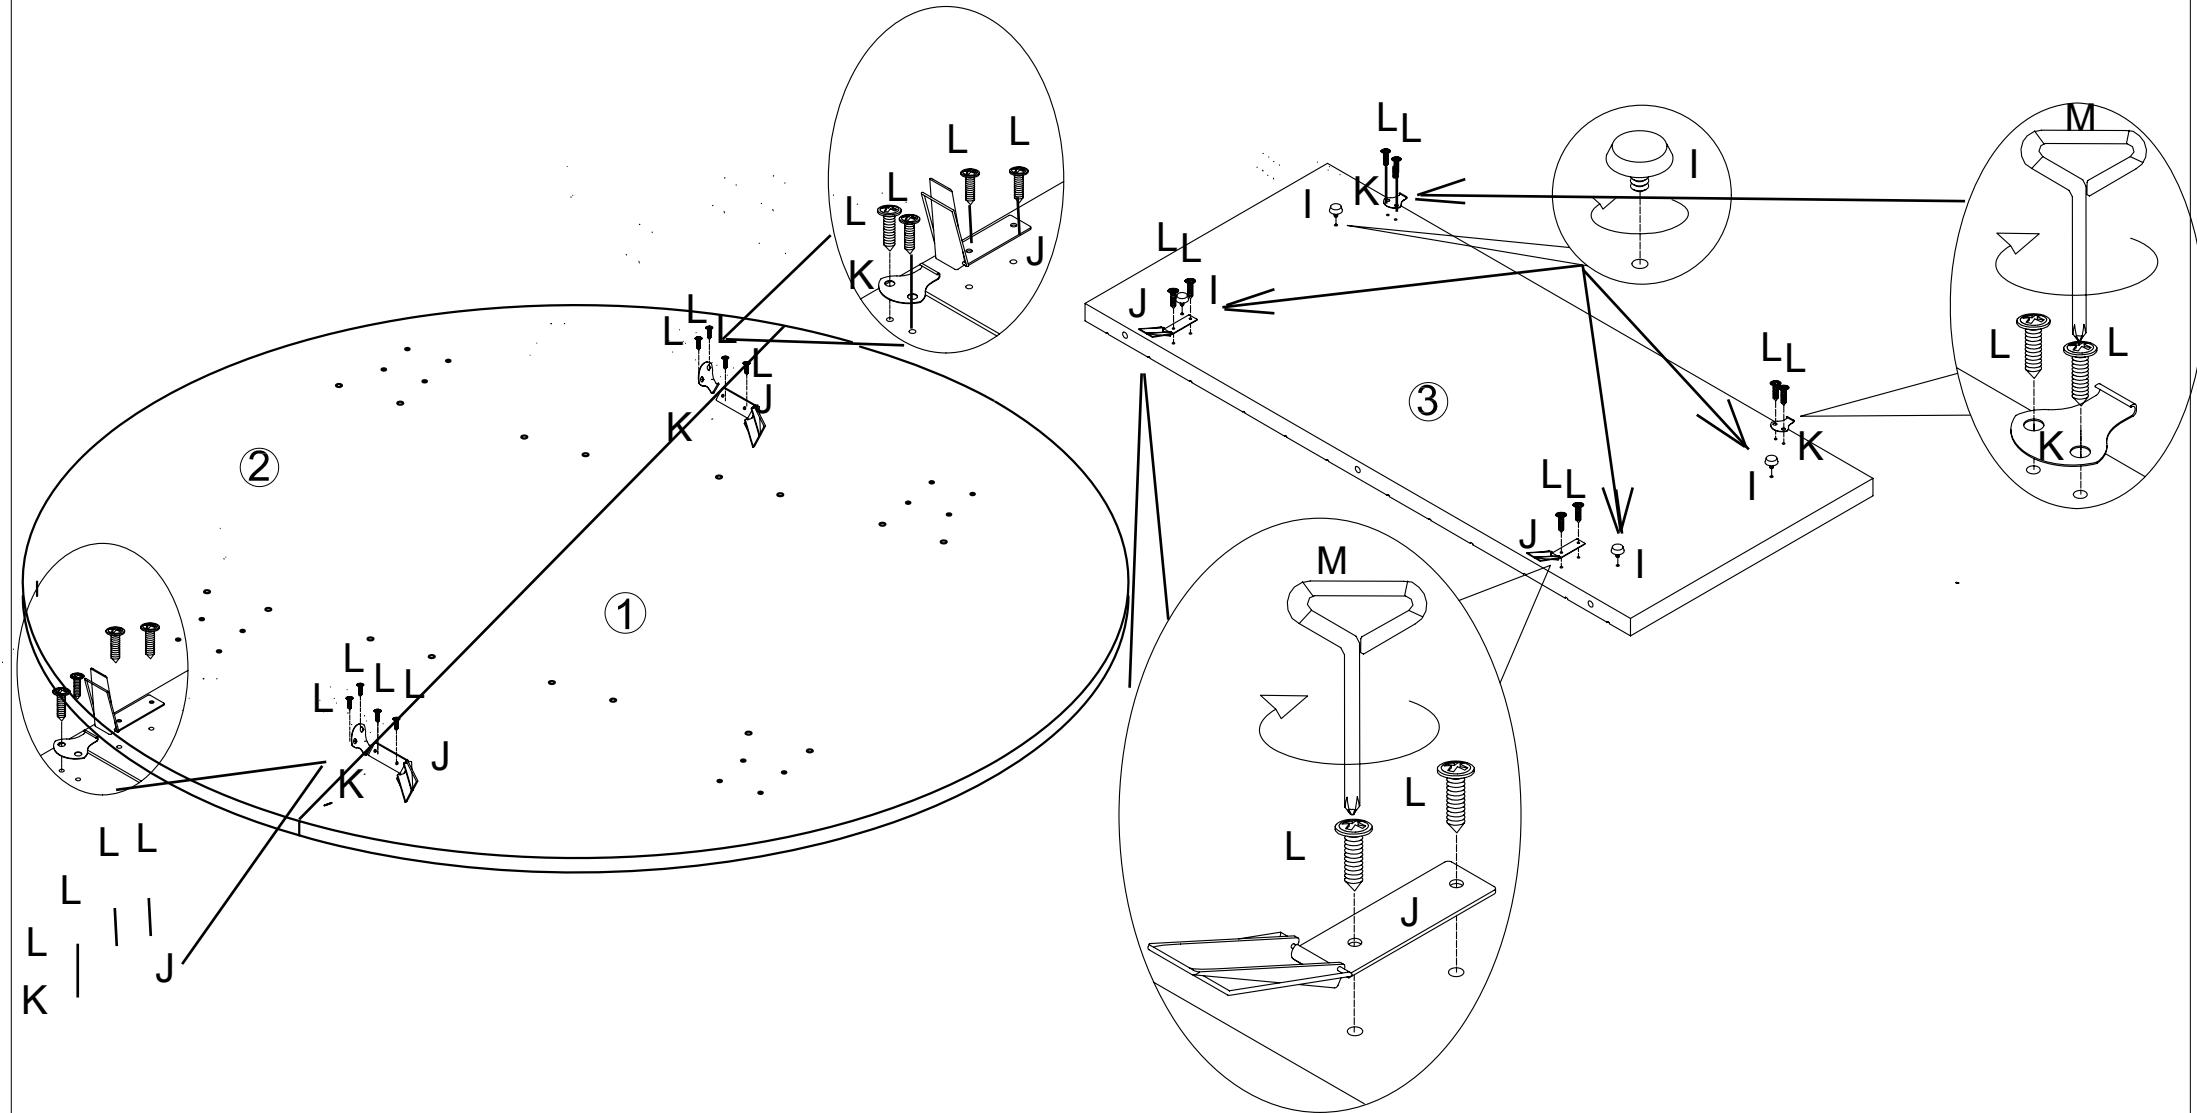

I		4	J		4	K		4	L		$\varnothing 4 \times 16 \text{mm}$	16	M		1	$\varnothing 5 \text{mm}$
---	--	---	---	--	---	---	--	---	---	--	-------------------------------------	----	---	--	---	---------------------------

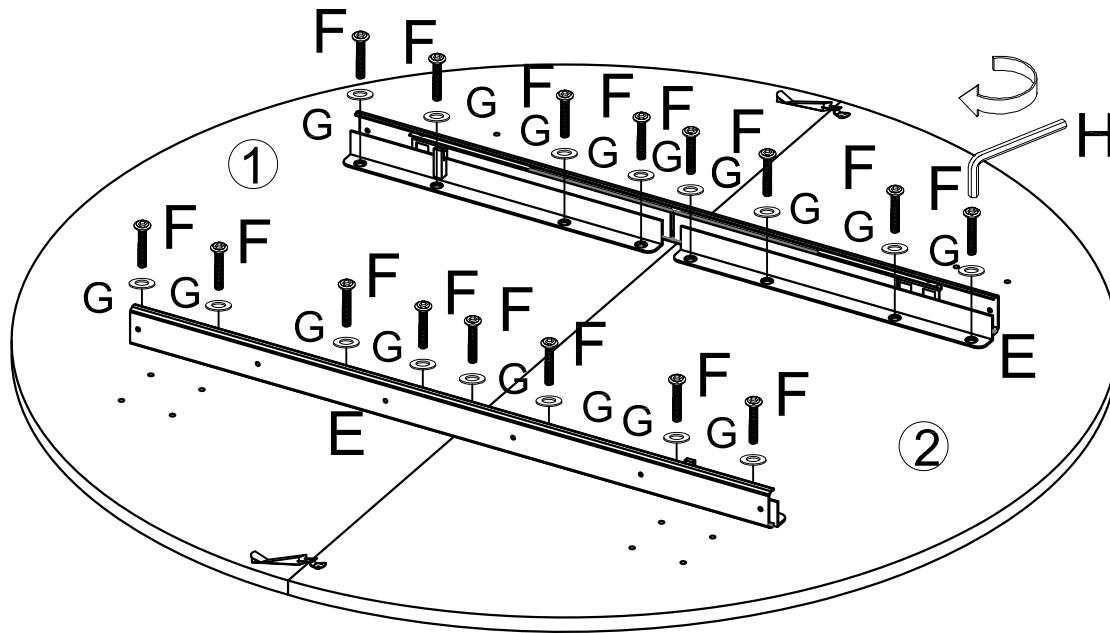


E		2	F		16	G		16	H		1
---	--	---	---	--	----	---	--	----	---	--	---

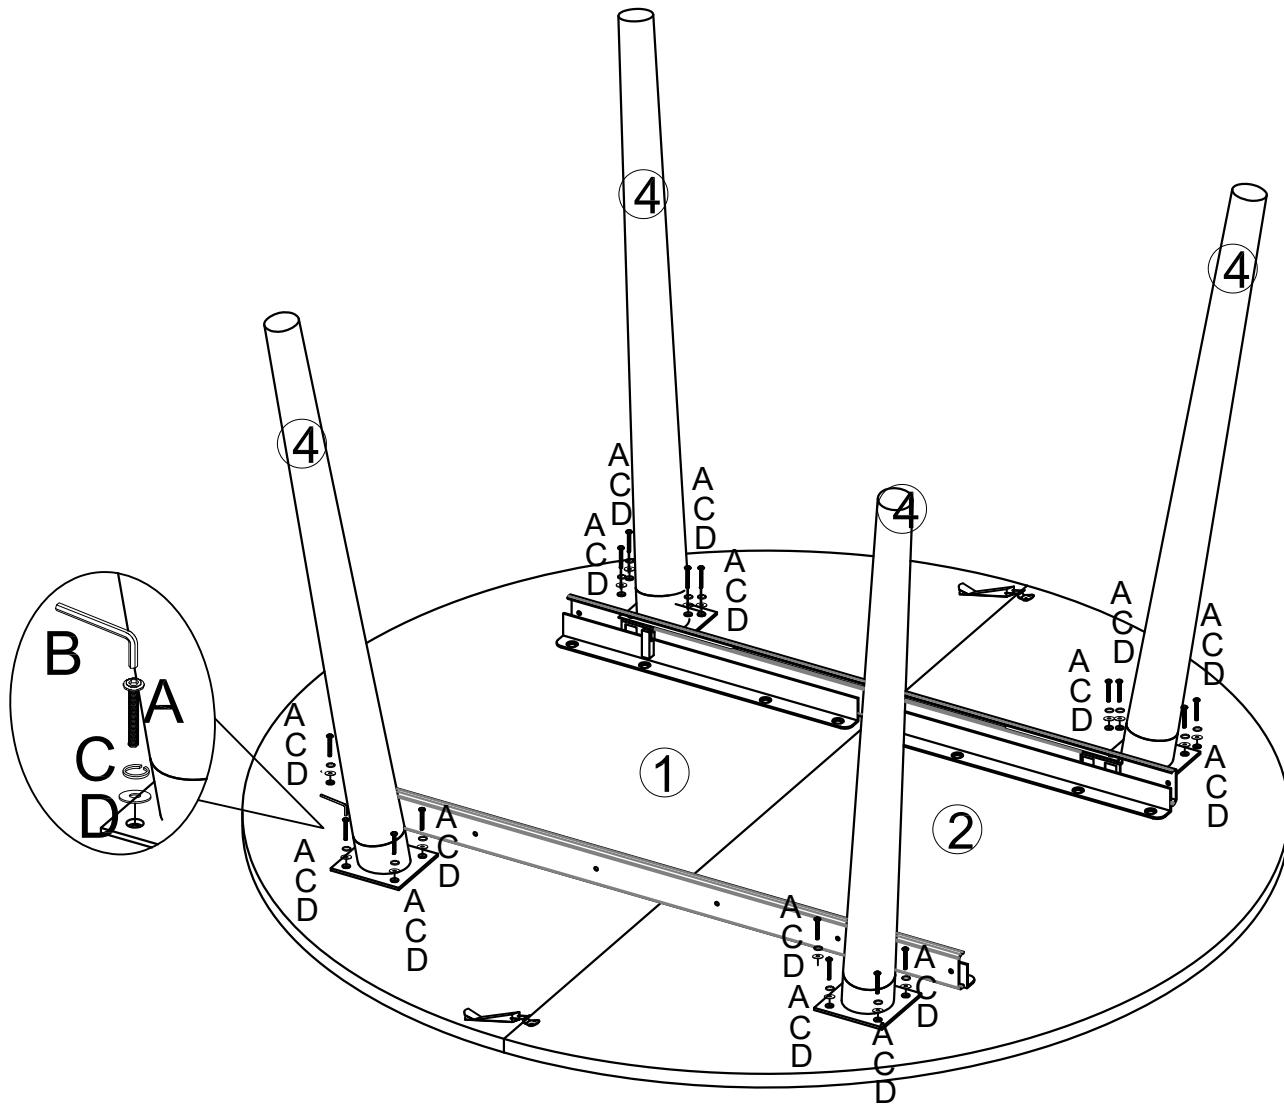

A		16	B		1	C		16	D		16
	M6*16mm			M4mm			$\text{\O}6*13\text{mm}$			$\text{\O}6*17\text{mm}$	

It is important to adjust the height of the extension piece by tightening/loosening screws "I" so that the extension piece is aligned with panels 1 and 2.

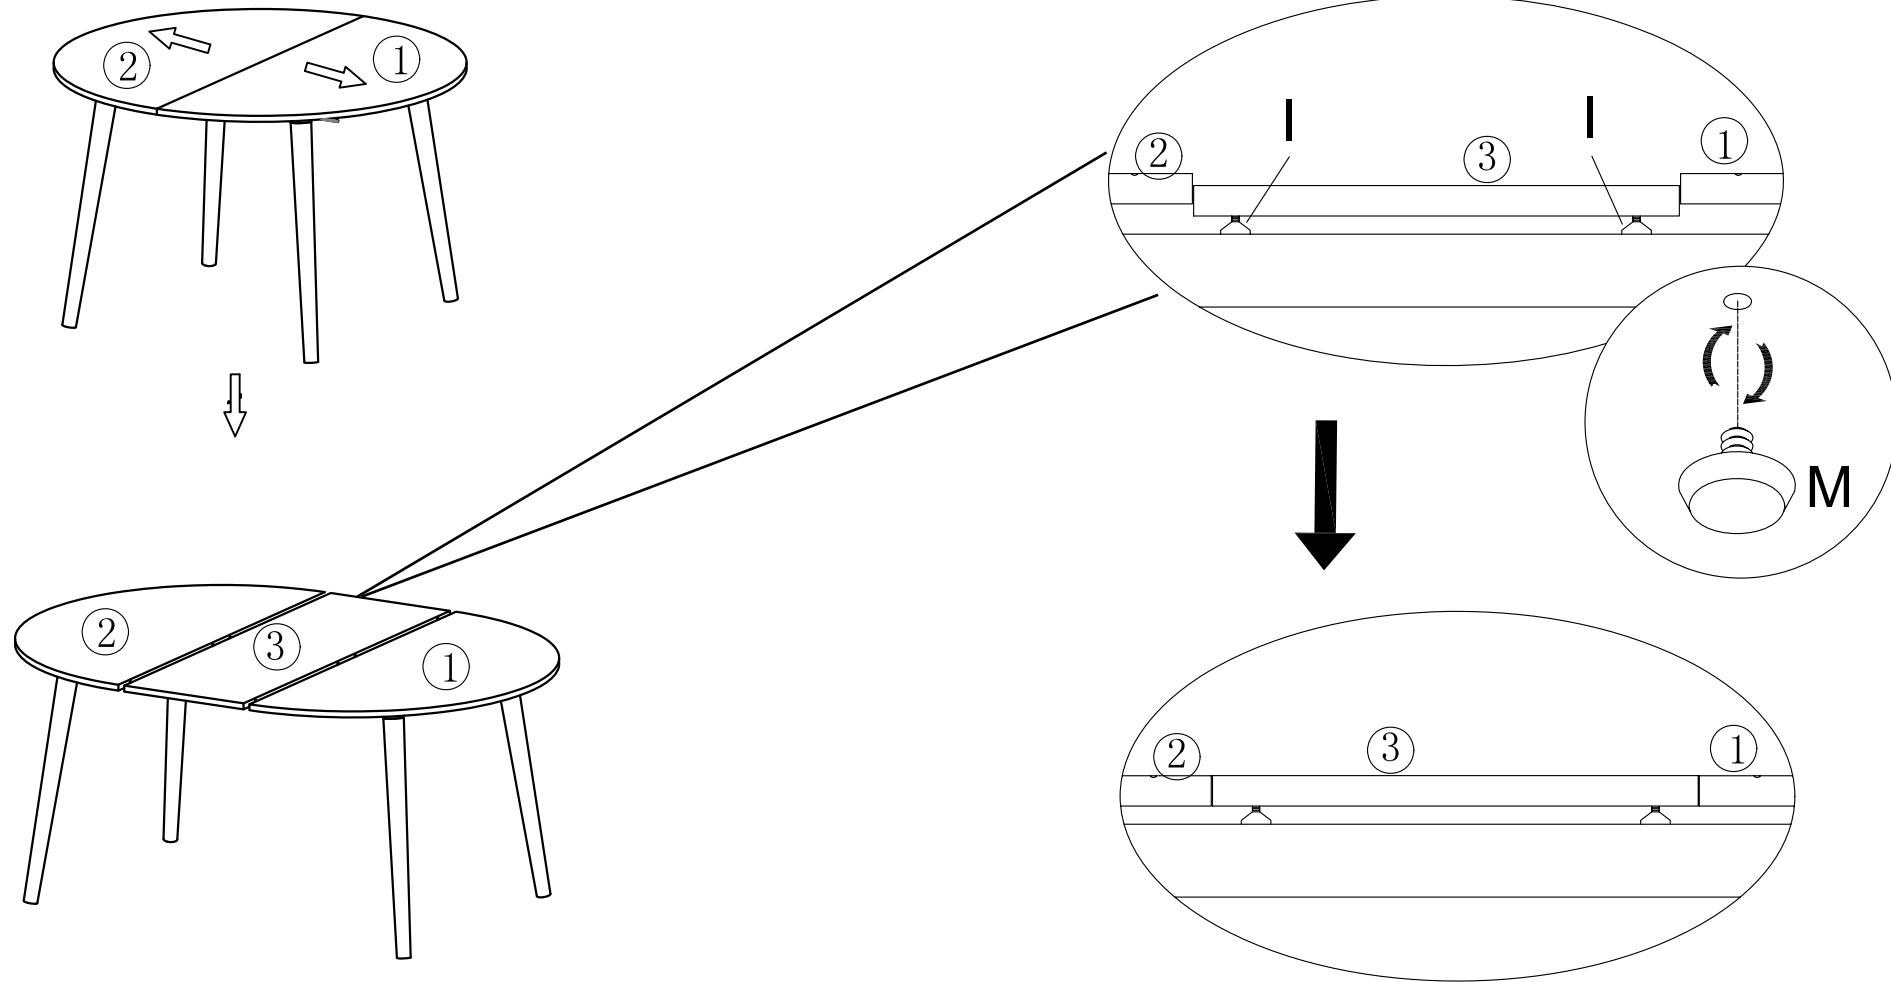

The extension piece must be at the same level as panels 1 and 2.

