



### HARDWARE PACKED LIST IN BOX

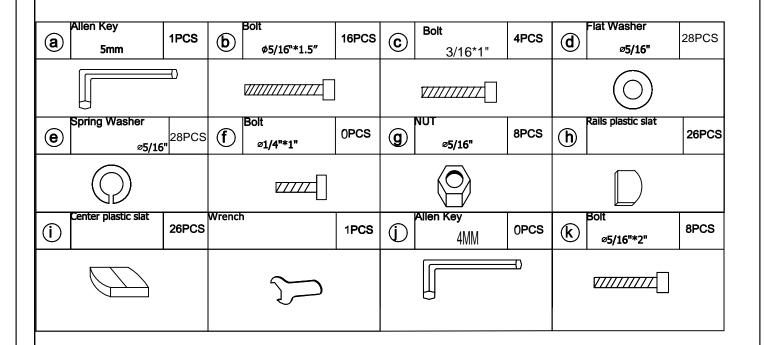


STEP 1

Fasten (J) to bottom of footboard (H) with screw(c).

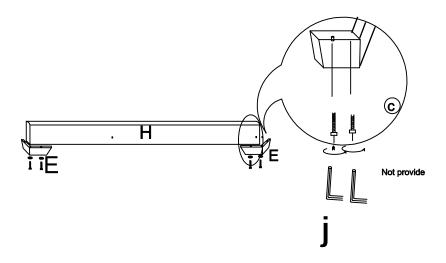


#### STEP2

Bolts to use for side rails, should already come pre-inserted on the HB. Place bolt (b), washers (e, d) and fasten to Headboard with preinstalled hardware, Repeat step 2 for Footboard. Do not tighten until step 3.

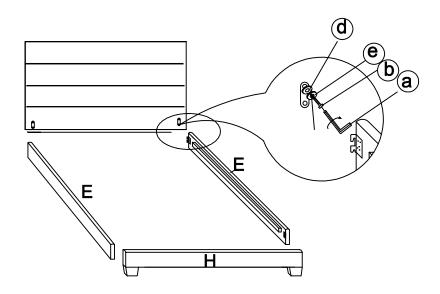


### STEP3

Attach siderail (E) to headboard (G) and footboard (H) using bolt (b) and allen key (a) as shown in diagram. Do not tighten bolts completely until assembly is completed.

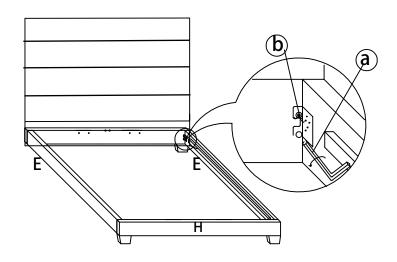


### STEP4

Attach center support (F) to headboard (G) by using bolt ( b ) through washers (e , d ) as shown in diagram.

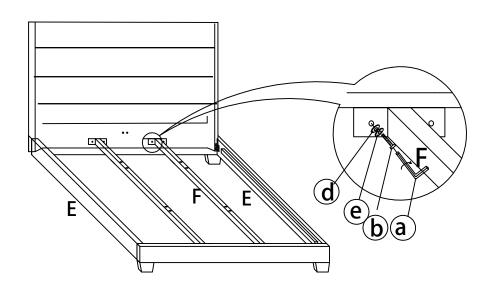


### STEP5

Attach leg support (K) to center support bar (F) by using bolt (k), washers(e, d), nut (g), and tighten the nut(g) by wrench.

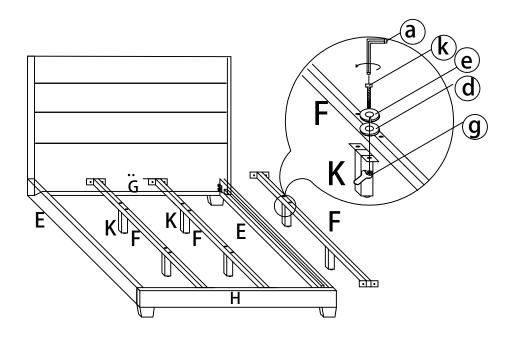


### STEP6

Insert center plastic slot (i) into holes on center support bar (F). Press firmly into place as shown in diagram. Attach rail plastic slat (h) using same procedure.

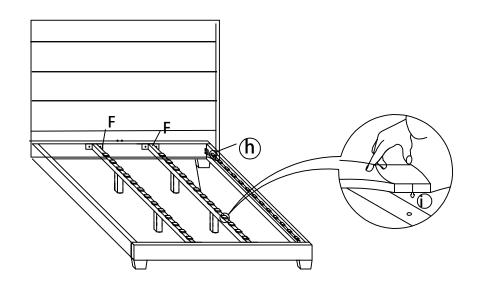

### STEP7

Insert small slat ( I ) into plastic slats ( h , i ) as shown in diagram. Attach long slat (L) to Siderail (E) with bolt f as shown.

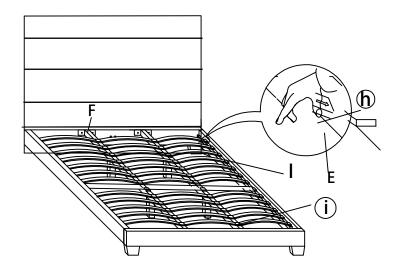

STEP 8 Assembly is complete.

