


ASSEMBLY INSTRUCTION

ITEM#:212919

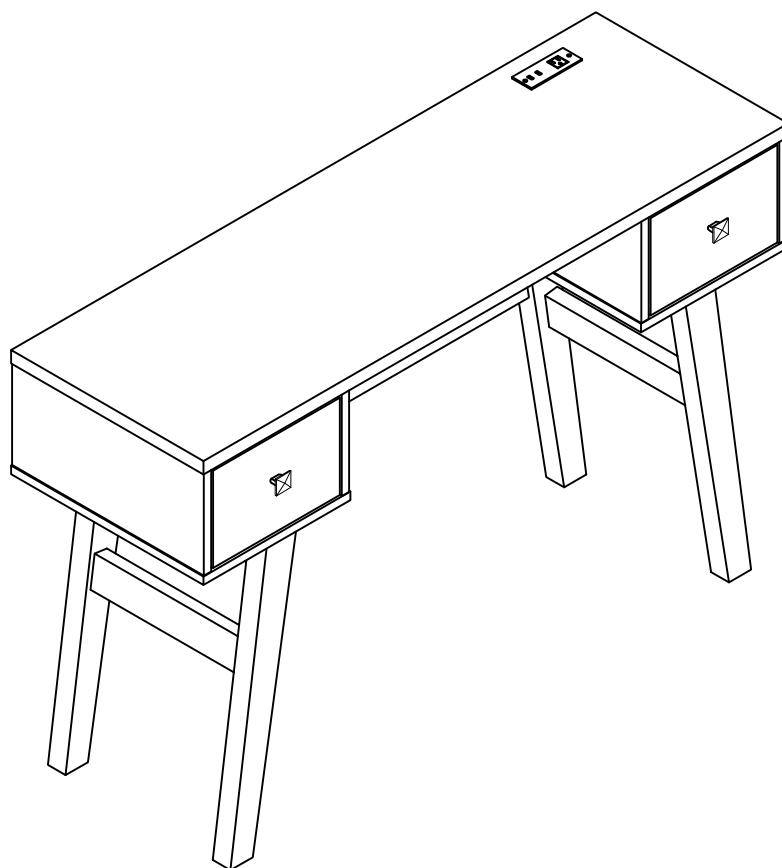

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#:212919

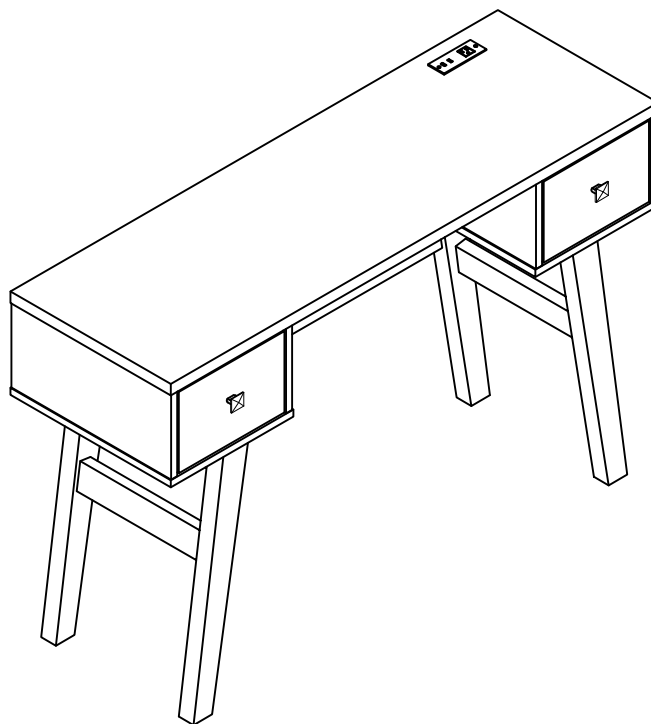

PARTS IDENTIFICATION








ITEM#:212919

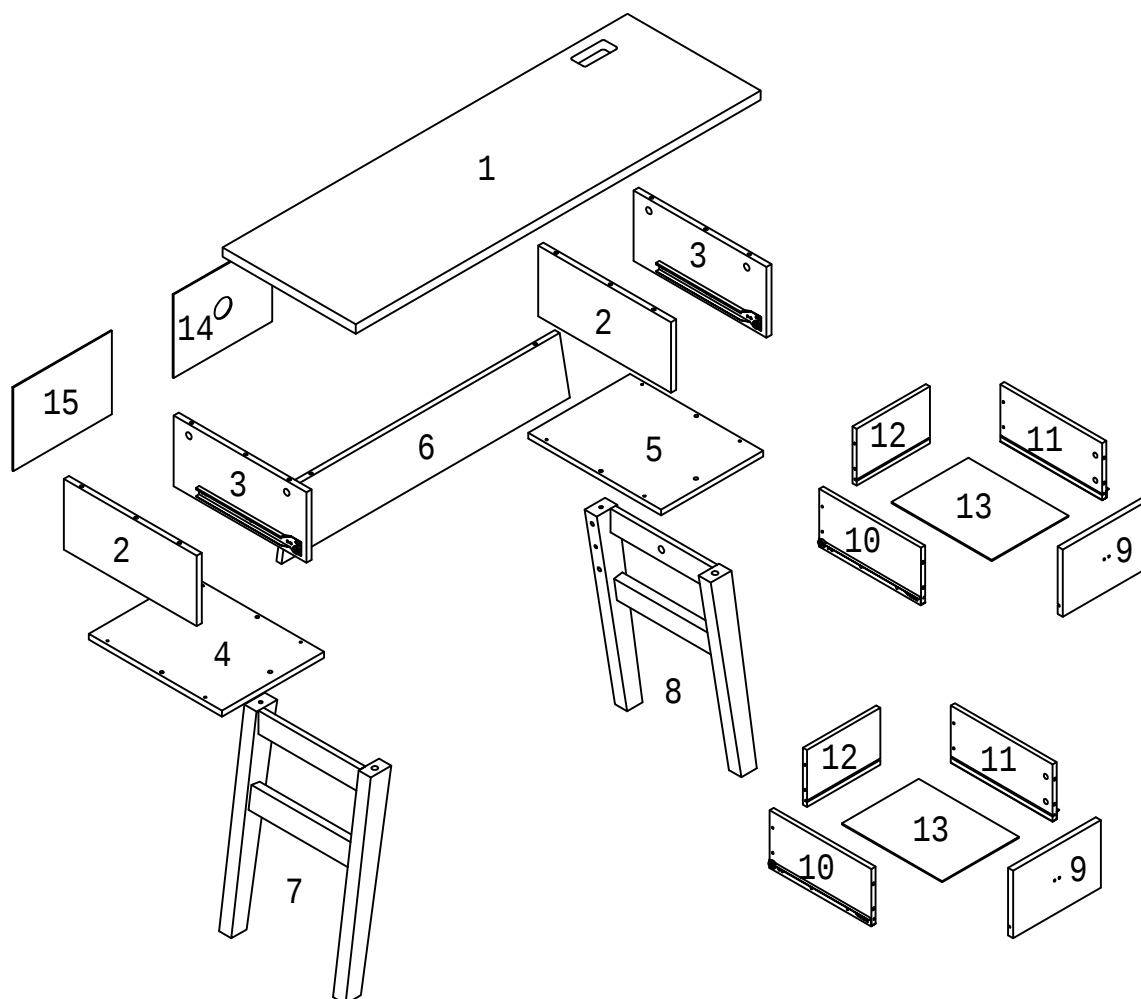

(1)	1pc	(7)	1pc	(13)	2pcs
(2)	2pcs	(8)	1pc	(14)	1pc
(3)	2pcs	(9)	2pcs	(15)	1pc
(4)	1pc	(10)	2pcs		
(5)	1pc	(11)	2pcs		
(6)	1pc	(12)	2pcs		


HARDWARE IDENTIFICATION

ITEM#:212919

A		L29	16pcs
B		Ø15	16pcs
C		Ø8x25	12pcs
D		Ø22	2pcs
E		Ø4x40	4pcs
F		M8x30	2pcs
G		Ø8xØ16x2	2pcs
H		M5	1pc
I			24pcs
J		Ø16	4pcs
K		Ø4x30	8pcs
L		L20	8pcs
M		Ø12	8pcs
N		30x30x23	2pcs
O		Ø4x22	4pcs
P		125x48x43	1pc
Q			2pcs
R		197x5x1	1pc
S		Ø8x40	1pc
T		12x12x1	2pcs
U		Ø5x40	1pc
V		Ø4x25	1pc


ASSEMBLY INSTRUCTION

ITEM#:212919

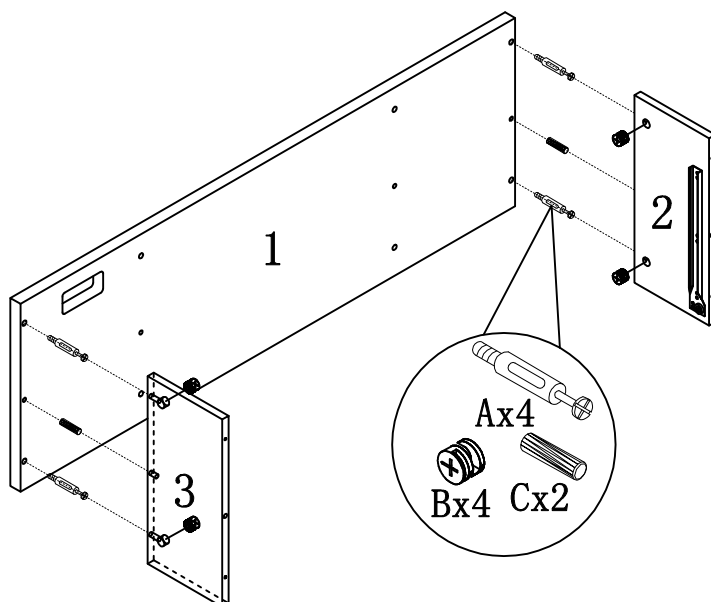


STEP1

STEP2

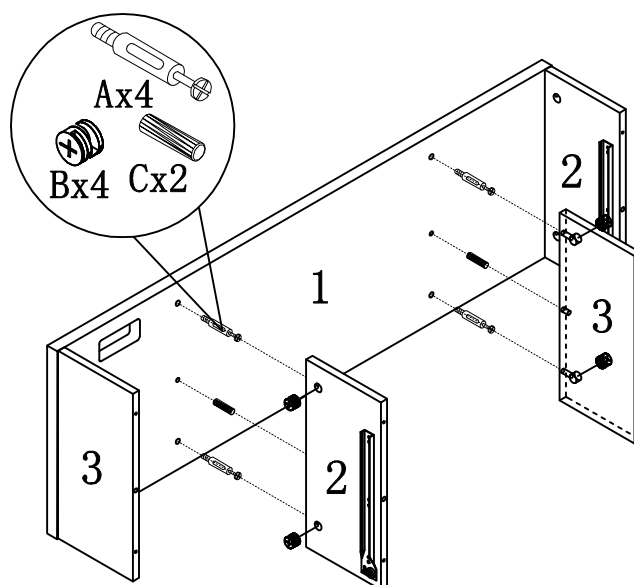


ASSEMBLY INSTRUCTION

ITEM#:212919

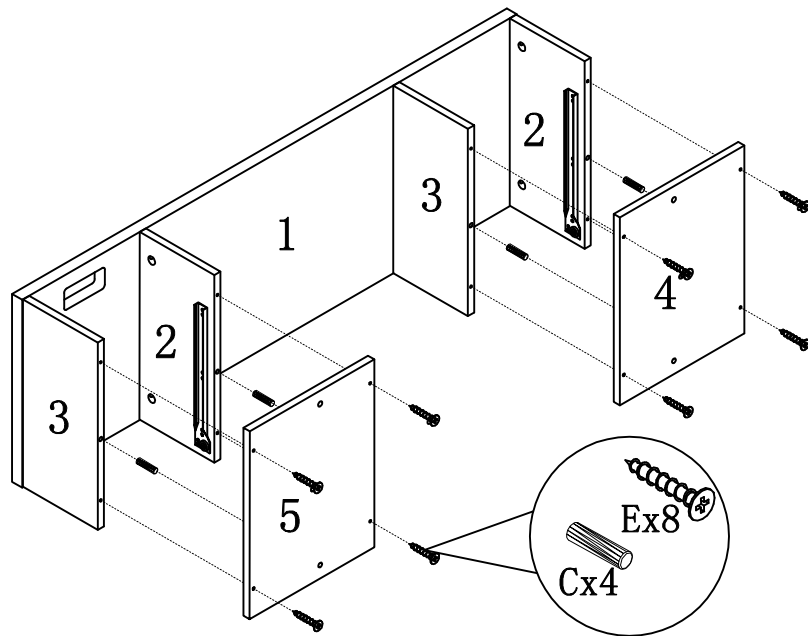


STEP3

STEP4

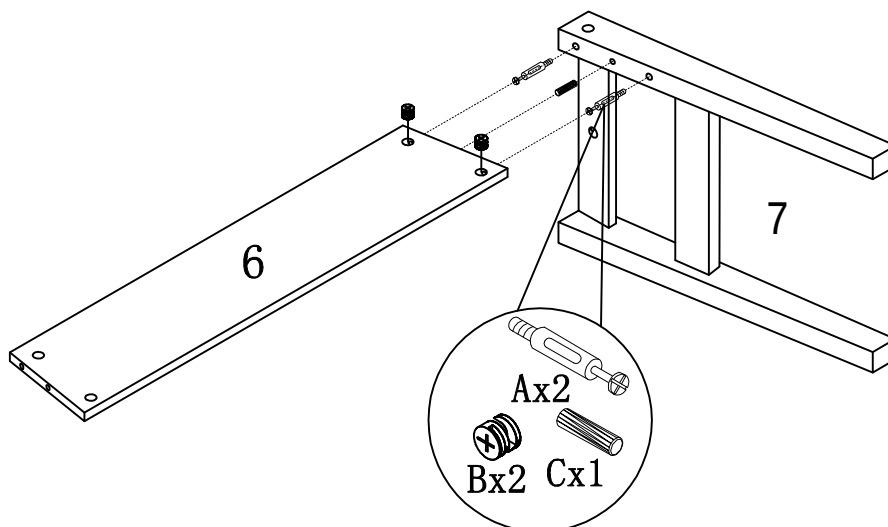


ASSEMBLY INSTRUCTION

ITEM#:212919

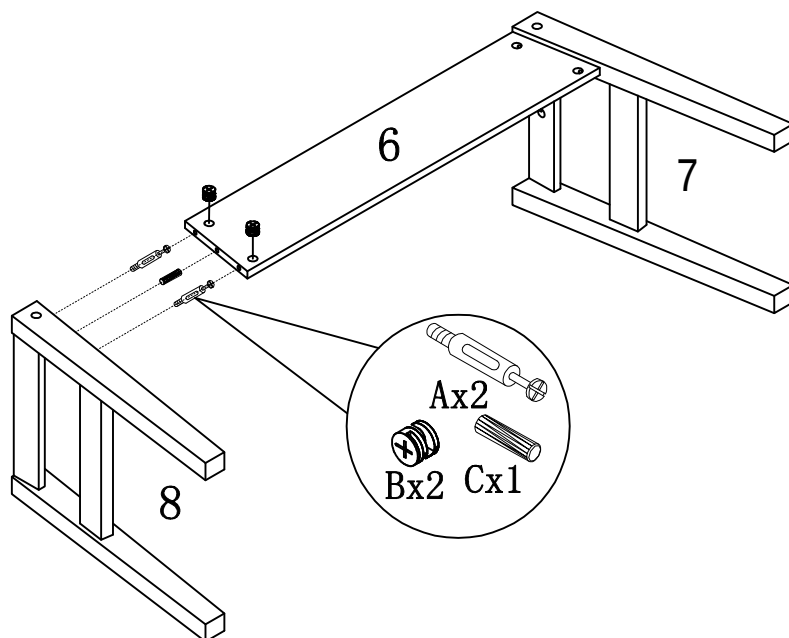


STEP5

STEP6

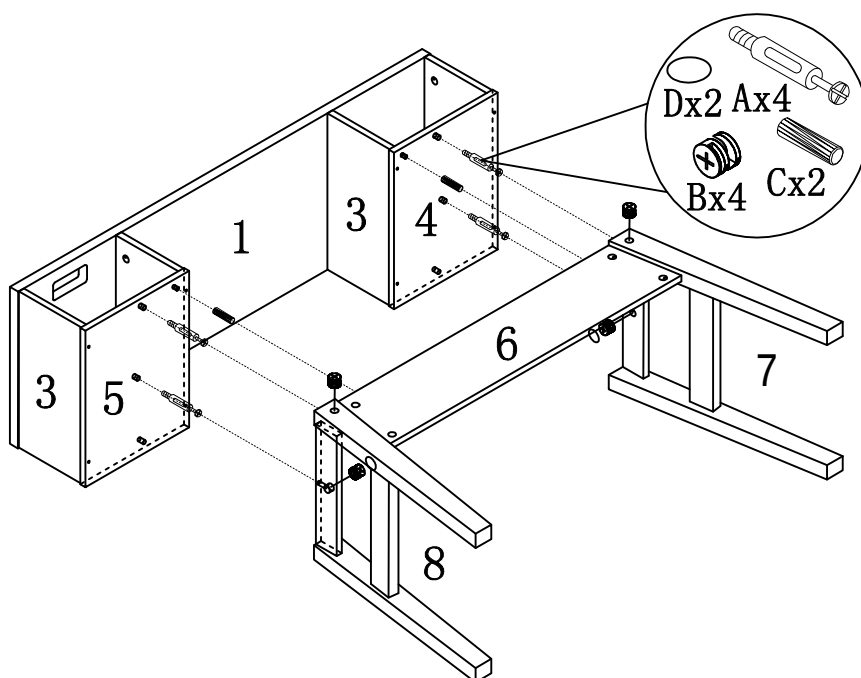


ASSEMBLY INSTRUCTION

ITEM#:212919

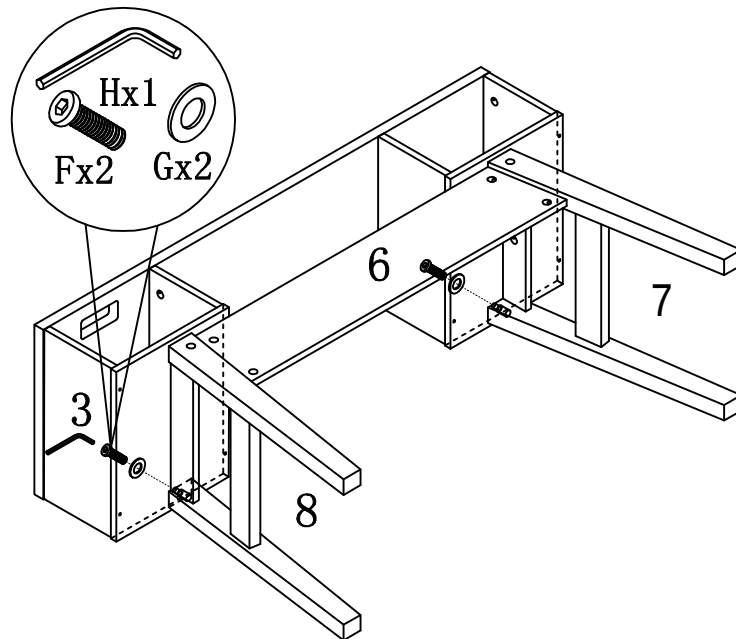


STEP7

STEP8

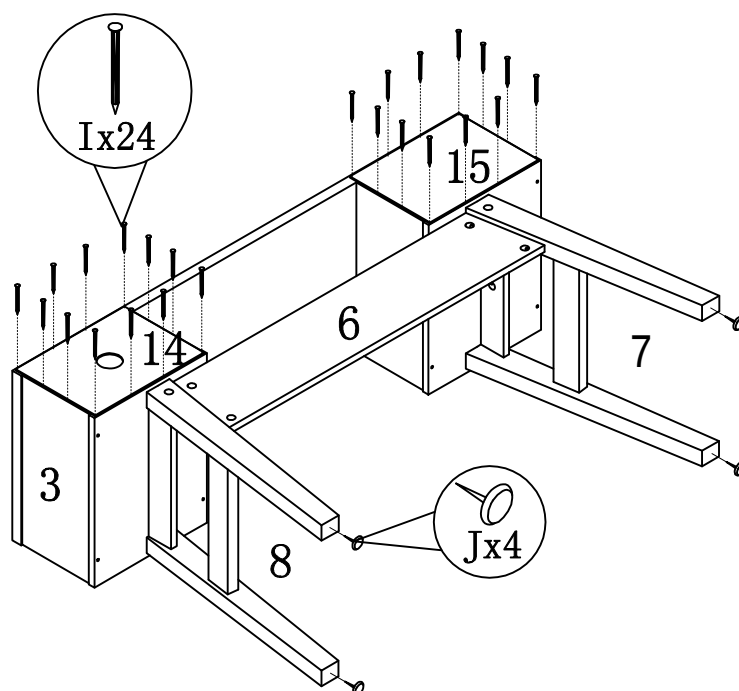


ASSEMBLY INSTRUCTION

ITEM#:212919

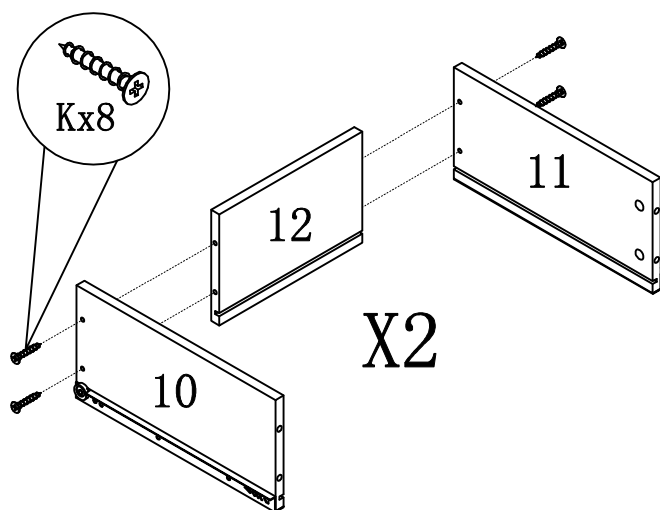


STEP9

STEP10

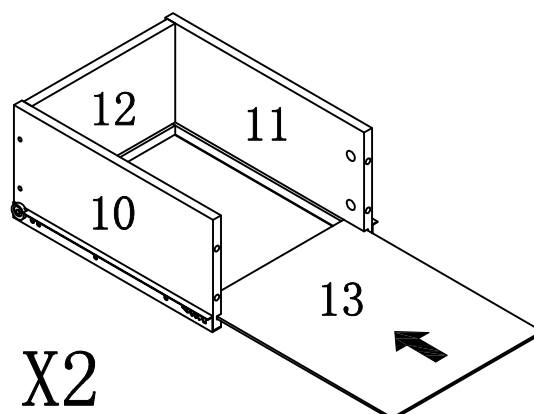


ASSEMBLY INSTRUCTION

ITEM#:212919

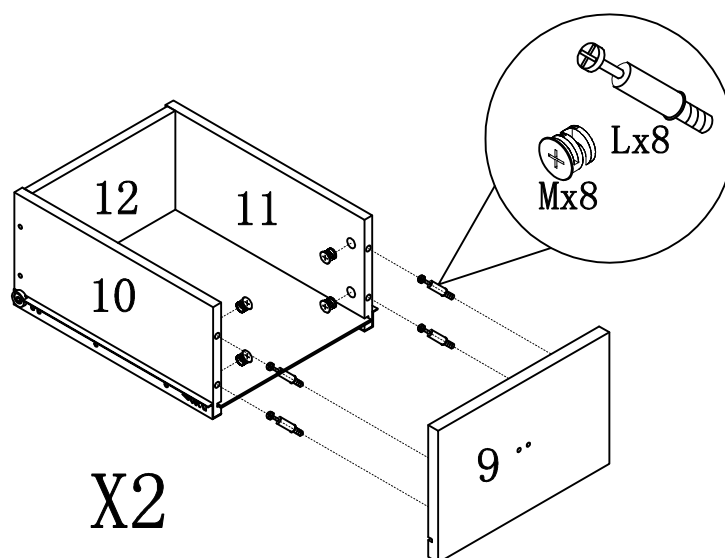


STEP11

STEP12

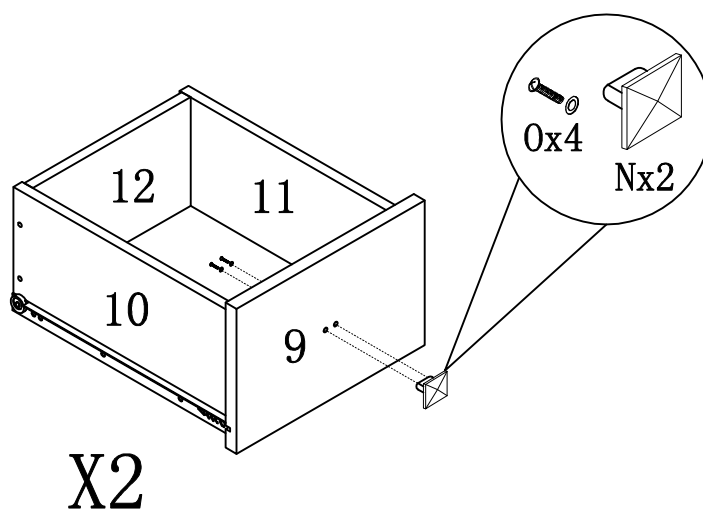


ASSEMBLY INSTRUCTION

ITEM#:212919

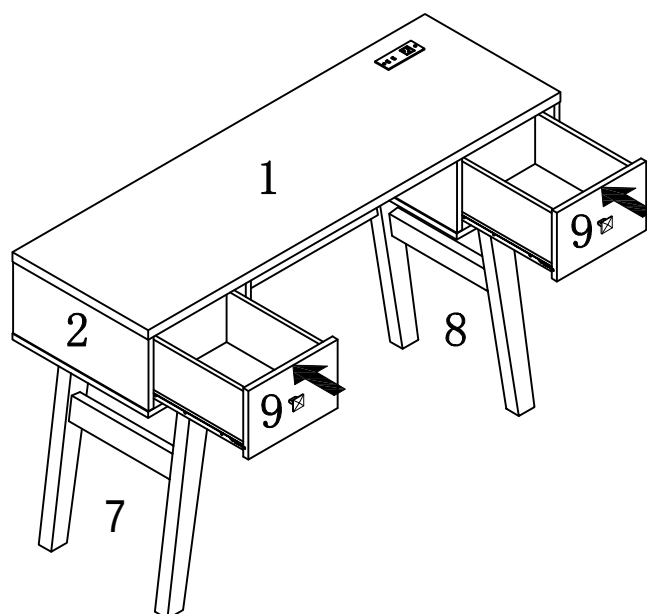


STEP13

STEP14

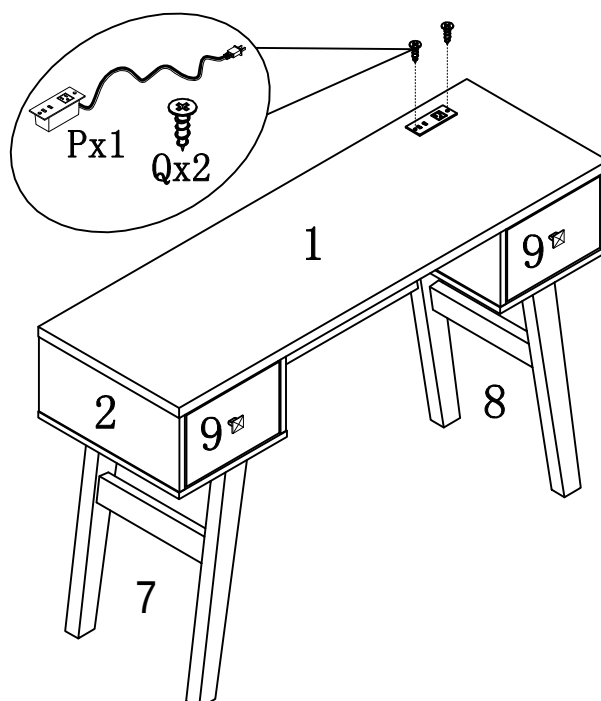


ANTI-TIPPING STRAP INSTRUCTION


HARDWARE (INCLUDED) :



DRYWALL ANCHOR $\phi 8 \times 40$ X 1PC



METAL BRACKETS $12 \times 12 \times 1$ X 2PCS



DRYWALL SCREW $\phi 5 \times 40$ X 1PC




STRAP $197 \times 5 \times 1$ X 1PC



FLATHEAD SCREW $\phi 4 \times 25$ X 1PC

TOOLS NEEDED (NOT INCLUDED) :




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

STEP 1

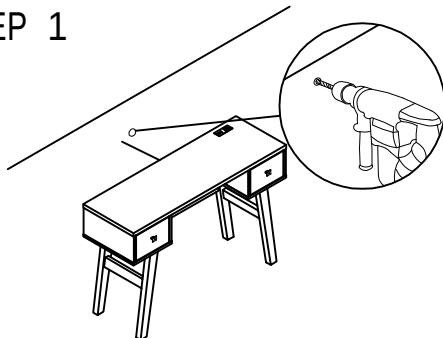


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor, drill hole into drywall.

STEP 2

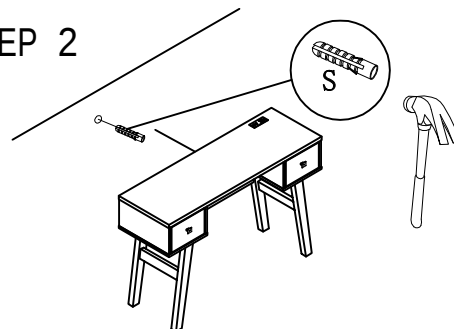


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly. If hole is too small, drill again to increase hole size. Do not force anchor into wall.

STEP 3

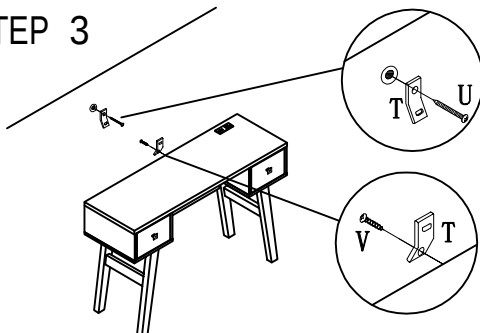

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.


STEP 4

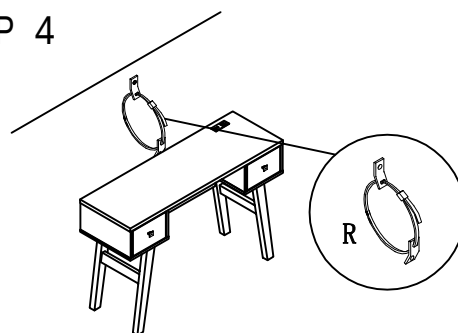

1. Insert strap thru bracket attached to wall, then thru bracket on item, and into head of strap.
 2. pull lightly til strap stops.
- Assembly is complete.

ASSEMBLY INSTRUCTION

ITEM#:212855 212919 212920

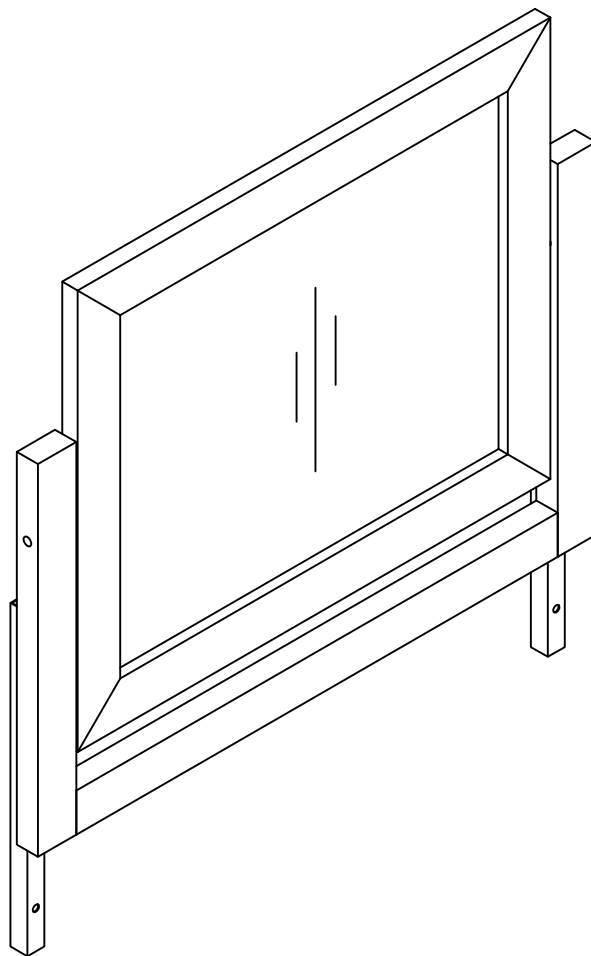

ASSEMBLY INSTRUCTION


PLEASE READ BEFORE ASSEMBLING!

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Read manual before assembling, it helps!

ITEM#:212855 212919 212920

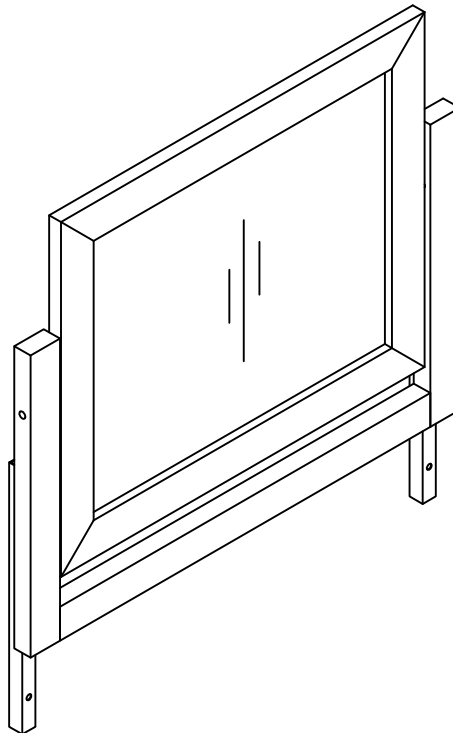

PARTS IDENTIFICATION


ITEM#:212855 212919 212920

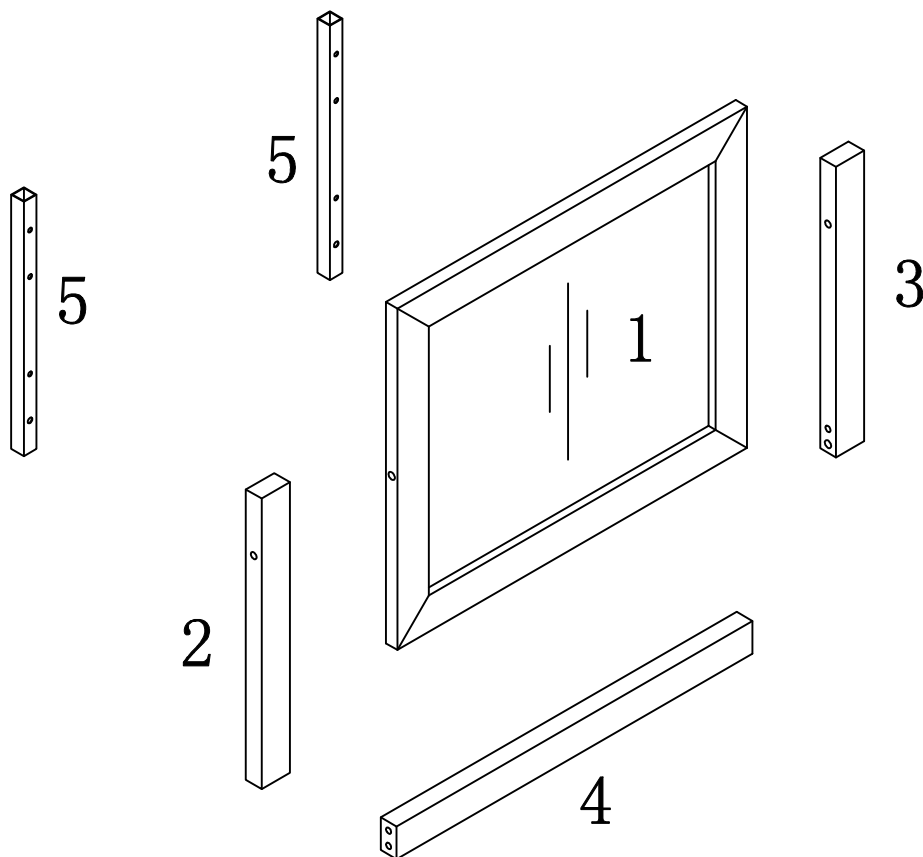

- | | |
|-----|------|
| (1) | 1pc |
| (2) | 1pc |
| (3) | 1pc |
| (4) | 1pc |
| (5) | 2pcs |


HARDWARE IDENTIFICATION

ITEM#:212855 212919 212920

A		L29	2pcs
B		Ø15	2pcs
C		Ø8x25	2pcs
D		Ø8x85	2pcs
E		Ø4x30	8pcs


ASSEMBLY INSTRUCTION

ITEM#:212855 212919 212920

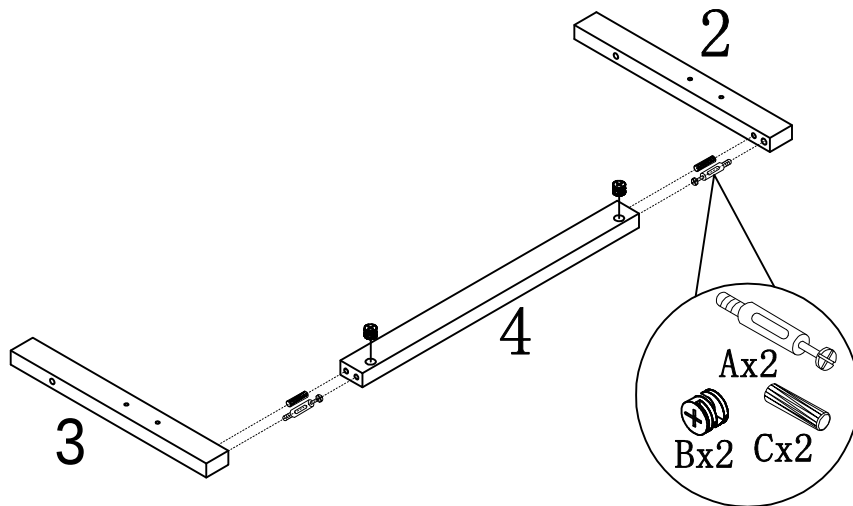


STEP1

STEP2

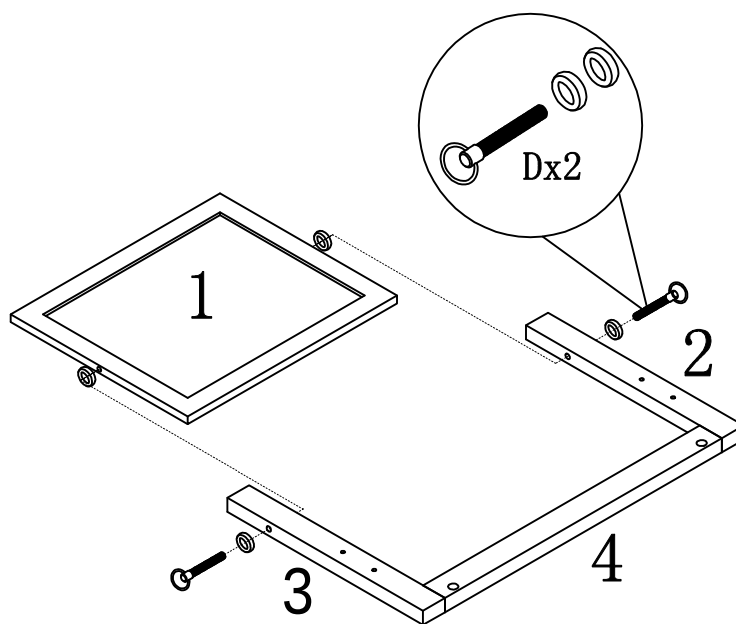

ASSEMBLY INSTRUCTION

ITEM#:212855 212919 212920

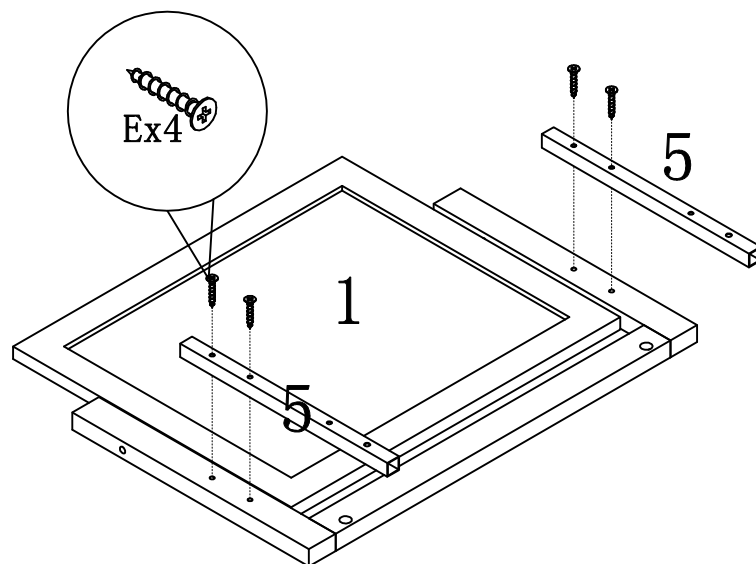

STEP3

STEP4

